

# cecotec

## TitanMill 300 DuoClean

Molinillo de café y especias /

Coffee and spices grinder



Manual de instrucciones  
Instruction manual  
Manuel d'instructions  
Bedienungsanleitung  
Manuale di istruzioni  
Manual de instruções




## INDEX

1. Parts and components	/ 04
2. Safety instructions	/ 10
3. Before use	/ 11
4. Operation	/ 11
5. Cleaning and maintenance	/ 11
6. Technical specifications	/ 12
7. Disposal of old electrical appliances	/ 12
8. Technical support service and warranty	/ 12

# 1. PIEZAS Y COMPONENTES

Parts and components/Pièces et composants/Ersatzteile und Komponenten/  
Parti e componenti/Peças e componentes

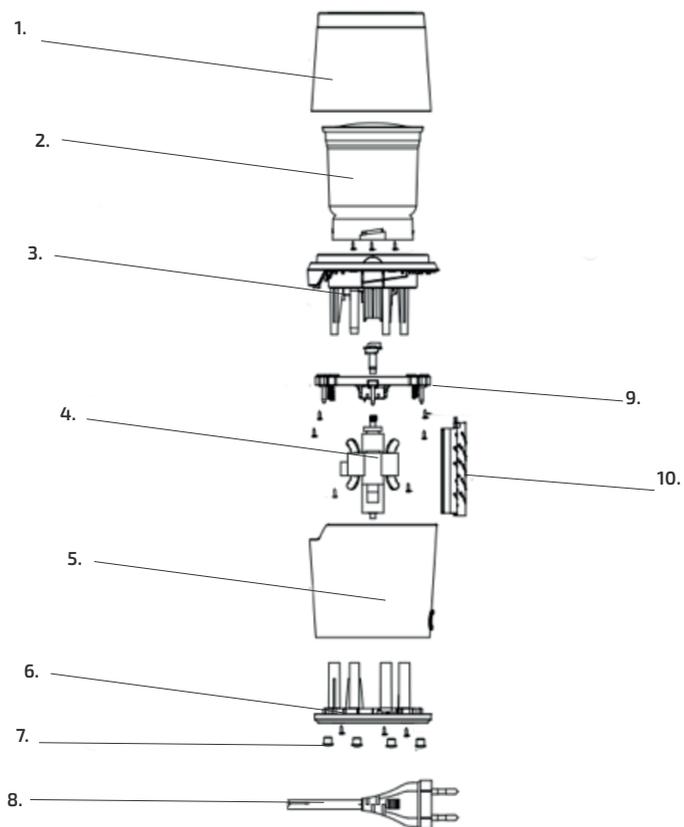

**EN**

1. Lid
2. Container
3. Top body
4. Motor
5. Body
6. Base
7. Rubber feet
8. Power cord
9. Shaft and blades
10. Cord storage

## 2. SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the appliance. Keep this instruction manual for future reference or new users.

- Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that the wall outlet is grounded.
- This appliance is intended for household use only. Do not use outdoors.
- Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the official Technical Support Service of Cecotec in order to avoid any type of danger.
- Do not twist, bend, strain, or damage the power cord in any way. Protect it from sharp edges and heat sources. Do not let it touch hot surfaces. Do not let the cord hang over the edge of the working surface or countertop.
- Do not immerse the cord, plug, or any non-removable part of the appliance in water or any other liquid, nor expose the electrical connections to water. Make sure your hands are dry before handling the plug or switching on the appliance.
- The blades inside the product are very sharp, handle them carefully.
- Do not leave the appliance unattended while in use.
- Always turn off and disconnect the appliance from the power supply before assembling, disassembling, cleaning it or if it is not going to be used for a long period of time. Pull from the plug and not the cord to disconnect it.
- Do not use accessories not provided or suggested by Cecotec, as these could cause damage to the product or result in risk.
- Do not connect the appliance to the power supply unless it is totally and safely assembled.
- Do not exceed the MAX mark.
- This appliance is only suitable for dry, brittle foods. Do not grind oil seeds (e.g. peanuts) or hard foodstuffs (e.g. rice).
- The maximum continued-operation time is 10 seconds, do not exceed it. Allow the appliance to rest 10 seconds and cool down between different uses.
- The appliance is not intended to be used by children under the age of 8. It can be used by children over the age of 8, as long as they are given continuous supervision.
- This appliance can be used by children aged 8 and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, as long as they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Supervise young children to make sure that they do not play with the appliance. Close supervision is necessary when the appliance is being used by or near children.



### 3. BEFORE USE

1. Take the product out of the box and remove all packaging materials.
2. Make sure all the parts and accessories are present and that there are no visible signs of damage. If there are, contact immediately the Technical Support Service of Cecotec.
3. Place the appliance on a flat, stable and dry surface.

### 4. OPERATION

1. Turn the grinder's lid anticlockwise and pull it up to remove it.
  2. Pour the desired amount of coffee beans into the container.
  3. Close the lid again by turning it clockwise and make sure it is safely closed.
- NOTE:** the product includes a safety systems which does not allow the device to operate unless the lid is completely closed.
4. Take the necessary wire out and connect the device to a power supply.
  5. Press the lid down to activate the grinding function and hold it down until the desired level of grinding is obtained.
  6. Unplug the appliance and pour the ground coffee into a different container.

#### TIPS:

- Always keep the lid of coffee bean container hermetically closed in order to preserve the coffee beans aroma.
- Only grind the necessary amount of coffee at a time.
- Never overfill the bean container.
- As per general indications, consider one tablespoon of beans per cup (e.g. 4 spoons of coffee beans for 4 cups). Naturally, optimal amounts, defined on the basis of personal taste, will be identified with time.
- Coffee grounds left in your grinder can become stale and affect the taste of future coffees. To avoid this, clean the product and its parts after each use.

### 5. CLEANING AND MAINTENANCE

- Always turn off and unplug the appliance after each use and before cleaning.
- Always remove ground coffee residues with a brush.
- Do not immerse into water.
- To remove residue or aromas left behind by previously ground products, grind one tablespoon of baking soda in the bowl and then wipe it thoroughly.
- Use a dampened, soft cloth to clean the product's outside surface.

- Store the cord not being used by pushing it little by little into the cord storage area in the base of the unit.

## 6. TECHNICAL SPECIFICATIONS

Model: TitanMill 300 DuoClean

Product reference: 01559

300 W, 220-240 V, 50/60 Hz

Made in China | Designed in Spain

## 7. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly. If the product has a built-in battery or uses batteries, they should be removed from the appliance and disposed of appropriately.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

## 8. TECHNICAL SUPPORT SERVICE AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

- The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.
- The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.
- Faults deriving from the normal wear and tear of its parts, due to use.
- The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the



warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at **+34 963 210 728**.



[www.cecotec.es](http://www.cecotec.es)

Grupo Cecotec Innovaciones S. L.  
C/de la Pinadeta s/n, 46930  
Quart de Poblet, Valencia, Spain