

cecotec

PerfectCountry BBQ

Barbacoa eléctrica/ Electric barbecue/ Электрический гриль-барбекю на ножках

/Гриль-барбекю электрический




Manual de instrucciones
Instruction manual
Інструкція з експлуатації
Руководство по
эксплуатации

INDEX

1. Parts and components	04
2. Safety instructions	13
3. Before use	15
4. Product assembly	15
5. Operation	16
6. Cleaning and maintenance	17
7. Technical specifications	18
8. Disposal of old electrical appliances	18
9. Technical support service and warranty	18

1. PIEZAS Y COMPONENTES

Parts and components/Компоненти пристрою

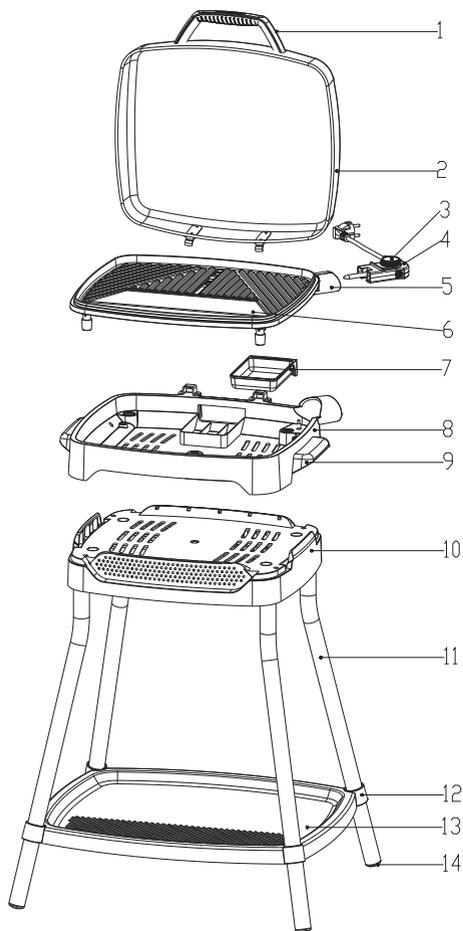

EN

1. Cover handle
2. Foldable grill cover
3. Detachable temperature regulator
4. Temperature indicator light
5. Connector
6. Grill plate
7. Fat drip tray
8. Grill holder
9. Grill holder handle
10. Grill unit bracket
11. Support tube
12. Food tray holder
13. Food tray
14. Support feet

2. SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the appliance. Keep this instruction manual for future reference or new users.

- Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that the wall outlet is grounded.
- This product is designed for household use only, do not use it for commercial purposes.
- Place the appliance on a dry, stable, flat, heat-resistant surface. Avoid placing it close to edges.
- Keep a minimum free distance of 30 cm from the device to walls or other objects.
- Make sure the product is properly assembled before operating it.
- During and after operation, the appliance is likely to get very hot. Use gloves or other convenient protection accessories in order to avoid burns and injuries. Keep it away from flammable substances and objects.
- Do not immerse the cord, plug, or any non-removable part of the appliance in water or any other liquid, nor expose the electrical connections to water. Make sure your hands are dry before handling the plug or switching on the appliance.
- Do not twist, bend, strain, or damage the power cord in any way. Protect it from sharp edges and heat sources. Do not let it touch hot surfaces. Do not let the cord hang over the edge of the working surface or countertop.
- Do not cover the plate with aluminium foil, this could damage the non-stick coating.
- Do not leave the appliance unattended when switched on or still hot.
- Charcoal or similar combustible fuels must not be used with this appliance.
- Pull from the plug, not from the cord, to disconnect the device from the power supply.

- Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the official Technical Support Service of Cecotec in order to avoid any type of danger.
- Switch off and disconnect the device from the main plug:
 - In case of faults during use.
 - Before cleaning or moving the appliance from place to place.
 - After use.
- Always turn off the appliance before disconnecting it from the power supply.
- Keep the device out of the reach of water. Do not expose it to rain, snow or other moisture conditions.
- Use only parts and components provided with the original product by Cecotec.
- The appliance must not be operated (disconnect the mains plug immediately) when:
 - The appliance, casing or power cord is damaged.
 - The appliance shows visible signs of damage.
 - A fault is suspected after the appliance has been dropped or similar.
- Pay special attention to the positioning of the cord and avoid it from touching hot parts.
- Allow the device to cool down completely before assembling or disassembling any of its parts.
- The appliance is not intended to be used by children under the age of 12. It can be used by children over the age of 12, as long as they are given continuous supervision.
- This appliance can be used by children aged 12 and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, as long as they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- Supervise young children to make sure that they do not play with the appliance. Close supervision is necessary when the appliance is being used by or near children.


3. BEFORE USE

1. Take the product out of the box.
2. Remove all packaging materials.
3. Clean plates, fat drip tray and the grill cover with a soft, dampened cloth.
4. Dry them with a cloth or paper towel.
5. Operate the device at maximum temperature for 3-5 minutes without food..


Note: Smoke might be observed during first use due to residual wastes from manufacture. Make sure the grid and the fat-drip tray are clean and dry before operating.

4. PRODUCT ASSEMBLY

1. Introduce the support tubes in the holes on the grill unit's bracket. There is a fixing pin at the end of the support tube, align it with the slot on the grill unit bracket's lower part and push it until fitted into place. A click will indicate it has been properly assembled.

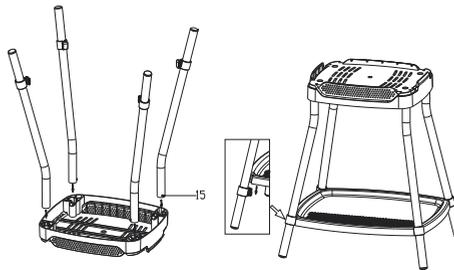

2. Use the food tray holders to assemble the food tray.
3. Install the fat drip tray in the grill holder, and then assemble the grill holder to the rest of the unit.

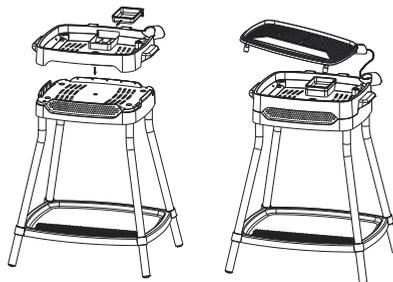




4. Place the grill plate in the grill holder. Insert the temperature regulator set in the connector and lower the grill plate until fitted into the grill holder. The device must be disconnected from the power supply while assembling.

ENGLISH

Note: the grill plate can only be used with this grill holder.

Warning: Do not unscrew these plastic feet under the grill plate. Removing the plastic feet would reduce the gap between the grill plate and the base, which could cause the base to melt!

5. Use two m4x14 screws and stainless-steel flat washers to screw clockwise the grill handle and cover.
6. Connect the power cord to a power supply. Make sure the device is stable and properly assembled before operating it.
7. If there is no need to use the barbecue feet, just assemble the grill plate to the grill holder and connect the power cord.

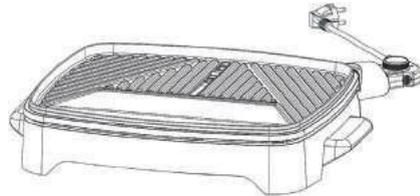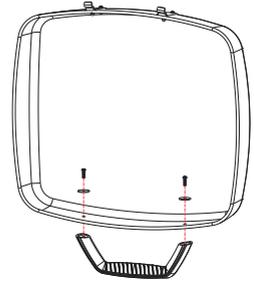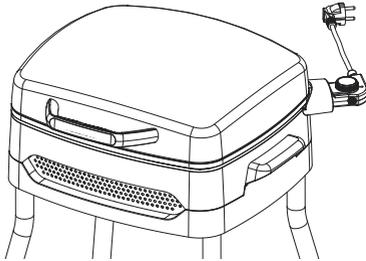

5. OPERATION

1. Connect the appliance to the mains electricity supply.
2. Set the temperature regulator to the required temperature level. There are 5 temperature settings, from 1 (low) to 5 (high).
3. The product reaches a maximum temperature of 215 +/- 25 °C with the cover in place and of 195 +/- 25 °C without it.

Note: It usually takes about 3 minutes to preheat. Preheating is faster with the roasting hood in place.

4. The temperature indicator light will turn off as soon as the required temperature has been reached.
5. Place the food to be grilled on the grill plate.
6. To turn the device off, turn the temperature regulator to the minimum position and then disconnect it from the power supply.



INDOOR OR OUTDOOR USE

The barbecue can also be used indoors as a griddle.

- If the device is going to be used inside the house, make sure to place at a minimum distance of 30 cm from walls and other objects.

- To remove it from the rest of the unit, hold it from the handles and lift it.
- Place it on a heatproof surface.

Note: It is not recommended to place the cover when using it indoors.



GRILLING TIPS

- Always use tongs to turn grilled food. Using a fork to turn the food will dry it out and damage the non-stick coating.
- Only turn meat and fish once during grilling. There is no need to turn it more than once, as it dries food out.
- If cooked food sticks to the grill plate, rub the plate with a piece of kitchen paper soaked in oil from time to time

6. CLEANING AND MAINTENANCE

- Turn off, unplug the product and allow it to cool down before cleaning.
- Remove the temperature regulator and power cord from the device.
- Clean the handle with warm water and a damp cloth.
- Fat splashes can be removed with a mild cleaning agent.
- Do not immerse the product in water or any other liquid.
- Never use strong detergents, gasoline, abrasive powder or metal brush to clean any part of the product.
- Do not hold or transport the device while it is hot.
- Protect the appliance from dust and dirt if it is not to be used for a prolonged period of time. Dry thoroughly and wrap it in a plastic bag or store it in its original box.
- Store it in a cool dry place.
- The plate and fat drip tray are dishwasher safe.

7. TECHNICAL SPECIFICATIONS

Model: Perfect Country BBQ

ENGLISH

Product reference: 03061

1680-2000 W, 220-240 V~ 50/60 Hz

Product reference: Clase I

Level of protection: IPX4

Made in China | Designed in Spain

8. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly. If the product has a built-in battery or uses batteries, they should be removed from the appliance and disposed of appropriately.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

9. TECHNICAL SUPPORT SERVICE AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

- The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.
- The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.
- Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at **+34 96 321 07 28**.

www.cecotec.es

Grupo Cecotec Innovaciones S. L.
C/de la Pinadeta s/n, 46930
Quart de Poblet, Valencia, Spain

EADS02190527