

cecotec

PERFECTCOUNTRY 2000 EASYMOVE

Electric barbecue



Instruction manual

INDEX

1. Parts and components
2. Before use
3. Product assembly
4. Operation
5. Cleaning and maintenance
6. Technical specifications
7. Disposal of old electrical appliances
8. Technical support and warranty

SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the appliance. Keep this instruction manual for future reference or new users. Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that the wall outlet is grounded.

This product is designed for household use only. Do not use it for industrial or commercial purposes.

Place the appliance on a dry, stable, flat, heat-resistant surface. Avoid placing it close to edges.

Keep a minimum free distance of 30 cm from the device to walls or other objects.

Make sure the product is properly assembled before operating it.

The appliance will be very hot during and immediately after operating. Use gloves or other convenient protection accessories in order to avoid burns and injuries. Keep it away from flammable substances and objects.

Do not immerse the cord, plug, or any non-removable part of the appliance in water or any other liquid, nor expose the electrical connections to water. Make sure your hands are dry before handling the plug or switching on the appliance.

Do not twist, bend, strain, or damage the power cord in any way.

Protect it from sharp edges and heat sources. Do not let it touch hot surfaces. Do not let the cord hang over the edge of the working surface or countertop.

Do not cover the plate with aluminium foil, this could damage the non-stick coating.

Do not leave the appliance unattended when switched on or still hot.

Charcoal or similar combustible fuels must not be used with this appliance.

Pull from the plug, not from the cord, to disconnect the device from the power supply.

Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the official Technical Support Service of Cecotec in order to avoid any type of danger.

Switch off and disconnect the device from the main plug:

In case of faults during use.

Before cleaning or moving the appliance from place to place.

After use.

Turn off all controls before disconnecting it from the power supply.

Keep the device out of the reach of water. Do not expose it to rain, snow or other moisture conditions.

Use only parts and components provided with the original product by Cecotec.

The appliance must not be operated (disconnect the mains plug immediately) when:

The appliance, casing or power cord is damaged.

The appliance shows visible signs of damage.

A fault is suspected after the appliance has been dropped or similar.

Pay special attention to the positioning of the cord and avoid it from touching hot parts.

Allow the device to cool down completely before assembling or disassembling any of its parts.

The appliance is not intended to be used by children under the age of 12. It can be used by children over the age of 12, as long as they are given continuous supervision.

This appliance can be used by children aged 12 and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, as long as they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.

Do not allow children to play with the appliance.

Supervise children, they shall not play with the appliance. Close supervision is necessary when the appliance is being used by or near children.



1. PARTS AND COMPONENTS

Fig. 1.

1. Lid handle
2. Barbecue lid
3. Detachable temperature regulator with power cord
4. Temperature light indicator
5. Power socket
6. Grill plate
7. Fat-drip tray
8. Grill holder
9. Side food tables
10. Hook
11. Support tube A
12. Food tray holder
13. Food tray
14. Support feet
15. Support tube I
16. Support tube J
17. Wheel axis
18. Wheel
19. Wheel cover

Fig. 2.

- A. ST4 x 12 screw (x8)
- B. Pin (x2)
- C. M6 x 70 screw (x4)
- D. d20 x 5.2 nut (x2)
- E. ST4 x 14 screw (x2)

2. BEFORE USE

Take the product out of the box.

Remove all packaging material.

Clean plates, fat drip tray and the grill cover with a soft, dampened cloth.

Dry them with a cloth or paper towel.

Operate the device at maximum temperature for 3-5 minutes without food.

Note: Smoke might be observed during first use due to residual wastes from manufacture.

Make sure the grill and the fat-drip tray are clean and dry before operating.

3. PRODUCT ASSEMBLY

The food tables (9) are fixed on the grill holder (8) with a ST4*12 screw (A).

Fig. 3.

Introduce the support tubes in the holes on the grill holder. There is a fixing pin at the end of the support tube, align it with the slot on the grill holder's lower part and push it until fitted into place. A click will indicate it has been properly assembled.

Fig. 4.

Put the axle (17) through the support tube (15)(16).

Install a wheel (18) at each end of the axle (17).

Then fix the wheel (18) with the pins (B) inserted into the positioning holes at both ends of the axle (17).

Install the wheels (18) on both sides with the wheel cover (19).

Fig. 5.

The food plates (13) are respectively buckled on the food tray holder (12) of the support pipe assembly (11), (15), 16.

Set the grill holder (8) with the oil collecting tray (7) into the hook (10).

Fix the grill holder (8) and the hook (10) with M6*70(C) nuts.

Fig. 6.

Place the grill plate (6) in the grill holder (8).

Insert the power socket (5) of the grill plate into the grill holder of the socket hole. Then, lower the grill plate onto the grill holder.

Make sure it is cool and disconnected from the power.

Fig. 7.

The grill plate can only be used with this grill holder.

Warning: Do not unscrew these plastic feet under the grill plate. Removing the plastic feet would reduce the gap between the grill plate and the base, which could cause the base to melt.

Use two m4x14 screws and stainless-steel flat washers to screw clockwise the grill handle and cover.

Fig. 8.

Insert the power plug into the wall socket.

Make sure the product is properly assembled before operating it.

Fig. 9.

If there is no need to use the barbecue feet, just assemble the grill plate to the grill holder and connect the power cord.

4. OPERATION

Connect the appliance to the power supply.

Set the temperature regulator to the required temperature level. There are 5 temperature settings, from 1 (low) to 5 (high).

The product reaches a maximum temperature of 215 +/- 25 °C with the cover in place and of 195 +/- 25 °C without it.

The BBQ electric grill with the grill plate (6) and grill holder (8) can be used separately and can be moved indoors.

Recommendation: Do not place the lid to use the barbecue inside the house.

Warning: The grill plate (6) must only be used together with the product's grill holder (8).
Fig. 10.

Note: It usually takes about 3 minutes to preheat. Preheating is faster with the cover in place. The temperature indicator light will turn off as soon as the required temperature has been reached.

Place the food to be grilled on the grill plate.

To turn the device off, turn the temperature regulator to the minimum position and then disconnect it from the power supply.

Fig. 11.

Cooking time and temperature table

Note: The cooking time will depend on different factors.

Food	Temperature	Cooking time (minutes)
Steak/beef	High	10-15
Lamb	High	8-13
Chicken thighs	High	15-20
Chops	High	20-25
Chicken wings	High	9-15
Pork fillets	Medium-high	7-8
Whole fish	High	8-11
Kebab	Medium-high	7-9
Sausages	Medium-high	8-10
Green bell pepper	Medium-high	5-10
Onion	Medium-high	10-15

Mushrooms	Medium-high	5-10
Potato	Medium-high	10-15

Indoor or outdoor use

Do not screw down the plastic feet under the grill plate. This would reduce the reasonable gap between the grill plate and the grill holder, which would lead to melting of the plastic parts. This could lead to serious injuries and damage to the appliance.

Warnings:

Place the cord in such way that it is not dangerous and people do not trip over.

Remember to disconnect the device after use.

The barbecue can also be used indoors as a griddle.

If the device is going to be used inside the house, make sure to place at a minimum distance of 30 cm from walls and other objects.

To remove it from the rest of the unit, hold it from the handles and lift it.

Place it on a heatproof surface.

The device can be used indoors as a grill-griddle. Simply hold the product from the handles and take it inside.

Note: It is not recommended to place the cover when using it indoors.

Outdoors use

Fig. 13.

Grilling tips

Always use tongs to turn grilled food. Using a fork to turn the food will dry it out and damage the non-stick coating.

Only turn meat and fish once during grilling. There is no need to turn it more than once, as it dries food out.

Never cook meat for too long. Even pork is better if it is served when it is still a little pink and juicy.

If cooked food sticks to the grill plate, rub the plate with a piece of kitchen paper soaked in oil from time to time.

Meat will be more tender when marinated in the refrigerator over night before cooking. You can make your own marinade from oil (to aid moistness), vinegar, fruit juice or wine (to tenderise) and a mixture of seasonings for flavor.

5. CLEANING AND MAINTENANCE

Turn off, unplug the product and allow it to cool down before cleaning.

Remove the temperature regulator and power cord from the device.

Clean the handle with warm water and a damp cloth.

Fat splashes can be removed with a mild cleaning agent.

Do not immerse the product in water or other liquid.

Never use strong detergents, gasoline, abrasive powder or metal brush to clean any part of the product.

Do not hold or transport the device while it is hot.

Protect the appliance from dust and dirt if it is not to be used for a prolonged period of time.

Dry thoroughly and wrap it in a plastic bag or store it in its original box.

Store it in a cool and dry place.

The plate and fat-drip tray are dishwasher safe.

6. TECHNICAL SPECIFICATIONS

Model: PerfectCountry 2000 EasyMove

Product reference: 03113

1680-2000 W, 220-240 V~ 50/60 Hz

Degree of protection: IPX4

Made in China | Designed in Spain

7. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

8. TECHNICAL SUPPORT AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.

The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.

Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at +34 963 210 728.

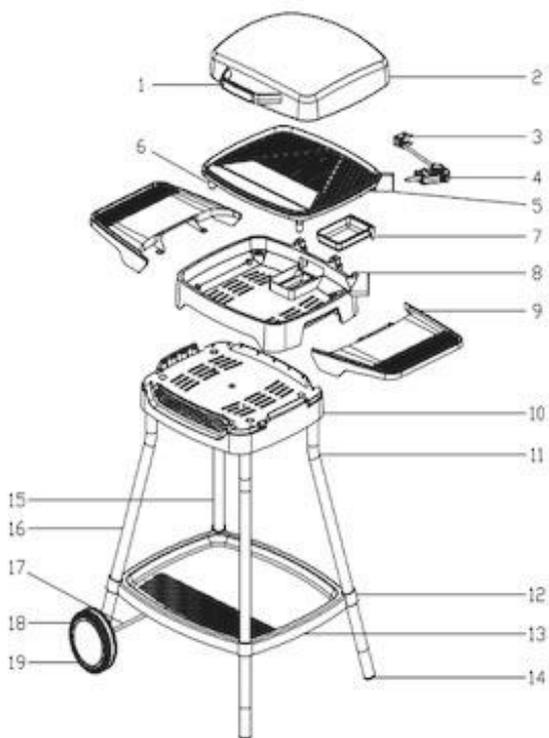


Fig./Img./Abb./Rys./Obr. 1

<p>A</p>  <p>ST4×12 8PCS</p>	<p>B</p>  <p>Pin 2PCS</p>	<p>C</p>  <p>M6×70 4PCS</p>	<p>D</p>  <p>φ20*φ5.2 2PCS</p>
<p>E</p>  <p>ST4×14 2PCS</p>			

Fig./Img./Abb./Rys./Obr. 2

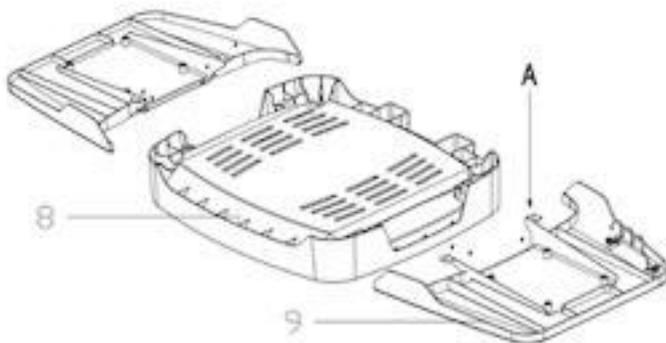


Fig./Img./Abb./Rys./Obr. 3

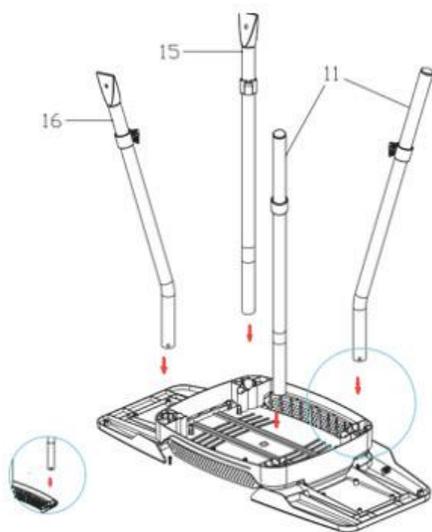


Fig./Img./Abb./Rys./Obr. 4

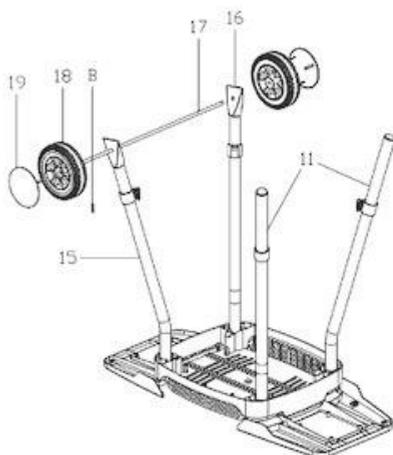


Fig./Img./Abb./Rys./Obr. 5

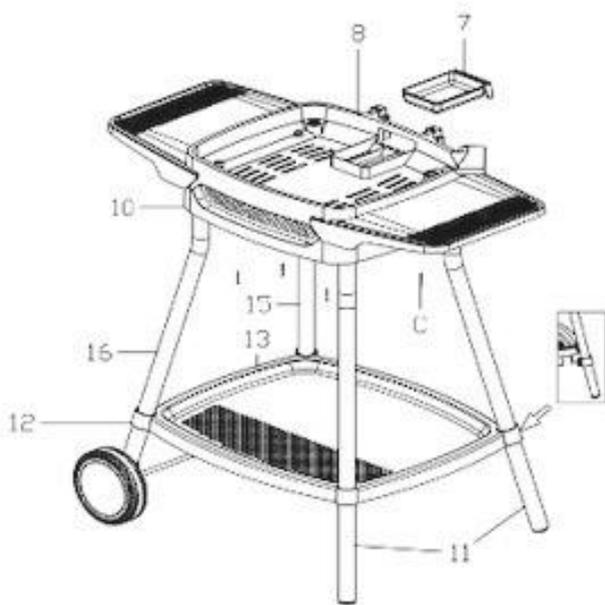


Fig./Img./Abb./Rys./Obr. 6

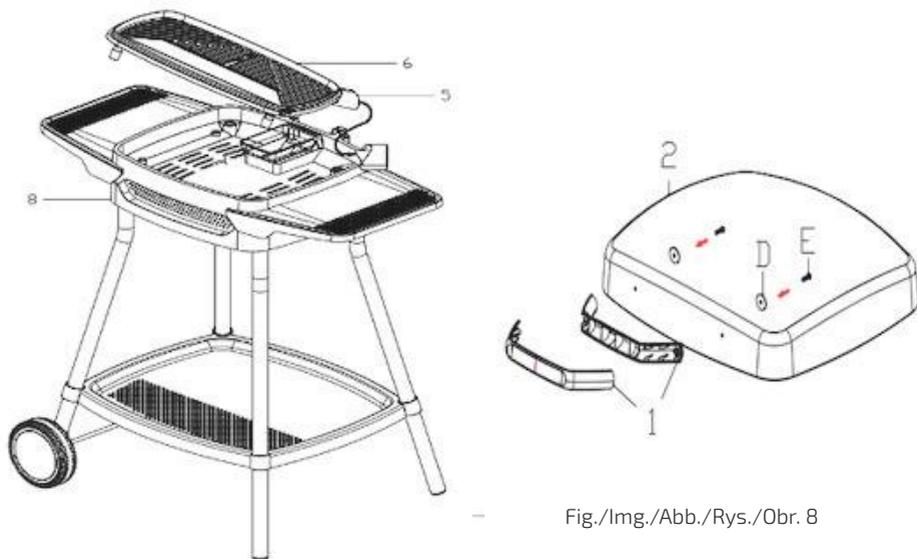


Fig./Img./Abb./Rys./Obr. 8

Fig./Img./Abb./Rys./Obr. 7



Fig./Img./Abb./Rys./Obr. 9

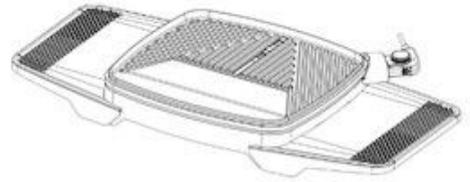


Fig./Img./Abb./Rys./Obr. 10

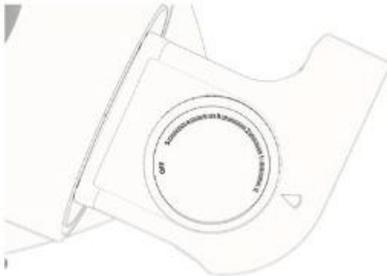


Fig./Img./Abb./Rys./Obr. 11

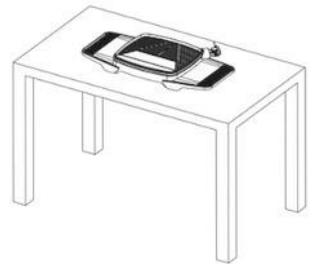


Fig./Img./Abb./Rys./Obr. 12



Fig./Img./Abb./Rys./Obr. 13

www.cecotec.es

Grupo Cecotec Innovaciones S. L.
C/de la Pinadeta s/n, 46930
Quart de Poblet, Valencia, Spain

EA01201207