

cectec

BAKE&TOAST 2600 WHITE 4PIZZA BAKE&TOAST 2600 BLACK 4PIZZA

Horno de convección / Convection oven



Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Handleiding
Instrukcja obsługi
Návod k použití

INDEX

1. Parts and components	31
2. Before use	31
3. Operation	32
4. Cleaning and maintenance	35
5. Technical specifications	36
6. Disposal of old electrical and electronic appliances	36
7. Technical support and warranty	36
8. Copyright	36

SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the appliance. Keep this instruction manual for future reference or new users.

- All safety instructions must be closely followed when using the appliance.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance should not be carried out by unsupervised children.
- Keep this appliance and its power cable out of reach of children under the age of 8.
-  This symbol means "caution, hot surface". Accessible surfaces may reach high temperatures when the appliance is in operation.

- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that the wall outlet is earthed.
- Do not immerse the cable, plug, or any other non-removable part of the appliance in water or any other liquid. Do not expose the electrical connections to water. Make sure your hands are dry before handling the plug or switching on the appliance.
- Unplug the appliance from the main power supply when not in use.
- Warning: Never immerse the appliance in water. Do not touch the water!
- Check the power cable regularly for visible damage. There are no user-serviceable parts inside the appliance. If the cable is damaged, it must be replaced by the official Cecotec Technical Support Service in order to avoid any type of danger.
- WARNING: do not operate the appliance if its cable, plug, or body show visible damage, do not work properly, or have been dropped.
- Do not twist, bend, pull, or damage the power cable. Protect it from sharp edges and heat sources. Do not allow the cable to touch hot surfaces. Do not let the cable hang over the edge of the working surface or worktop.
- Turn off and unplug the appliance from the mains supply when not in use and before cleaning it. Pull from the plug, not the cable, to disconnect it from the outlet.
- Supervise children to prevent them from playing with the appliance. Close supervision is necessary when the appliance is being used by or near children.

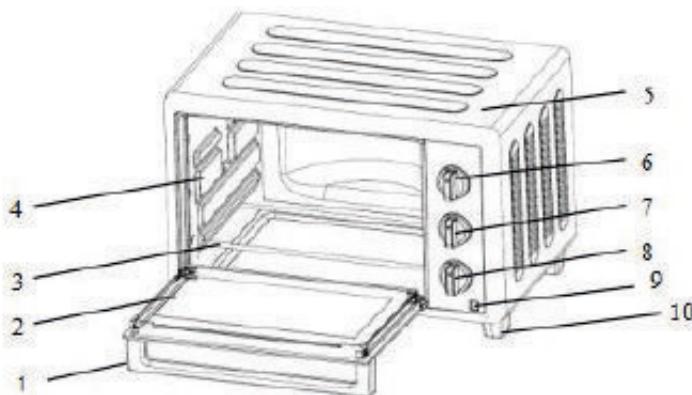


Fig./Img./Abb./Afb./ Rys. 1



Fig./Img./Abb./Afb./ Rys. 2

1. PARTS AND COMPONENTS

Fig. 1

1. Door handle
2. Window
3. Heating elements
4. Interior
5. Outer surface
6. Temperature knob
7. Function knob
8. Timer knob
9. Indicator light
10. Support
11. Extractor handle
12. Rack
13. Baking tray
14. Pizza stone

NOTE:

The graphics in this manual are schematic representations and may not exactly match the appliance.

2. BEFORE USE

- This appliance is packaged in a way as to protect it during transport. Take the appliance out of its box and remove all packaging materials. You can keep the original box and other packaging elements in a safe place. This will help you prevent damage to the appliance when transporting it in the future. In case the original packaging is disposed of, make sure all packaging materials are recycled accordingly.
- Make sure all parts and components are included and in good conditions. If there is any piece missing or in bad conditions, contact the official Cecotec Technical Support Service immediately.

Box content

- Mini oven
- Pizza stone
- Baking tray
- Rack
- Extractor handle
- Crumb tray
- Instruction manual

ENGLISH

Please note the next indications about each accessory, depending on the type of food to be cooked.

Before first use:

1. Plug the oven power cord into a mains socket.
2. Insert the baking tray and the rack.
3. Turn the heat-zone selection knob to the  position, then set the temperature to 230 °C by turning the thermostat knob and heat up the empty oven for about 10 minutes.

Note:

At first there may be some smoke and a burning smell, however, this is not a malfunction.

3. OPERATION

Temperature adjustment

- Turn the thermostat knob clockwise to set the temperature as desired, according to the food to be cooked.
- Temperature can be adjusted from 90 °C to 230 °C.

Function knob

Select the heating function depending on the meal to be cooked.

1.  Convection + lower and upper heat
2.  Convection + upper heat
3.  Convection + lower heat
4.  Lower and upper heat
5.  Lower heat
6.  Upper heat/grill

Timer knob

1. Select the desired cooking time according to the food to be cooked.
2. To set the cooking time, turn the timer knob clockwise. After the selected time has elapsed, the oven will automatically switch off and an acoustic signal will sound.
3. The oven can be manually switched off during the cooking process by turning the timer knob counterclockwise to the Off position.

Accessories

Mini-oven guides

- You can insert the baking tray and/or rack into three different guides, this way creating three different shelves: upper, middle, and lower.
- For example, when cooking mac and cheese, if you want the top to be more cooked, insert the tray/rack into the top guides.

Warning:

Please note the following information about each accessory depending on the food to be cooked.

Baking tray: to cook roast chicken, Salisbury steak, gratins, sponge cakes, and almost any other oven-cooked foods.

Rack: ideal for cooking baked potatoes and dry food.

Baking tray and rack: use both for dripping food, boiled fish, etc. These accessories aren't completely square.

Note:

Be careful when removing hot liquids.

Extractor handle. Fig. 2

The extractor handle can be used to remove accessories without having to touch them. To use the extractor handle, position the base of the latter underneath the tray/rack to be removed; the two hooks should stick from underneath the accessory. Once the extractor handle is firmly hooked to the accessory, proceed to removing the latter.

NOTE

Be very careful when extracting the accessory, as this is a high-temperature appliance that can give off steam and heat.

Pizza stone

Use it to bake pizza and get perfect results.

General warnings and tips:

- Always use the extractor handle to remove the baking tray or rack. Both the tray and the rack can reach high temperatures during and after coking: use caution and wear appropriate gloves when handling hot accessories.
- When the appliance is hot, do not pour water over the glass door, especially if it's cold. Otherwise, the glass may break.
- When unplugging the cable, always take hold of the plug itself. Do not pull from the cable.
- Do not place the unit close to a gas burner or other source of high temperature or do not direct an electric fan, etc, at the unit during use. Doing so could prevent correct temperature control.
- Do not wet the power cable or touch the appliance with wet hands.
- Always unplug the power cable after every use or whenever the appliance is left unattended.
- If the oven is placed too close to a wall or curtains, they may burn or stain. Keep the appliance away from curtains and similar objects. Do not put anything between the bottom of the body and the surface on which it is set, Otherwise, it could burn.
- Do not put anything on the oven while using it, the heat could cause deformation, cracking, etc.
- Any bottled or tinned food cannot be heated directly as the bottle or tin would break and scald someone.
- Be careful not to burn yourself during use or immediately after use. The metal parts and glass viewing window of the door heat up during use. Be careful not to touch these parts when opening and closing the oven door.
- The plug must be properly connected to the socket. Insert the plug properly into the socket. If not properly plugged, the appliance may overheat. Never connect multiple plugs to the same outlet via, e.g., a multi-socket adapter.
- Warning: accessible surfaces may become very hot during use of the appliance. Be careful not to burn yourself.

Reference chart of the most commonly baked food

Food type	Quantity/thickness	Temperature (°C)	Timer (min)
Sandwich	2-3 pcs.	200	2-3
Toast	2-4 pcs.	230	2-5
Hamburgers	2-3 pcs.	200	3-5
Fish	/	200	7-10
Ham	2 cm	200	7-12
Sausages	3-4 pcs.	200-230	8-10
Cake	/	150	20-30
Steak	1-2 cm	230	10-15
Chicken	Half a chicken	175-200	30-40
Pizza	1	200	8-10

Note

As ingredients differ in origin, size, shape, and brand, we cannot guarantee the best setting for the ingredients that you are using. If necessary, change the times and/or temperature values to adjust the cooking to the type of ingredient.

4. CLEANING AND MAINTENANCE

- Disconnect the power cable from the wall socket before cleaning. Do not immerse the appliance in water or any other liquid during cleaning.
- Failure to maintain the appliance in clean conditions could lead to surface deterioration and adversely affect shelf life.
- Never use strong detergents, abrasive powders, or a metal brush to clean any part of the appliance.
- Use a soft, damp cloth to clean the seals, door, interior walls, and outer surface.

5. TECHNICAL SPECIFICATIONS

Model: Bake&Toast 2600 White/Black 4Pizza

Product reference: 03813/03818

Power: 1500 W

Voltage and frequency: 220-240 V AC, 50-60 Hz

Capacity: 26 l

Technical specifications may change without prior notice to improve product quality.

Made in China | Designed in Spain

6. DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC APPLIANCES



This symbol indicates that, according to the applicable regulations, the product and/or batteries must be disposed of separately from household waste. When this product reaches the end of its shelf life, you should dispose of the cells/batteries/accumulators and take them to a collection point designated by the local authorities.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

Compliance with the above guidelines will help protecting the environment.

7. TECHNICAL SUPPORT AND WARRANTY

Cecotec shall be liable to the end user or consumer for any lack of conformity that exists at the time of delivery of the product under the terms, conditions, and deadlines established by the applicable regulations.

It is recommended that repairs are carried out by qualified personnel.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact the official Cecotec Technical Support Service at +34 963 210 728.

8. COPYRIGHT

The intellectual property rights over the texts in this manual belong to CECOTEC INNOVACIONES, S.L. All rights reserved. The contents of this publication may not, in whole or in part, be reproduced, stored in a retrieval system, transmitted, or distributed by any means (electronic, mechanical, photocopying, recording or similar) without the prior authorization of CECOTEC INNOVACIONES, S.L.

www.cecotec.es

Cecotec Innovaciones S.L.
Av. Reyes Católicos, 60
46910, Alfafar (Valencia), Spain

SF01230525