




Manual de instrucciones
 Instruction manual
 Manuel d'instructions
 Bedienungsanleitung
 Manuale di istruzioni
 Manual de instruções

PIEZAS Y COMPONENTES
 Parts and components/Pièces et composants/Teile und Komponenten/
 Parti e componenti/Peças e componentes

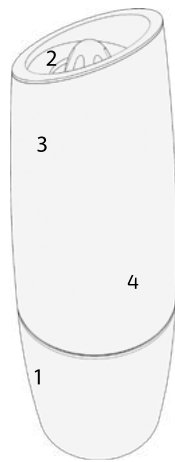

- EN
1. Salt/pepper compartment (lower part)
 2. Grinding level adjustment knob
 3. Battery compartment (top part)
 4. Main body

Replace the salt/pepper compartment and assemble it onto the main body by turning it clockwise.
 To use the device, simply tilt it over.
 Fill 80 % of the compartment's capacity with salt or peppercorns. Do not overfill.
 Turn the grinding level adjustment knob clockwise to set a finer grinding level, or counterclockwise to set a coarser grinding level. The grinding level adjustment knob is located on the top part of the product.
 The LED light will remain on while the device is operation.

Note: If the device gets stuck or stops operating during use, gently shake it to ensure peppercorns unblock it.

4. CLEANING AND MAINTENANCE

Cleaning
 Do not immerse the device in water or any other liquid.
 Clean the device's surface and base using a damp cloth.
 It is important to keep the product clean in order to ensure proper operation.
 Store the product in a dry place.

5. TECHNICAL SPECIFICATIONS

Product reference: 04282, 04283
 Product: InstantMill Gravity, InstantMill Gravity Duo
 Battery type: 6x3AAA 1.5 V

6. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly. If the product has a built-in battery or uses batteries, they should be removed from the appliance and disposed of appropriately.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

7. TECHNICAL SUPPORT SERVICE AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.

The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.

Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at +34 963 210 728.

EN

1. SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the appliance. Keep this instruction manual for future reference or new users.

This appliance is intended for household use and can be also used for restaurants and hotels. Do not use outdoors.

Keep the device away from water and other liquids.

The device can be used with coarse salt and all kinds of peppers.

The device operates on 6xAAA batteries. It is recommended to use alkaline batteries.

Keep the device always clean.

Battery instructions

Keep batteries away from children and animals, they could be deadly if swallowed. In case of ingestion, seek medical assistance immediately.

Should a battery have leaked, do not allow your skin, eyes or mucous membranes to come into contact with the battery acid.

In case of contact with acid, rinse the affected areas with abundant fresh water immediately and contact a doctor as soon as possible.

Make sure the battery contacts in the device are clean before inserting batteries; if they are not, clean them.

Use only the battery type specified in the technical specifications.

Always replace all the batteries at the same time. Do not use different types of batteries or of different capacities.

When replacing batteries, note the correct polarity (+/-).

Take the batteries out of the device when they are discharged or when the device is not going to be used in a long time.

Batteries must not be recharged or reactivated, dismantled, thrown into fire, immersed in fluids or short-circuited.

2. BEFORE USE

- Take the product out of the box and remove all packaging materials.
- Make sure the product shows no visible signs of damage. If there are, contact immediately the Technical Support Service of Cecotec.

3. OPERATION

To insert the batteries, unscrew the top part of the mill by turning it clockwise.

Insert 6xAAA batteries according to the polarity marks.

Replace the top part onto the main body and turn it clockwise to lock it.

Unscrew the lower part of the mill by turning it anticlockwise.

Introduce the desired amount of salt or pepper.