

# cecotec

**BOLERO GRANDSOMMELIER**

830 COOLCRYSTAL/ COOLWOOD

Bodega puesta a temperatura termoeléctrica de 8 botellas./

8-bottle temperature-control wine cooler



# bolero

Manual de instrucciones  
Instruction manual  
Manuel d'instructions  
Bedienungsanleitung  
Manuale di istruzioni  
Manual de instruções  
Handleiding  
Instrukcja obsługi  
Návod k použití

## INDEX

1. Parts and components	47
2. Before use	47
3. Installation	47
4. Operation	48
5. Storage tips	49
6. Troubleshooting	51
7. Cleaning and maintenance	52
8. Technical specifications	52
9. Disposal of old electrical and electronic appliances	53
10. Technical support and warranty	54
11. Copyright	54

## SAFETY INSTRUCTIONS

Read the instructions carefully before using the appliance for the first time and keep this instruction manual for future reference or new users.

- It is important to make sure all users are familiar with the appliance's operation and safety features to prevent faults and unnecessary accidents.
- Make sure that the mains voltage in your house matches the voltage stated on the rating label of the appliance.
- This appliance can be used by children aged 8 and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, as long as they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. The cleaning and maintenance of the appliance should not be carried out by children without supervision.
- Keep this appliance and its power cable out of reach of children under the age of 8.
- Keep the packaging material away from children, as there is a risk of suffocation.
- **WARNING:** if the interior light is damaged, contact the official Cecotec Technical Support Service. Do not try to repair it on your own.
- **WARNING:** when positioning the appliance, make sure the power cable is not trapped or damaged. A crushed or damaged connector may heat up and cause a fire.
- Do not use the appliance if its cable, plug, or housing are damaged, nor after it malfunctions or has been dropped or damaged in any way.
- Keep the ventilation openings of the appliance clear from obstructions.

- **WARNING:** do not use mechanical appliances or other means to accelerate the defrosting process other than those recommended by Cecotec.
- **WARNING:** do not damage the refrigeration circuit.
- If the cable is damaged, it must be replaced by the manufacturer, the supplier, or qualified personnel to avoid hazards.
- Do not expose the electrical connections to water. Make sure your hands are dry before handling the plug or switching on the appliance.
- **WARNING:** do not use electrical devices inside the appliance.
- We recommend you check the power cable regularly to detect any sign of possible damage. If the cable is damaged, stop using the appliance and contact the official Cecotec Technical Support Service.
- To avoid injuries or death caused by electric shock, do not use the appliance with your hands wet or over a wet surface.
- Do not use the appliance with an extension cable or a multi-socket adaptor. Make sure the appliance is plugged in directly to a power supply.
- Do not store explosive substances such as aerosols or flammable propellants in this appliance.
- This appliance is exclusively designed for household use. Do not use the appliance for industrial or commercial purposes.
- This appliance is intended for home use only. Any other use will void the warranty. Do not use outdoors.
- To avoid any risk due to the instability of the appliance, install it following the instructions.
- This appliance has a built-in earthed plug. Make sure the power supply in your house is properly earthed.
- Wait 5 minutes after a power failure before turning the appliance back on.

- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Always handle the appliance carefully to avoid any damage on it.
- Do not store more bottles than recommended.
- WARNING: do not attach multi-socket adaptors or multiple power supplies to the rear part of the appliance.
- This appliance is not intended to be used as a built-in appliance.
- Prolonged opening of the door can cause a significant increase in the temperature inside the appliance.
- Regularly clean the surfaces of the appliance that may come into contact with bottles.
- If the appliance is left empty for a long time, turn it off, defrost it, clean it, dry it, and leave the door open to prevent mould from forming inside the appliance.
- Before carrying out any maintenance and cleaning task, turn off the appliance and unplug it.
- This appliance is intended to be used exclusively for the preservation of wine.
- This appliance is not suitable for freezing food.
- It is advisable to wait at least four hours before switching the appliance on.
- Place the appliance on a dry, stable, flat, heat-resistant surface.
- Air must flow around the appliance. Lack of air leads to overheating. To achieve good ventilation, follow the installation instructions.
- When positioning the appliance, make sure there is enough free space at the rear, as it is the main heat outlet. This will allow for adequate ventilation. To avoid risk of fire, follow the installation instructions.
- Make sure that the plug is accessible after installation of the appliance.
- All electrical work required to maintain this appliance must be carried out by a qualified electrician.
- Do not use any accessory that has not been recommended by Cecotec, as they might cause injuries or damage.
- Cleaning and maintenance must be carried out according to this instruction manual to make sure the appliance works properly.
- No liability is accepted for any eventual damage or personal injuries derived from misuse or non-compliance with this instruction manual.
- This appliance contains a flammable blowing agent: cyclopentane. Avoid contact with fire during transport, handling, and use.

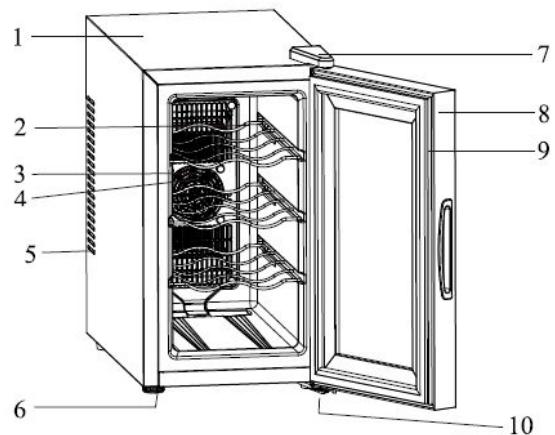


Fig./Img./Abb./Afb./ Rys./Obr. 1



Fig./Img./Abb./Afb./ Rys./Obr. 2

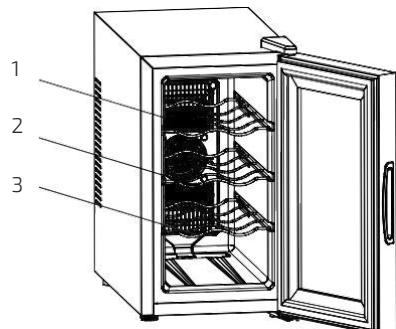


Fig./Img./Abb./Afb./ Rys./Obr. 3

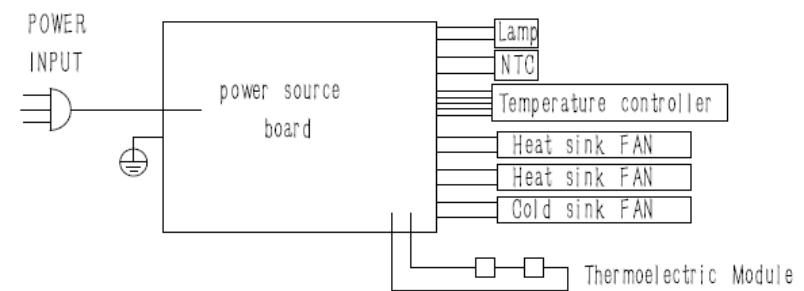


Fig./Img./Abb./Afb./ Rys./Obr. 4

## 1. PARTS AND COMPONENTS

Fig. 1

1. Cover
2. Shelf (x3)
3. Fan
4. Fan cover
5. Ventilation slots
6. Levelling feet
7. Upper hinge with cover
8. Door
9. Door seal
10. Lower hinge

### Note

- The graphics in this manual are schematic representations and may not exactly match the product.
- To make the most out of the appliance in terms of energy, place all the shelves in their original position, that is, as shown in Figure 1.

## 2. BEFORE USE

- This appliance is packaged in a way as to protect it during transport. Take the appliance out of its box and remove all packaging materials. You can keep the original box and other packaging elements in a safe place. This will help you prevent damage to the appliance when transporting it in the future. In case the original packaging is disposed of, make sure all packaging materials are recycled accordingly.
- Make sure all parts and components are included and in good conditions. If there is any piece missing or in bad conditions, contact the official Cecotec Technical Support Service immediately.

## 3. INSTALLATION

- The location you choose for the appliance must be properly ventilated and far from heat sources. Do not place the appliance near heat sources, like a hob, and avoid direct sunlight to ensure proper cooling and save energy. It is not recommended to place the appliance in a wet place, as it may rust and cause electrical leakage.
- During operation, the appliance releases heat into the environment. Follow the instructions

below to ensure proper heat dissipation:

1. Leave at least 200 cm<sup>3</sup> of free space around the appliance.
2. Leave at least 20 mm of free space between the wine cooler and the rear wall.
3. Leave at least 50 mm of free space between the sides of the appliance and other walls or devices.
4. Ensure constant air circulation around the wine cooler.
- Place the appliance on a solid, flat surface to keep it stable, or vibrations and noises will occur. Make sure that the appliance is level by adjusting the height with its legs. If possible, do not place the appliance directly on the ground.
- Wait at least 2-3 hours before plugging the appliance into a power outlet and storing bottles inside. Clean the inside with a soft cloth and lukewarm water. Check that the shelves are correctly positioned.
- Installation is recommended in a location with an ambient temperature between 16 and 32 °C. A lower or higher temperature than indicated may affect optimal operation of the appliance.
- It is not advisable to use the wine cooler if ambient temperature is below 10 °C.
- A water container can be placed inside the appliance to maintain humidity.

## 4. OPERATION

This appliance has a temperature control on the front. You can adjust the temperature between 8 and 8 °C (46-64 °F). The internal temperature may be affected by factors such as the location of the appliance, the ambient temperature, the door opening frequency, etc.

### Control panel. Fig. 2

1. Unlock icon
2. Temperature Unit Selection and Light On/Off icon
3. Temperature indicator
4. Temperature increase icon
5. Temperature decrease icon

### Switch-on

Plug in the appliance. Set the desired temperature using the temperature increase or decrease buttons.

### Please note

After setting the temperature, the temperature display will show the internal temperature of the appliance, which will gradually change until the set temperature is reached.

### Temperature unit selection

Touch the Temperature Unit Selection and Light On/Off icon for 2 seconds (approx.) to switch between degrees Fahrenheit (°F) and degrees Celsius (°C).

### Light on/off

Touch the Temperature Unit Selection and Light On/Off icon to switch the interior light on or off. Touch the icon again to turn it off. The light will automatically switch off after 10 minutes.

### Locking the control panel

- The control panel has an automatic locking system that activates after 20 seconds of inactivity (without touching any icons).
- Touch the unlock icon for 2 seconds (approx.) to unlock the control panel. A beep will sound, indicating that the control panel is unlocked.
- All icons will be inactive after locking the control panel.

### NOTE:

Upon first switch-on of the wine cooler or after a period of inactivity, there may be a considerable difference between the selected temperature and the temperature indicated on the control panel. This is normal, and the appliance will reach the selected temperature after a few hours of operation.

## 5. STORAGE TIPS

- This appliance is intended to be used exclusively for wine preservation.
- Wine coolers are designed to store a maximum of 8 standard-size bottles (750 ml capacity Bordeaux), with 2 bottles per shelf.
- You can store larger bottles, as long as they do not prevent the door from closing properly.
- Capacity can vary depending on storage method or bottle size.

### Wines and suggested temperatures:

	Temperature (°C)	Temperature (°F)
Red wine	14-18	57-64
Dry/white wine	9-14	48-57
Rose wine	10-11	50-52
Sparkling wine	5-9	41-48

**Please note**

- These are approximate values, as temperature regulation for wine depends on many factors. Always follow the indications of the manufacturer.
- The recommended temperature for the wine cooler is 17 °C.
- Exposure to light, vibrations, or fluctuations in temperature and humidity can cause the wine to spoil. When properly stored, wines not only maintain their quality, but many improve in aroma, flavour, and complexity as they mature.
- Wines kept at higher temperatures age faster. Wines exposed to temperatures above 18°C (64°F) will lose flavour and aroma.
- If the wine is kept at too low a temperature, it can lead to the appearance of damaging deposits. A humidity of 60%~70% is ideal to prevent corks from shrinking.
- After opening a bottle of wine, the wine comes into contact with air. Therefore, it is best to store the rest of the bottle in an upright position to minimise the surface area of the wine that comes into contact with air.
- Once opened, the wine will be drinkable for two days in the case of whites or three days in the case of reds, provided that the bottle was resealed. Make sure the seal is tight by checking the stopper.
- In most wine shops you can buy special stoppers that keep sparkling wine and champagne bubbly for a day or two after opening.
- If stored correctly, white wines can last up to two years. Full-bodied reds age well for ten years and dessert wines last for up to twenty years.
- When you buy a bottle of wine, you should immediately store it in the wine cooler.
- Cheaper bottles of wine do not age as well as more expensive ones.
- To make the most of the aroma and flavour of the wine, never fill more than half a glass at a time. The shape of the glass helps in that regard as well. The size and shape of the wine glass will determine the intensity and complexity of the aroma. The stem should be long enough to avoid hand contact with the bowl of the glass and should be tulip-shaped or tapered at the top.
- The shelf arrangement shown in Figure 3 is recommended to ensure energy efficiency.
- First shelf.
- Second shelf.
- Third shelf

**6. TROUBLESHOOTING**

Problem	Possible causes and solutions
The appliance does not work.	The appliance is not properly plugged in. Check if the socket works by plugging in another electrical appliance. Check the control and protection elements of your electrical installation.
The appliance is not cold enough	High ambient temperature may require setting the appliance to a colder temperature. Increase the set temperature. The door is opened too often. The door is not completely closed. The door isn't correctly installed or worn out. There is not enough space for ventilation around the appliance. The ambient temperature is higher than the maximum supported temperature. Faulty PCB or fan. Contact the official Cecotec Technical Support Service.
The light does not work.	Damaged light. Contact the official Cecotec Technical Support Service.
Vibrations.	Check if the appliance is level. The appliance is too close to walls or objects around it.
The appliance makes too much noise.	The appliance is not level. The appliance is too close to walls or objects around it. Faulty fan. Contact the official Cecotec Technical Support Service.
The door does not close properly.	The appliance is not level. The shelves are incorrectly positioned and prevent the door from closing.
Interior frost formation.	Switch off the wine cooler for 1 hour. Then, turn it back on. Room temperature is too low.

**Note:**

If none of these situations match your problem, do not attempt to disassemble or repair the appliance by yourself. Repairs carried out by unqualified persons may result in injury or serious

malfunctions. Contact the official Cecotec Technical Support Service. The repair must be carried out by an authorised technician and you must use only original spare parts.

## 7. CLEANING AND MAINTENANCE

- Unplug the appliance from the mains and let it cool down before cleaning it.
- Use a soft, damp cloth to clean the surface of the appliance.
- Never immerse the appliance in water or other liquids.
- Do not use abrasive cleaners or scouring pads to clean the appliance.

### If you don't intend to use the appliance for a long period of time:

- Switch off the appliance and unplug it from the power outlet. Empty the appliance.
- Clean and dry the interior completely. To avoid mould or unpleasant odours, leave the door slightly open.
- Store the appliance in a ventilated and dry place, away from heat sources; place the appliance carefully and do not place heavy objects on it.
- The appliance must be kept out of the reach of children to prevent them from playing with it.

### Cleaning the interior and exterior

- Empty the interior and clean it with a soft cloth or sponge dampened with lukewarm water or neutral detergent. After using detergent, make sure you rinse it with clean water, and then dry it with a cloth.
- Do not use strong cleaners, scouring pads, or dissolvents to clean any of the appliance parts.
- Often clean dust that may accumulate. The condenser grille on the rear of the appliance and all adjacent components can be cleaned with a soft-brush vacuum cleaner.

### Replacing the light bulb

The appliance has a light characterised by its low energy consumption and long lifespan. In case of malfunction, contact the official Cecotec Technical Support Service. Only the manufacturer or authorised personnel may replace the bulb.

## 8. TECHNICAL SPECIFICATIONS

You can find more information on this model by scanning the QR code (and the energy label as well).

Reference:	02707	02708
Model	Grand Sommelier 830 CoolCrystal	Grand Sommelier 830 CoolWood
QR code		
Capacity:	8 Bottles	
Voltage	100-240 V~	
Rated frequency	50/60 Hz	
Rated power	65 W	
Climate class	N (*)	
Net volume	21 litres	
Insulating foam	Cyclopentane	

(\*) Refrigeration appliance intended for use at ambient temperatures between 16°C and 32°C.

This product contains a light source.

Technical specifications may change without prior notification to improve product quality.

Made in China | Designed in Spain

Electrical diagram (Fig. 4)

## 9. DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC APPLIANCES



This symbol indicates that, according to the applicable regulations, the product and/or batteries must be disposed of separately from household waste. When this product reaches the end of its shelf life, you should dispose of the cells/batteries/accumulators and take them to a collection point designated by the local authorities.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

Compliance with the above guidelines will help protecting the environment.

## 10. TECHNICAL SUPPORT AND WARRANTY

Cecotec shall be liable to the end user or consumer for any lack of conformity that exists at the time of delivery of the product under the terms, conditions, and deadlines established by the applicable regulations.

It is recommended that repairs be carried out by qualified personnel.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact the official Cecotec Technical Support Service at +34 963 210 728.

## 11. COPYRIGHT

The intellectual property rights over the texts in this manual belong to CECOTEC INNOVACIONES, S.L. All rights reserved. The contents of this publication may not, in whole or in part, be reproduced, stored in a retrieval system, transmitted, or distributed by any means (electronic, mechanical, photocopying, recording or similar) without the prior authorization of CECOTEC INNOVACIONES, S.L.

[www.cecotec.es](http://www.cecotec.es)

Cecotec Innovaciones S. L.  
Av. Reyes Católicos, 60  
46910, Alfafar (Valencia), Spain

EA01230512