



cectec

ProClean 5120 Mirror

Microondas/Microwave



Manual de instrucciones

Instruction manual

Manuel d'instructions

Bedienungsanleitung

Manuale di istruzioni

Manual de instruções



INDEX


| | |
|---|------|
| 1. Parts and components | / 04 |
| 2. Safety instructions | / 17 |
| 3. Before use | / 19 |
| 4. Control panel and operation | / 19 |
| 5. Cooking tips | / 25 |
| 6. Cleaning | / 25 |
| 7. Technical specifications | / 26 |
| 8. Disposal of old electrical appliances | / 26 |
| 9. Technical support service and warranty | / 26 |
| 10. Tips on use | / 73 |





1. PIEZAS Y COMPONENTES

Parts and components/Pièces et composants/Teile und Komponenten/
Parti e componenti/Peças e componentes

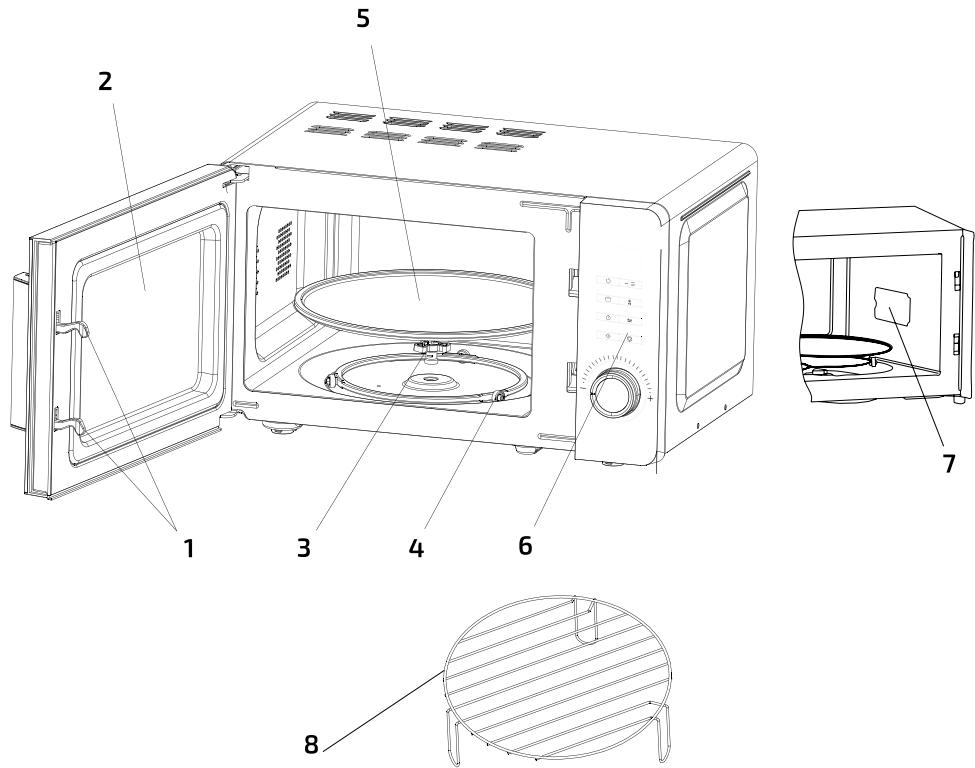



EN

1. Door Safety Lock System
2. Oven Window
3. Rotating axis
4. Roller Ring
5. Glass Tray
6. Control Panel
7. Mica plate
8. Grill rack





2. SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the appliance. Keep this instruction manual for future reference or new users.

- Make sure the contracted electrical power at your house corresponds to the one stated on the product's label and that the wall socket is fitted with an efficient ground contact.
- Do not use outdoors.
- This product is designed only for household use.
- Use this appliance only for intended purposes as described in this manual. Do not use corrosive chemicals or vapours in this appliance, it is not designed for industrial or laboratory use.
- If the door or door seals are damaged, the product must not be operated until it has been repaired by a competent person.
- Do not operate the oven when empty.
- Do not operate this appliance if it has a damaged cord or plug or if it is not operating properly. In case of fault or malfunction, contact the manufacturer or a qualified technician in order to avoid hazard.
- Only use utensils that are suitable for microwave ovens. Make sure utensils do not touch the interior walls during operation.
- Do not use the microwave cavity for storage purposes.
- Do not attempt to deep-fry in this oven.
- In order to reduce fire risk:
 - Do not overcook food.
 - Remove wire twist-ties from paper or plastic bags before placing them inside the microwave.
 - Do not heat liquids or other foods in sealed containers.
 - In case of smoke or fire inside the microwave, keep the product's door closed, turn the product off and disconnect it from the power supply.
- In order to prevent the glass tray from breaking, do not place hot foods, hot utensils, frozen foods or frozen utensils on it.
- After operating, the container is likely to be very hot. Use gloves in order to avoid burns and injuries.
- In Grill or Combination (1, 2, 3) mode, all oven parts will be very hot during and after operation, including door and top part of the microwave. Remember to use handle, gloves or any other type of protection.
- Never use grill rack during microwave function.
- The appliance is not intended to be used by children under the age of 8. It can be used by children over the age of 8, as long as they are given continuous supervision.
- This appliance can be used by children aged 8 and above, and persons with reduced phy-



ENGLISH

sical, sensory or mental capabilities or lack of experience and knowledge, as long as they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

- Supervise young children to make sure that they do not play with the appliance. Close supervision is necessary when the appliance is being used by or near children.
- This product is a Group 2 Class B ISM equipment. The definition of Group 2 which contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment. Class B equipment is suitable for domestic use and in establishments directly connected to a low voltage power supply network, which supplies buildings used for domestic purpose.

WARNING: Technical service and reparations that involve cover removals or exposure to cables must always be carried out by a competent, professional and qualified person.

WARNING: It is important to use materials and containers which are suitable and safe for microwave cooking. The table below shows which materials are suitable and which are not:

| Material of container | Grill | Combi | Microwave | Notes |
|------------------------|-------|-------|-----------|--|
| Heat-resistant ceramic | Yes | Yes | Yes | Never use ceramics which are decorated with metal rim or glazed. |
| Heat-resistant plastic | No | No | Yes | Cannot be used for long time microwave cooking. |
| Heat-resistant glass | Yes | Yes | Yes | |
| Plastic film | No | No | Yes | It should not be used when cooking meat, high temperature might damage the film. |
| Grill rack | Yes | Yes | No | |
| Metal container | No | No | No | Microwave cannot cook through metal. |
| Lacquer | No | No | No | Poor heat-resistance. Cannot be used for high-temperature cooking. |
| Bamboo wood and paper | No | No | No | Poor heat-resistance. Cannot be used for high-temperature cooking. |



3. BEFORE USE

WARNING: never remove the mica plate.

- Take the product out of its package. If the microwave has a protective film, tear it off before starting operation. Check carefully if there is any damage, and if there is, immediately notify the Technical Support Service.
- The product must be placed on a flat, stable and dry place and kept away from corrosive materials, heat and humidity, such as gas burners or water.
- To ensure enough ventilation, minimum distances have to be kept:
 - From the back part to the wall: 10 cm.
 - From the side to the wall: 5 cm.
 - Free distance from the top surface: 20 cm.
 - From the microwave to the ground: 85 cm.
- The product must be placed, at least, at 5 m from the TV, Radio or antenna.
- The product must be placed in such way that the plug is accessible, and must ensure an effective grounding in case of leakage in order to avoid electric shocks.
- The microwave door must be closed in order to operate.
- In case there is any manufacturing rests in the microwave cavity or on the heating elements, leave the microwave open to ensure good ventilation. In such case, it is recommended to heat a glass of water at high power for several times.

4. CONTROL PANEL AND OPERATION

1. Before cooking

- Connect appliance to power outlet. Once it is connected, the LED light will flash 3 times and will require you to introduce cooking function and time (:).

2. Time/weight knob


- Cooking time and food weight can be increased or decreased during operation by turning Time/Weight button.

3. Pause/Cancel button

- Before operation: press once in order to cancel selected program and return to initial stage.
- During operation: press once in order to interrupt operation or press twice in order to cancel pre-set cooking program.

4. Auto reminder

- Once the pre-set cooking process is over, it will say END on the LED display panel and 3 "beep" sounds will be produced. Press Pause/Cancel button or open microwave door in order to stop the alarm, if not, alarm will sound at an interval of 3 minutes.

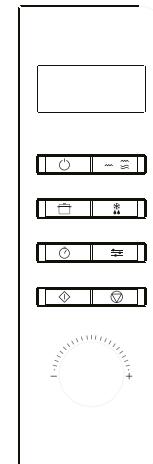



ENGLISH

5. Clock/timer setting

- In order to set clock or timer, press clock button and adjust time by turning the knob clock or anti-clockwise.

| | | | | | | | |
|-------|--|-------------|--|---------------|--|--------------|--|
| Power | | Grill/Combi | | Cook | | Defrost | |
| Clock | | Preset | | Instant/Start | | Pause/Cancel | |

Example: setting time at 12:30.

| | Steps | Display |
|---|---|---------|
| 1 | After powering up, display panel shows colon. | : |
| 2 | Press Clock button once. | 00:00 |
| 3 | Turn Time/Weight knob to set exact hour. | 12:00 |
| 4 | Press Clock button once again. | 12:00 |
| 5 | Turn Time/Weight knob to set exact minutes. | 12:30 |
| 6 | Press Clock button once again to confirm selected time or wait for 5 seconds, time will be set automatically. | |

6. Microwave cooking

- Use this function in order to cook or heat food.
- Press Power button, and select on the LED display panel:

| | |
|-------------------|---|
| High power | 100% microwave power. Perfect for fast and efficient cooking. |
| Medium High power | 80% microwave power. Perfect for medium express cooking. |
| Medium power | 60% microwave power. Perfect for steaming food. |
| Medium Low power | 40% microwave power. Perfect for defrosting food. |
| Low power | 20% microwave power. Perfect for keeping food warm. |

- Microwave function can be set up to 60 minutes.
- Cooking or heating time may be changed during operation. It is recommended to turn or stir food at least once during the process. Press Instant/Start button once to resume operation.
- If food is removed before the pre-set time, make sure you press Pause/Cancel once in order to stop operation and avoid the microwave from operating automatically and empty when



closed.

- When operating at maximum power, the microwave will automatically lower power after a certain time in order to lengthen the appliance's shelf life.

| Example: cooking at P80 for 10 minutes. | | |
|--|---|----------------|
| | Steps | Display |
| 1 | After powering up, display panel shows colon. | : |
| 2 | Select microwave power by pressing Power button consecutively. | 80P |
| 3 | Set cooking time by turning Time/Weight knob. | 10:00 |
| 4 | Press Instant/Start button to start and LED will count down to show running time. | |

7. Grill and Combination

- Press once in order to select grill or combination function. The LED display panel will show 3 modes:

| | |
|-----------|--|
| G (Grill) | Only heating elements will be energized during operation. Perfect for cooking sausages, pork, chicken wings... |
| C.1 | Combines 30% microwave operation and 70% grill operation. |
| C.2 | Combines 55% microwave operation and 45% grill operation. |

| Example: grilling food on C.2 mode for 10 minutes. | | |
|---|---|----------------|
| | Steps | Display |
| 1 | After powering up, LED display panel shows colon. | : |
| 2 | Press Grill/Combi button to select grill mode. | C.2 |
| 3 | Set cooking time by turning the Time/Weight knob. | 10:00 |
| 4 | Press Instant/Start once to start operation. | |

8. DEFROST

- Function designed to defrost different types of food. Press Defrost button once in order to select defrost function. LED display panel will show 3 modes:



ENGLISH

| | |
|-----|---|
| d.1 | Perfect for defrosting meat (0.1 kg-2.0 kg). |
| d.2 | Perfect for defrosting poultry (0.2 kg-3.0 kg). |
| d.3 | Perfect for defrosting seafood (0.1 kg-0.9 kg). |

- It is highly recommended to turn over food during operation in order to obtain uniform effect.
- Usually defrosting will need longer time than cooking food.
- If the food can be cut by knife, the defrosting process can be considered completed.
- Microwave radiation penetrates around 4 cm into most foods.
- Defrosted food should be used as soon as possible, it is not recommended to freeze or put back in the fridge again.

| Example: defrosting 0.4 kg poultry. | | |
|--|--|----------------|
| | Steps | Display |
| 1 | After powering up, LED display panel shows colon. | : |
| 2 | Press Defrost button to set food kind. | d.2 |
| 3 | Turn Time/Weight knob to set food weight. | 0.4 |
| 4 | Start operation by pressing Instant/Start. | |
| 5 | Half way through defrosting process, an alarm will sound in order to remember you to turn over the food. Turn over food, close the door and press Instant/Start button again to resume defrosting process. | |

9. Auto cooking

- The microwave has 8 default programs, select the appropriate one according to the food type and weight. Press Cook button once and LED display panel will show different programs, choose between:

| Display | Kind | Dish |
|----------------|-------------|---|
| A.1 | Popcorn | Perfect for cooking 85 g of popcorn. |
| A.2 | Popcorn | Perfect for cooking 100 g of popcorn. |
| A.3 | Pizza | Perfect for heating a 0.15 kg pizza slice. |
| A.4 | Liquids | Perfect for heating a 250-ml liquid cup. The liquid temperature must be about 5-10. Do not seal the liquid container. |



| | | |
|-----|---------|---|
| A.5 | Liquids | Perfect for heating a 500-ml liquid cup. The liquid temperature is about 5-10. Do not seal the liquid container. |
| A.6 | Potato | Perfect for cooking potato cubes (5 mm height and width). Maximum weight of about 0.45 kg. Place potatoes on a large tray or container and cover it with a thin film to prevent water loss. |
| A.7 | Potato | Perfect for cooking potato cubes (5 mm height and width). Maximum weight of 0.65 kg. Place potatoes on a large tray or container and cover it with a thin film to prevent water loss. |
| A.8 | Fish | Perfect for steaming 0.45 kg of fish. |

- Before cooking food, its temperature must be about 20-25 °C. Higher or lower temperature of the food before cooking would require increasing or decreasing cooking time.
- Food's temperature, weight and shape will strongly influence the microwave effect on the cooking process. Adjust time in order to obtain the best result.

| Example: steaming 0.45 kg of fish. | | |
|---|--|----------------|
| | Steps | Display |
| 1 | After powering up, LED display panel shows colon. | : |
| 2 | Press Cook button to set cooking mode. | A.8 |
| 3 | Start cooking by pressing Instant/Start button and LED will count down to show running time. | |

10. Automatic starting (delayed function)

- This function allows you to set cooking program and time, so at the pre-set time, the pre-set program will automatically start operating. In order to activate this mode:
 - Set timer.
 - Set cooking program.

| Example: Now it is 12:30 and you want to program the microwave at 100 P, for 9 minutes and 30 seconds at 14:20. | | |
|--|---|----------------|
| | Steps | Display |
| 1 | After powering up, LED display panel shows colon. | : |



ENGLISH

| | | |
|-----|--|-------|
| 1.1 | Press Clock button. | 00:00 |
| 1.2 | Set hour by turning Time/Weight knob. | 12:00 |
| 1.3 | Press Clock button again to confirm hours. | 12:00 |
| 1.4 | Set minutes by turning Time/Weight knob. | 12:30 |
| 1.5 | Press Clock button once or wait for 5 seconds and the timer will set automatically. | 12:30 |
| 2 | Set cooking program and time. | |
| 2.1 | Select power by pressing Power button. | 100P |
| 2.2 | Turn Time/Weight knob to set cooking time. | 9:30 |
| 3 | Press Preset button once to return to current clock. | |
| 3.1 | Set hour by turning Time/Weight knob. | |
| 3.2 | Press Preset button again to confirm hour. | |
| 3.3 | Set minutes by turning Time/Weight knob. | 14:20 |
| 4 | Press Preset button to confirm delayed cooking program. Now the program has been activated. Operation will start at 14.20. | |
| 5 | You may check the pre-set starting time by pressing Preset button. | |

11. Multi-sequence cooking

- In order to obtain the best result, some recipes require of different steps. This function allows you to personalize and to combine your cooking processes.

| Example: cooking food at 100 P, for 3 minutes, then grilling for 9 minutes. This is 2-sequence setting. | | |
|--|---|----------------|
| | Steps | Display |
| 1 | Select 100 P microwave for 3 minutes | |
| 1.1 | Press Power button to select power level | 100P |
| 1.2 | Turn Time/Weight knob to set cooking time | 3:00 |
| 2 | Grill for 9 minutes | |
| 2.1 | Press Grill/combi button to select grill mode | G |





| | | |
|-----|---|------|
| 2.2 | Turn Time/Weight knob to set cooking time | 9:00 |
| 3 | Start operation by pressing Instant/Start | |

- When microwave function is finished, grilling function will operate automatically.
- Maximum 4 sequences can be set at a time. If more sequences are required, repeat stated steps.

12. Child-lock function

- Security system that blocks control panel to ensure small children do not use the appliance without supervision. How to use it:
 - Activate lock: hold Pause/Cancel button for 3 seconds.
 - Cancel lock: hold Pause/Cancel button for 3 seconds.

5. COOKING TIPS

- Food arrangement: place the thickest food parts towards the edge of the glass tray. If possible, do not overlap food.
- Watch cooking time: cook for the shortest amount of time at first, and add more minutes in case it is necessary. Over-cooking may result in smoke and burns.
- Cover food while cooking: covering the food you are going to cook avoids spattering and allows a more even cooking.
- Flip or stir food once during the cooking process.
- Respect pre-heating time. Pre-heating time specified on the food's label must not be exceeded.

6. CLEANING

WARNING: The product must be cleaned and any food deposits must be removed regularly.

- Remove the power cord from the wall socket before cleaning. Do not immerse the product in water or any other fluid during cleaning.
- Failure to maintain the product in clean conditions could lead to surface deterioration and could adversely affect the product's shelf life, resulting in possible hazard.
- Never use strong detergents, gasoline, abrasive powder or metal brush to clean any part of the product.
- Do not remove the mica plate.
- When the microwave has been used for a long time, some strong odours may arise from inside. In order to get rid of them, follow the steps below:
 - Place several lemon slices in a cup and heat them at high power for 2 or 3 minutes.
 - Place a cup of red tea inside the microwaves and heat it at high power.
 - Place orange peels inside the microwaves and heat it at high power for 1 minute.
- Use a dampened soft cloth to clean enclosures, door, interior walls and the glass tray.



ENGLISH

7. TECHNICAL SPECIFICATIONS

Model: ProClean 5120 Mirror

Product reference: 01533

Rated Microwave power output: 700 W

Rated Grill power output: 800 W

Voltage and frequency: 230 V, 50 Hz

Capacity: 20 L

Made in China | Designed in España

8. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly. If the product has a built-in battery or uses batteries, they should be removed from the appliance and disposed of appropriately. Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

9. TECHNICAL SUPPORT SERVICE AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.


The warranty will not cover the following situations:

- The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.
- The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.
- Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at **+34 963 210 728**.



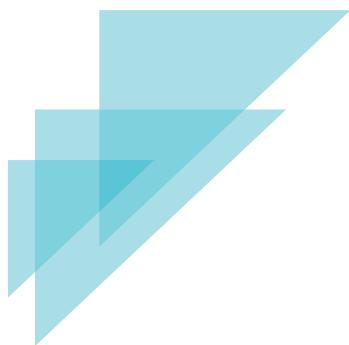

www.cecotec.es

Grupo Cecotec Innovaciones S. L.
C/de la Pinadeta s/n, 46930
Quart de Poblet, Valencia, Spain

