



To Change code:

Enter the management code (the initial management code 123456), enter the last key of the code (for example 6) while holding down do not let go, the first light flashes twice, the buzzer will beep two times, do not release until three seconds later, and then flash 2 times, the buzzer beep 2 times, lights off, release the last button.

Press 1 to modify the first set of user code (if press 2, it's modify the second user code, the user code can modify five sets of code), lights flash twice with twice beep. Enter the new six-digit password twice.

Change management code:

Enter 0 six times, and then enter the original management code (the initial management code 123456), then enter the new code twice.

Double Open Settings

Enter the management code (the initial management code 123456), hold down the last key of the code once press it, the light flashes twice, and 3 beep sound, do not release the button until reach three seconds, and then flash 2 times, two tweets sound, lights off, release the key.

Press the key 6, the lamp flashes twice with 2 times beep.

Single open setting (factory default single turn)

Enter the management code (the initial management code 123456), enter the last key of the code while holding down, do not let go, the light flashes twice with 2 beeps, do not release until reach three seconds, and then flash 2 times, two tweets sound, lights off, release.

Press key 7, the lamp flashes twice with 2 times beep.

Wrong code alarm time setting (Penalty time)

Enter the management code (the initial management code 123456), enter the last key of the code while holding down do not let go, the light flashes twice with 2 beeps, do not release until