

TOASTER

USER MANUAL

MT-RP2L22W

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details.

The diagram above is just for reference. Please take the appearance of the actual product as the standard.

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS







THANK YOU LETTER	01
SAFETY INSTRUCTIONS	02
SPECIFICATIONS	04
PRODUCT OVERVIEW	05
OPERATION INSTRUCTIONS	06
CLEANING AND MAINTENANCE	09
TROUBLESHOOTING	10
TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT	11
DATA PROTECTION NOTICE	12

SAFETY INSTRUCTIONS

Intended Use


The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

Explanation of Symbols

	Danger This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.
	Warning of electrical voltage This symbol indicates that there is a danger to life and health of persons due to voltage.
	Warning The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.
	Caution The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.
	Attention The signal word indicates important information (e.g. damage to property), but not danger.
	Observe instructions This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

Safety Instructions

 
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance must not be immersed.
- Do not use outdoors
- The appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shop, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- Appliances are not intended to be operated by means of an external timer or separate remote-control system.
-  The surface are liable to get hot during use.

SPECIFICATIONS

Product Model	MT-RP2L22W
Voltage	220-240V-
Frequency	50/60Hz
Power	800-950W

PRODUCT OVERVIEW

Parts Name

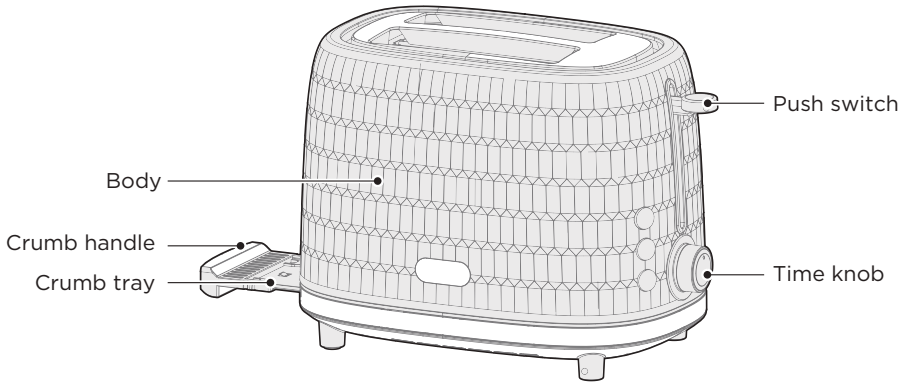

● NOTE

 
Pictures in the manual are for reference only, and real objects within the packaging box will prevail in the end.

OPERATION INSTRUCTIONS


Instructions for Use

Tips


- Remove the dust cover before use.
Adjust the time knob, which has 7 levels available; the larger the number, the more brown the bread surface is.
 - After setting the browning degree of the bread, you can put the bread in the oven.
 - Turn on the power and press the push switch to start baking.
 - After baking, the bread will automatically pop up and the product will stop working.
 - To continue baking, please repeat the above operations. If you don't need to continue baking, pull out the plug and store the product after it has cooled.
1. Adjust the time knob to select the browning degree of the bread, and then put in the bread.

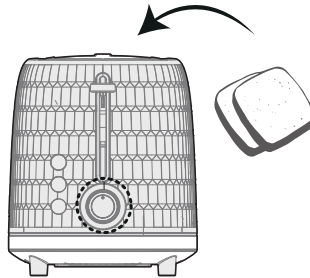

  
2. Turn on the power, and press the push switch to start baking.

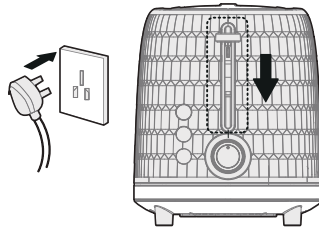

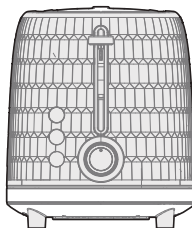

 
3. After the baking is completed, the bread pops out automatically and the product stops working.

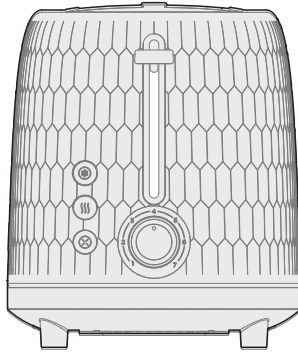

Function Description



Level	1	2	3	4	5	6	7
Time	1 min 20 sec	1 min 40 sec	1 min 50 sec	2 min	2 min 20 sec	2 min 40 sec	3 min

Icon	Button	Button description
	Defrost	Frozen bread, thawed before baking, tastes better. The working time is longer than normal baking time.
	Reheat	For the cooled bread, use this function button to restore the warm taste after baking. The working time is shorter than the normal baking.
	Cancel	Press this button, the bread will pop up automatically and the product will stop working.

NOTE

- The above baking time is tested at room temperature 25°C and rated for 2 slices of bread. The actual time may be different.
- The size and thickness of the bread have an effect on the baking time.

Explanation of Symbols for the Function Keys

This Symbol is used to Cancel toasting.

Operation

1. Only connect the appliance to a correctly installed safety plug (220-240V- 50/60Hz).
2. Turn the selector switch clockwise to set the toasting level from the lightest stage 1 to the darkest stage 7.
If in any doubt, start with the lower setting (the black mark on the selector switch shows you the setting).
3. Insert sliced bread into the toasting slot and push down the lever until it locks.
4. The appliance starts toasting. The appliance switches off immediately once the set degree of toasting has been reached. The toast then pops up automatically.
5. The appliance has heat-insulated casing. However, as metal parts still heat up during operation, please allow cooling down before you put it away.
6. The toaster only allowed 2 slices of the toaster to be toasted at a time.

Guarantee

We accept a guarantee period of 12months for the appliance we have sold from the date of purchase (receipt).

CLEANING AND MAINTENANCE

- Before cleaning the appliance, ensure it is disconnected from the power supply and has cooled completely.
- To avoid the risk of electric shock, do not clean the appliance with water and do not immerse it in water.
- Do not use abrasives or harsh cleaning solutions.
- The body of the appliance may be wiped with a dry or slightly damp lint-free cloth.

Crumb Tray


- Crumbs and baking residues are collected in the crumb tray.
- Pull out the tray and empty it regularly. Make sure to put the crumb tray back in place before using the toaster again.
- Repairs can be carried out by licensed dealers or the repair services after the end of the guarantee period, but are subject to charge.

TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the table below carefully in order to save your time and money that may cost for calling to the service center.

Abnormal phenomena	Cause	Solution
Not work	<ul style="list-style-type: none">The plug is not inserted properly.	Check plugs
	<ul style="list-style-type: none">Loose connecting wire.	Send to the after-sales service point for maintenance
Other problems	<ul style="list-style-type: none">Other faults of the product.	Send to the after-sales service point for maintenance

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

 Midea logo, word marks, trade name, trade dress and all versions there of are valuable assets of Midea Group and/or its affiliates (“Midea”), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.

All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information are provided on request. You can contact our Data Protection Officer via **MideaDPO@midea.com**. To exercise your rights such as right to object your personal data being processed for direct marketing purposes, please contact us via **MideaDPO@midea.com**. To find further information, please follow the QR Code.



make yourself at home



www.midea.com

© Midea 2022 all rights reserved