

COFFEE MACHINE

USER MANUAL

MA-D1502W2

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details. The diagram above is just for reference. Please take the appearance of the actual product as the standard.

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS








THANK YOU LETTER	01
SAFETY INSTRUCTIONS	02
SPECIFICATIONS	06
PRODUCT OVERVIEW	07
OPERATION INSTRUCTIONS	08
CLEANING AND MAINTENANCE	10
TROUBLESHOOTING	11
TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT	12
DISPOSAL AND RECYCLING	13
DATA PROTECTION NOTICE	14

SAFETY INSTRUCTIONS

Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

Explanation of Symbols

	Danger This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.
	Warning of electrical voltage This symbol indicates that there is a danger to life and health of persons due to voltage.
	Warning The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.
	Caution The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.
	Attention The signal word indicates important information (e.g. damage to property), but not danger.
	Observe instructions This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.
	Anti scalding sign The surface are liable to get hot during use.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

CAUTION

Safety Instructions

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance must not be immersed.
- **WARNING:** Do not use the appliance if the surface is cracked.
- The heating element surface is subject to residual heat after use.
- Do not use outdoors.
- The appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shop, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- The coffee-maker shall not be placed in a cabinet when in use.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- **WARNING:** Misuse may cause potential injury.
- **Warning:** Avoid spillage on the connector.
- Do not disassemble, repair or modify this appliance.
- Do not damage the power cord or power plug.

- Do not use the appliance if the power cord or power plug is damaged or the power plug is loosely connected to the outlet.
- Do not plug or unplug the power plug with wet hands.
- Do not immerse the appliance, power cord and power plug in water or splash it with water.
- Do not let power cord hang over edge of table or worktop, or touch hot surfaces.
- Do not allow infants and children to play with packaging material.
- Do not touch or get your face close to places where steam is coming out.
- Do not use the appliance without the glass jug or with other jugs than the one provided.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use inferior socket, otherwise easily cause a fire.
- Do not place the appliance near the stove, otherwise easily cause a fire.
- Keep tabletop on which the appliance is placed clean and avoid oil pollution.
- The best range of the appliance and other products is 30cm above.
- Always ensure the appliance is switched off and unplug the power plug from outlet when the appliance is not in use, before moving and cleaning.
- Always keep the infants and children away from the appliance including power cord.
- Discontinue using the appliance immediately and unplug in the unlikely event that this appliance stops working properly.
- Make sure the voltage indicated on the label of the appliance is the same as your local supply. Also avoid plugging other devices into the same outlet to prevent electric overheating. However, if you are connecting a number of power plugs, make sure the total wattage does not exceed the rated wattage of the outlet.
- Insert the power plug firmly.


- Dust off the power plug regularly.
- Never leave the appliance unattended during operation.
- Do not use the appliance for any purpose other than those described in these instructions.
- Do not touch the hot surface such as the warming plate or top surface of the main unit while appliance is in use or immediately after use.
- Do not move the appliance when the glass jug is in place.
- Do not remove the glass jug while brewing.
- Do not use the appliance on following places.
- Do not move the appliance by holding the lid.
- Do not open the lid while brewing and immediately after use.
- Do not insert any object in the gaps.
- Do not use the appliance near a wall, furniture, or in enclosed spaces such as a built-in cupboard.
- Make sure to hold the power plug when unplugging the power plug.
- Never pull on the power cord.
- Let the appliance cool down before handling, moving or cleaning.
- Beware not to be tripped over or get caught in the power cord while in use.
- Make sure to clean the appliance after every use.
- When handling the glass jug with hot coffee is in, do not open the glass jug lid. Hot liquid may spurt out or drop on your hand.
- Do not fill the water tank other than water, such as milk or hot water. (It may cause malfunction.)
- Do not place the glass jug on any heat sources or in microwave. (It may cause breaking the glass jug.)
- Do not turn on the switch without water. (It may cause malfunction.)
- Cleaning and user maintenance shall not be made by children without supervision.
- The product surfaces are liable to get hot during use.

SPECIFICATIONS

Product Model	MA-D1502W2
Voltage	220-240V-
Frequency	50/60Hz
Rated Power	920-1080W
Max. amount of water	1.5L

PRODUCT OVERVIEW

Part Name

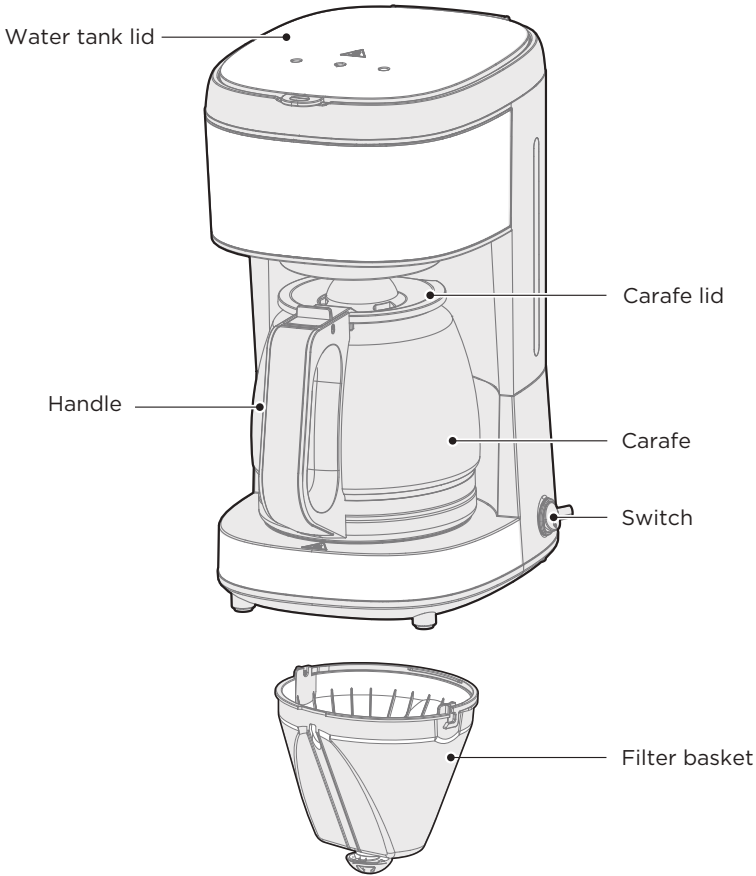

NOTE

All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject.

OPERATION INSTRUCTIONS

Brewing Coffee

- Connect the plug to the socket.
- Before using for the first time, Advised you to wash the machine by brewing coffee mode, of course ,without coffee powder!

Prepare Your Coffee

- Open the top lid and carefully fill the water from the carafe into the water tank. You can read the water level on the water gauge.
- Place filter paper into the funnel.
- Scoop the coffee powder into the filter paper.
- Close the top lid. Note that the lid should be tightened correctly.
- Ensure that the carafe is placed properly in its position.
- Press the Switch to “ON” side and the appliance start working. Then the red light will go on.
- When the brewing process has completed, you can remove the carafe from the appliance to enjoy your coffee.

How to Use

NOTE

- When filling ground coffee, be sure not to fill it in the water tank. (It may cause malfunction.)
- Do not fill water more than scale 12.
- Do not fill the water tank with hot water. (A lot of steam may spurt out.) Do not add the water while brewing.

Ground for brewing

1 cup approximately 125 mL

Brewed Coffee	Ground Coffee (g)
4 cups	22 g
6 cups	33 g
8 cups	44 g
10 cups	55 g
12 cups	66 g

NOTE

- When brewing process is complete, wait a moment until hot coffee has run through the filter/basket and into the glass jug.
- Wait a while to open the lid immediately after use. Steam may come out from the unit. (It may cause a burn.)
- Coffee is hot, remove the glass jug slowly. (Hot coffee may spill out.)
- When handling the glass jug with hot coffee is in, do not to open the glass jug lid. Hot liquid may spurt out or drop on your hand. (It may cause a burn.)
- When removing the glass jug, pull it toward to the handle.
- To keep warm coffee, leave the switch on position. For better taste, keeping it warm for long time is not recommended.

After use

- Unplug the coffee maker after use. When you have remaining water in the water tank.
- Turn on the coffee maker and discharge water into the jug, then throw it away.

Functional Description

- Anti-drip function: Consumer can take out the carafe during cooking and the Anti-drip Valve will function and no coffee will drip out. Dripping will start again after located the carafe in position on the plate.
To prevent overflow from filter, never take the carafe away over 20 seconds. If needed, turn off the appliance after take off the carafe.
- Auto Keep Warm: If the coffee machine is not switched off manually, it will keep the coffee warm automatically.
- Temperature Control device: When the appliance is in 'ON' Position without water in tank or after finished brewing water, the temperature will increase and the Temperature Control device will cut off the power automatically at the required temperature.
- Thermo fuse device: This appliance equipped with a second temperature protection. In case the Temperature Control device malfunction, the Thermo fuse device will cut off the power. Then unplug the appliance at once.

CLEANING AND MAINTENANCE

- Be sure to unplug the appliance from electrical supply source before cleaning.
- Wait for the whole appliance cool down before cleaning.
The appliance should be cleaned with a soft cloth moisten with mild soap and wipe dry.
The carafe can be cleaned with warm water, some washing-up liquid and a soft brush.
Do not clean the carafe in a dishwasher.

Descaling

To make sure that your coffee maker goes on producing perfect coffee you will need, from time to time, to descale it. Frequency will depend on how hard the water is in your area, and how often you use the coffee maker. If you use your coffee maker once or twice a day, the following guidelines for descaling should be used:

- Soft water, every 6 months.
- Medium water, every 2-3 months.
- Hard water, every 6-8 weeks.

SPECIAL NOTE

- Never immerse the whole product into Water.
- Do not disassemble the product. The product should only be serviced by the appointed Service Agent or Centre.
- Do not repair the power cord by yourself or use the product any more in case the power cord is damaged, and please contact the appointed Service Agent or Centre immediately.

ENVIRONMENTAL TIP

- An electronic appliance should, when it is no longer capable of functioning be disposed with least possible environmental damage.
The appliance should be disposed according to the local regulations in your municipality, in most cases you can discharge the appliance at your local recycling center.
- Grounds and coffee filter can be disposed via a compost container.


TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the table below carefully in order to save your time and money that may cost for calling to the service center.

Please check the following points before arranging for service.

Problem	Solution
Ground coffee is spilled from the filter.	<ul style="list-style-type: none">• Ground coffee was added more than 10 scoops (level off) with the measuring spoon provided. → Do not add more than 10 scoops (level off) of ground coffee with the measuring spoon provided.
Brewing speed is slow or coffee is not coming out.	<ul style="list-style-type: none">• Scale adheres in the water pipe in the water tank. → Clean the water tank with citric acid.
Coffee grounds appear in a cup.	<ul style="list-style-type: none">• The filter has been used for finely ground coffee. → Try using a paper filter instead of the filter. (We recommend using #4 cone paper filter.)

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

 Midea logo, word marks, trade name, trade dress and all versions thereof are valuable assets of Midea Group and/or its affiliates (“Midea”), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.


All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

DISPOSAL AND RECYCLING

Important instructions for environment

Compliance with the WEEE Directive and Disposing of the Waster Product:
This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

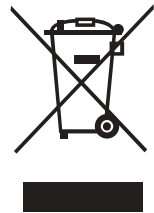

Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information are provided on request. You can contact our Data Protection Officer via **MideaDPO@midea.com**. To exercise your rights such as right to object your personal data being processed for direct marketing purposes, please contact us via **MideaDPO@midea.com**. To find further information, please follow the QR Code.



make yourself at home



www.midea.com

© Midea 2022 all rights reserved