



Installation diagram (Subject to actual size)

1 Insert the 5 castors into the base, then place the gas lift into the center hole of the base.	2 Use 2 M8*25 screws to connect the armrest and tail plate.	3 Use 4 M8*40 screws to connect the tailgate and seat back.
4 Align the upper part of the assembled chair and insert the air pressure rod.	5 Insert the headrest into the back of the chair and the chair installation is complete.	



Accessories list (based on actual size; each model of screws and washers has one spare)

Castor*5pcs	Chair base*1pc	Gas lift*1	Armrest*1
Seat cushion*1	Backrest*1	Wrench*1	Headrest*1
M8*25 screws 2+1 pcs	M8*40 screws 4+1 pcs		

Note: Before installing the chair, please sort the screws and measure the length of the screws for installation.

PRODUCT INSTALLATION GUIDE

M57C





Functional illustration (subject to actual size)

The headrest bracket connector can be adjusted downward 22°




The headrest can be adjusted up and down 22° each (2 levels of adjustment)

Adjustable headrest height
(8 levels of adjustment)

Adjustable lumbar pillow
front and back and lumbar
pillow height

Adjustable armrest height
at the push of a button
The armrest surface can
be pushed left and right
The armrest surface can
be pushed forward and
backward

Pull out the footrest
and turn it up to use
(Without footrest version have no footrest here)

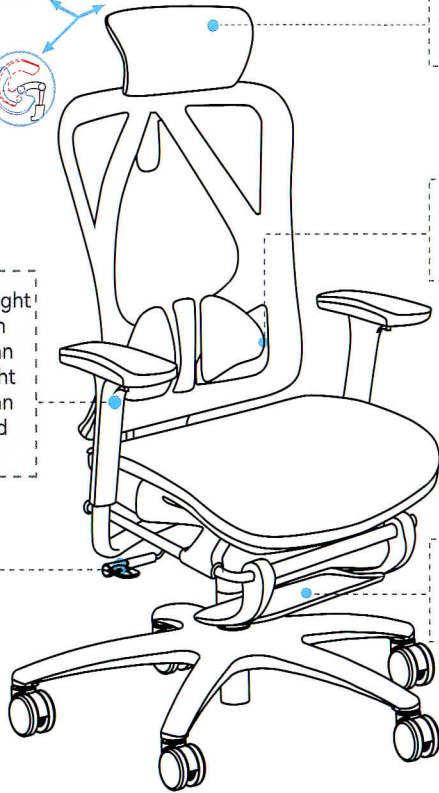

Adjustable chair lifting handle Pull out to tilt back,
push to lock and tilt back The reclining angle
provides three gear options.