 


AKAVEE

INSTRUCTION MANUAL

Mini Bar Fridge

BC-70G

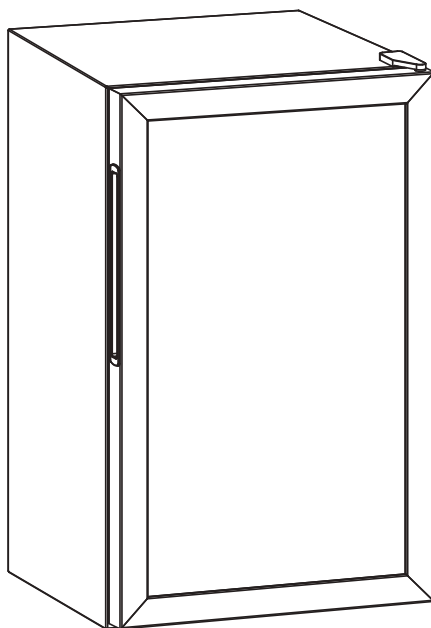

Read before application and keep the introductions cautiously.

IMPORTANT SAFETY INSTRUCTIONS

WARNING	To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:
♦Read all instructions before using the appliance. – WARNING: The system contains refrigerant under high pressure. Do not tamper with the system. It must be serviced by suitably qualified persons only. – WARNING: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. – WARNING: Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in. – WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer. – WARNING: Do not damage the refrigerant circuit. – WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer. –WARNING: In order to reduce flammability hazards the installation of this appliance must only be carried out by a suitably qualified person. –WARNING: The refrigeration system is under high pressure. Do not tamper with it. Contact qualified service personal before disposal. ♦Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. – WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.	

– WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Placed against a wall with a free distance not exceeding 75 mm.

Illuminating lamps can not be replaced.

The A-weighted emission sound pressure level is 40 dB(A).



Warning: Risk of fire / flammable materials

♦**WARNING: Risk of child entrapment.**

♦This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

♦Children should be supervised to ensure that they do not play with the appliance.

♦Cleaning and user maintenance must not be performed by children without supervision.

♦To avoid the possibility of child entrapment; please take the following precautions before disposing of the appliance.

- Remove all doors from the unit.
- Leave the shelves in place so that children cannot easily climb inside.

-Save these instructions-

WARNING

This appliance should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which is compatible with standard three-prong wall outlets to minimise the possibility of electrical shock.

This refrigerator requires a standard 220-240V~/50-60Hz electrical outlet with three-prong grounded socket.

Do not, under any circumstances, cut or remove the third ground prong from the power cord supplied.

Improper use of the grounded plug can result in the risk of electrical shock.

This appliance is not designed to be used with an inverter.


The cord should be secured behind the appliance and not left exposed or dangling, so as to prevent accidental injury.

Never unplug the appliance by pulling the power cord. Always grip the plug firmly and pull straight out from the socket.

Do not use an extension cable with this appliance. If the power cord is too short, have a qualified electrician or service technician install an outlet near the appliance. Use of an extension cord can negatively affect the performance of the unit.

- **WARNING: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**

 FIGURE :

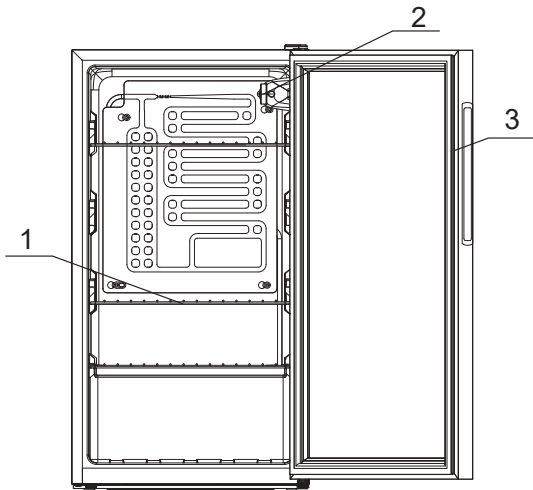

- 1. Removable shelf
- 2. Temperature control knob
- 3. Door seal (gasket)

INSTALLATION METHOD:

1. The ground should be level, solid and dry.
2. Avoid placing upside down or horizontally. The angle should be not more than 45° between the cabinet and the ground if inclination is necessary.
3. Leave a space of 30cm above the appliance and 5cm on either side and behind the appliance, otherwise air will not be able to circulate properly, reducing the freezing effect, and increasing energy consumption.
4. Place your appliance in a space where there is less humidity, so as to improve electronic insulation and avoid rust.
5. Avoid placing the appliance near heat sources (stove, warmer etc.) or in direct sunlight.

HOW TO USE THE APPLIANCE:

1. When operating the appliance for the first time, leave the empty appliance to operate until it stops, which will usually take 2-3 hours (10 hours in summer), then adjust the thermostat knob.
2. Install the accessories in the appropriate positions according to the diagram.
3. Turn the thermostat dial to between 3 and 4; insert the power plug into the socket.
4. Pour cooled boiled water into the ice tray up to the water level line. Put the ice tray into the evaporator. Turn the thermostat dial to 7 above the ice tray. Ice takes 2 - 3 hours to form. Slightly rotate the ice tray when removing the ice.
5. Defrosting is needed when the frost layer on the evaporator reaches 3 - 4mm. First, disconnect from the power supply, then open the door, take out the ice tray and all food. The appliance will begin to defrost. Wipe and dry the evaporator after defrosting has finished. Then return the food to its place.

Attention!

1. When storing food, wrap it in plastic wrap or store it in a container with a lid; this prevents odours and keeps it dry.
2. There should be sufficient space between each item of food; do not store too much food.
3. To save electricity, do not open the door too frequently.

MAINTENANCE

- 1. Periodical maintenance may prolong the appliance's life. For safety reasons, the power cord must be disconnected before maintenance.
- 2. Abrasive powder, detergent powder, sodium carbonate, benzene, petrol, acid alcohol hot water etc. must not be used to clean the appliance; these may damage the paint coat and the plastic.

Safety inspection after maintenance


- 1. Power wire: broken or not?
- 2. Power plug: hot abnormal or not?
- 3. Power plug: plug properly inserted or not?

Problem	Check:
No refrigeration	Is there an interruption to the power supply? Is the voltage sufficient? Has the fuse blown?
Refrigerating effect insufficient	Is the thermostat in the proper position? Is there sufficient space around the appliance? Is the door being opened too frequently? Is the appliance exposed to direct sunlight or too close to heat sources? Is too much food being stored or is the temperature of food stored too high?
Food frozen inside the appliance	Is the thermostat in the proper position? Is too much food being stored?
Unusual noises	Is the appliance positioned on a flat surface? Is the appliance in contact with other items?
Compressor in constant operation	Is too much food being stored? Is the door not closed tightly or being opened too frequently?

Replacing illuminating lamp :

Illuminating lamps can not be replaced.

 it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.




Door Reversal


WARNING: Unplug the refrigerator before performing door reversal process. Failure to unplug may result in serious injury or death from electrical shock.

CAUTION: To avoid personal injury and property damage, obtain assistance from another person to perform the door reversal process.

 
Reversible door hinge allows you to open from the left or right side.

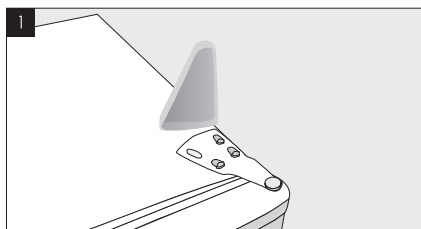

 
1. Using a flat blade screwdriver, remove the plastic hinge cover from the top of the door. Be careful not to scratch freezer surface.

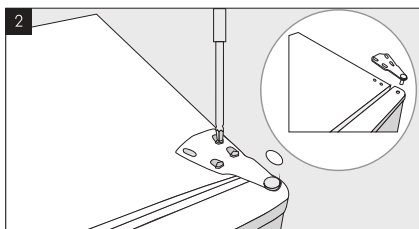

 
2. Using a slotted screwdriver, unscrew the three screws from the top hinge bracket. Remove the bracket. Lift and remove the door from the bottom hinge pin. Set door safely aside.

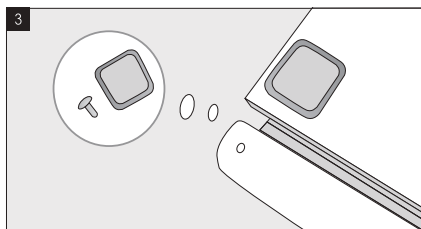

 
3. On the opposite side of the unit, use a thin-bladed tool to carefully pry up and remove the hole plug from top of door and plastic square cover from top of cabinet. Insert plug and cover into provided hole on opposite side of door and into holes exposed by removal of top hinge bracket.

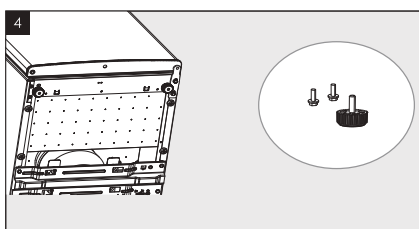

 4. Unscrew and remove the leveling foot from the bottom hinge bracket. Using a slotted screwdriver, remove the two screws attaching the bottom hinge bracket to the cabinet. Unscrew the foot from the other side of cabinet. Attach bracket and feet to opposite sides from which removed.

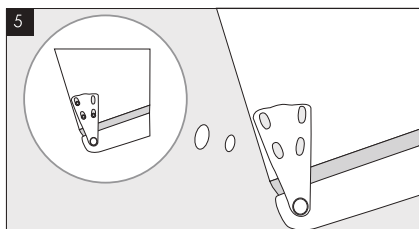

 5. Mount the door onto the bottom bracket. Insert top bracket hinge pin into hole in top of door. Use the three previously removed screws to attach back of top bracket to cabinet.

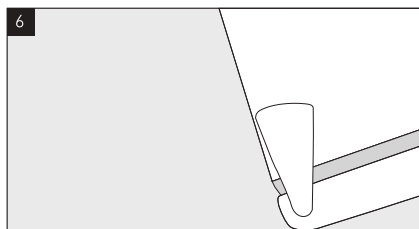

6. Replace the plastic hinge cover over the top hinge bracket.

7 Check that the door is aligned horizontally and vertically with the the perimeter of the cabinet opening before finally tightening the top hinge. After tightening, adjust the leveling feet if necessary to align the door evenly with the floor.

CAUTION: If the freezer has been placed in a horizontal or tilted position for ease of doing reversal, wait 24 hours before plugging it in. Plugging in sooner may result in permanent damage to cooling system.


Main technical data:

Model	BC-70G
Climate Type	T
Electrical Shock Protect Mode	I
Total Net Capacity (L)	70
Rated Voltage (V)	220-240~
Rated Frequency (Hz)	50-60
Rated Current (A)	0.7
Max. Lamp's Rated Power (W)	1
Refrigerant	R600a
Refrigerant Weight(g)	18
Vesicant	Cyclopentane
Net Weight (kg)	18
Noise dB (A)	40
Overall Dimension(mm) [Width Depth Height]	453*420*690

Notice:

All data covered by this catalogue are given as general information only; our company reserves the right to change or modify its product line without prior notices.

 Circuit diagram:

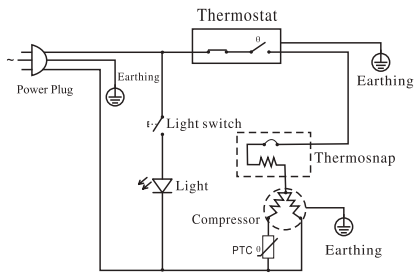

Packing list:

Number	Name of parts	BC-70G
1	Water tray	1
2	Wire Shelf	3
3	Instruction manual	1

Correct disposal of this product:



To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.