


Instruction Manual

2-IN-1 Sandwich Maker Panini & Waffle

Model: AKV-USW406

Technical Data:

220-240V~ 50/60Hz; 750W

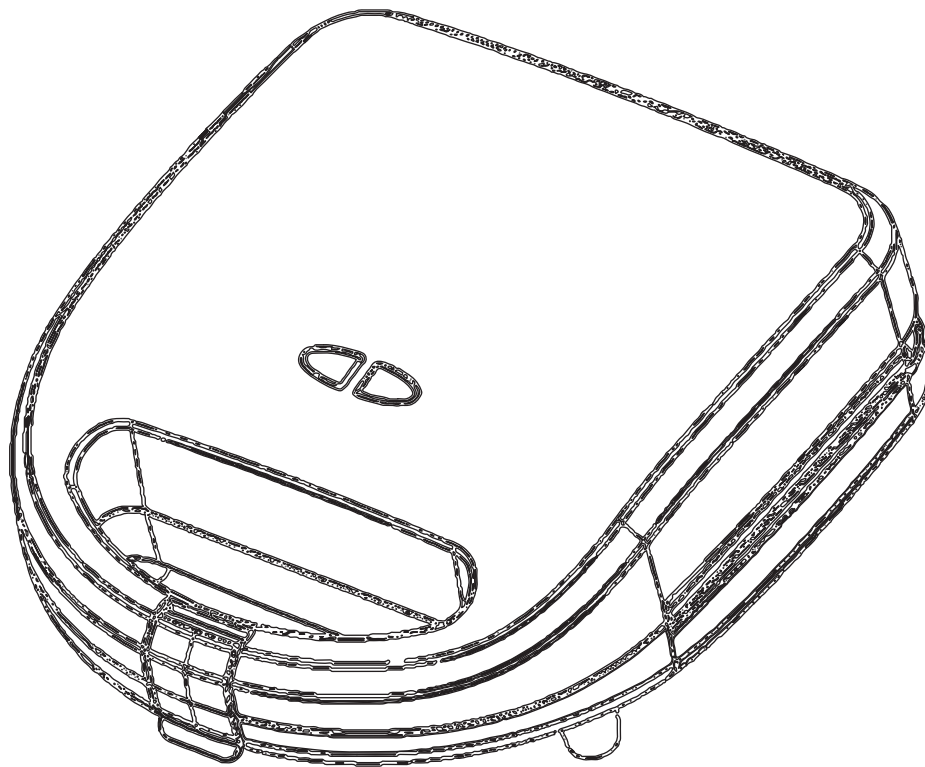

READ AND SAVE THESE INSTRUCTIONS

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are old than 8 and supervised.
2. Keep the appliance and its cord out of reach of children less than 8 years
3. The appliance are not intended to be operated by means of an external timer or separate remote-control system
4. The temperature of the outer surface may be high when the appliance is working. Please do not touch outer surface by you hand
5. Never use the appliance if the supply cord is damaed ,it must be replaced by the manufacturer ,its service agent or similarly persons in order to Avoid a hazard.

CLEANING AND MAINTENANCE INSTRUCTIONS

1. Be aware that parts of the appliance become very hot during operation. Make sure that the appliance is switched off, unplugged and wait for it to completely cool down before cleaning or storage
2. Wipe the cooking surface with a soft damp cloth every time after use. If it is difficult to remove residues, use a little oil can soften it
3. Do not use any spray-on metal objects as they would damage the non-stick coating
4. In case of any problem, please contact the authorized service center for help


GENERAL SAFETY INSTRUCTIONS

1. Read this instruction manual very carefully before operating the appliance for the first time
2. Keep this instruction manual, the packing and your receipt. If you give or sell the product to a third parties, please make sure that you also hand out this instruction manual.
3. This appliance is household use only
4. Do not use the appliance outdoors. keep it away from sources of heat .direct sunlight .open fire or high humidity and never operate it with wet hands
5. Always pull the plug from the power socket when you do not use and clean it.
6. Never leave the appliance unsupervised. To protect children from the dangers posed by electrical appliance .make sure that cables is not hanging down and children do not touch to the appliance
7. Do not immerse the appliance to water or other liquids.
8. Never use the appliance if it is damaged
9. If the supply cord is damaged .it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
10. Do not try to repair the appliance on your own .Always contact our service agent to repaired or changed appliance
11. The appliances is not to be used by children(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 12.This appliances is intended to be used in household and similar applications such as:--kitchen areas.
13. **WARNING: This electrical appliance contains a heating function surfaces, also different than the functional surfaces. can develop high temperatures. Since temperatures are differently perceived by different persons, this equipment shall be used with CAUTION. The equipment shall be touch only at intended handles and gripping surfaces, and use heat protection like gloves or similar .Surfaces other than intended gripping surfaces shall get sufficiently time to the cool down before getting touched**

SAFETY INSTRUCTIONS

1. Always operate the appliance on an even surface . Make sure that there is enough ventilation, so that the hot steam can disappear.
2. To avoid the danger of fire ,never leave the appliance unattended.
3. Before connecting with supplier mains, the heating plates must be in a closed position.

PARTS IDENTIFICATION

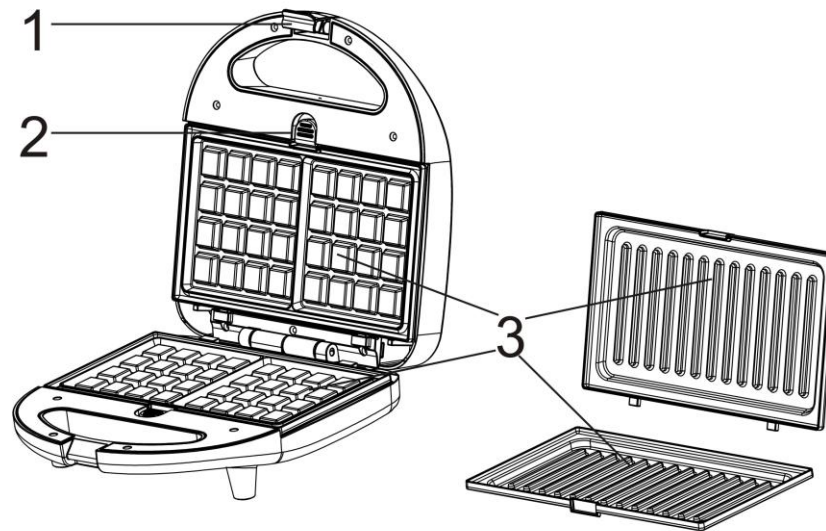

1. Lock
2. Spring latches
3. Removable cooking plates

OPERATING INSTRUCTIONS

1. Uncoil the cable completely
2. Check if the heating plates are clean and dust-free. if necessary ,wipe them with a damp cloth
3. Place the appliance on a flat, level surface and make the locking hook open
4. This appliance incorporates an interchangeable cooking plate. Choosing your desired cooking plate, which is dependent on the task to be performed
 - 1) Open the appliance
 - 2) Insert top and bottom cooking plates into appliance and push backward Spring latches until they slide into place
 - 3) Snap cooking plates into place by pushing back the spring latches on the top and bottom cooking plates and releasing them into the slots on the cooking plates
 - 4).Close the appliance
5. Connect the plug into rated voltage and the cooking surface begins pre-heating and the red and green lamp will be illuminated at the same time. Once the cooking surface has reached the preset temperature(usually it will take about 3~4

- minutes), the green lamp will not be illuminated and this food is ready to cooking.
6. Open the appliance and place your food on the lower plate, Close the appliance , at this time, the red lamp will be illuminated again
 7. After baking about **6~8 minutes**, open the appliance to remove your food with a wooden or plastic spatula. Of course, You can adjust the time to suit an individual taste ,different food types, thickness your taste ect.
 8. After toasting, open the lock to remove your food with a wooden or plastic spatula
 9. After using, pull out the plug and open the upper lid let it get cool

CAUTION:

1. The first heating process should take place without any foodstuffs, let it heat for about ten minutes. There may be a slight development of smoke or smell. This is normal and harmless
2. **Before unplugging the plug, Green lamp will be on and off during power.**
3. If too much food is inserted into the appliance and the sandwich toaster cannot be closed, never close it with undue force as this could damage the lock
4. Never use sharp fork or knife to remove the food as this would damage the non-stick coating of cooking surface. Use heat-resistant wood or plastic utensils only.
5. Always unplug the appliance from the power socket when not in use



Correct Disposal of this product:

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Ningbo Aobao Electric Appliances Co., Ltd.
Ditang Town, Yuyao City, Zhejiang, China