


Mobile Stand Installation Instructions

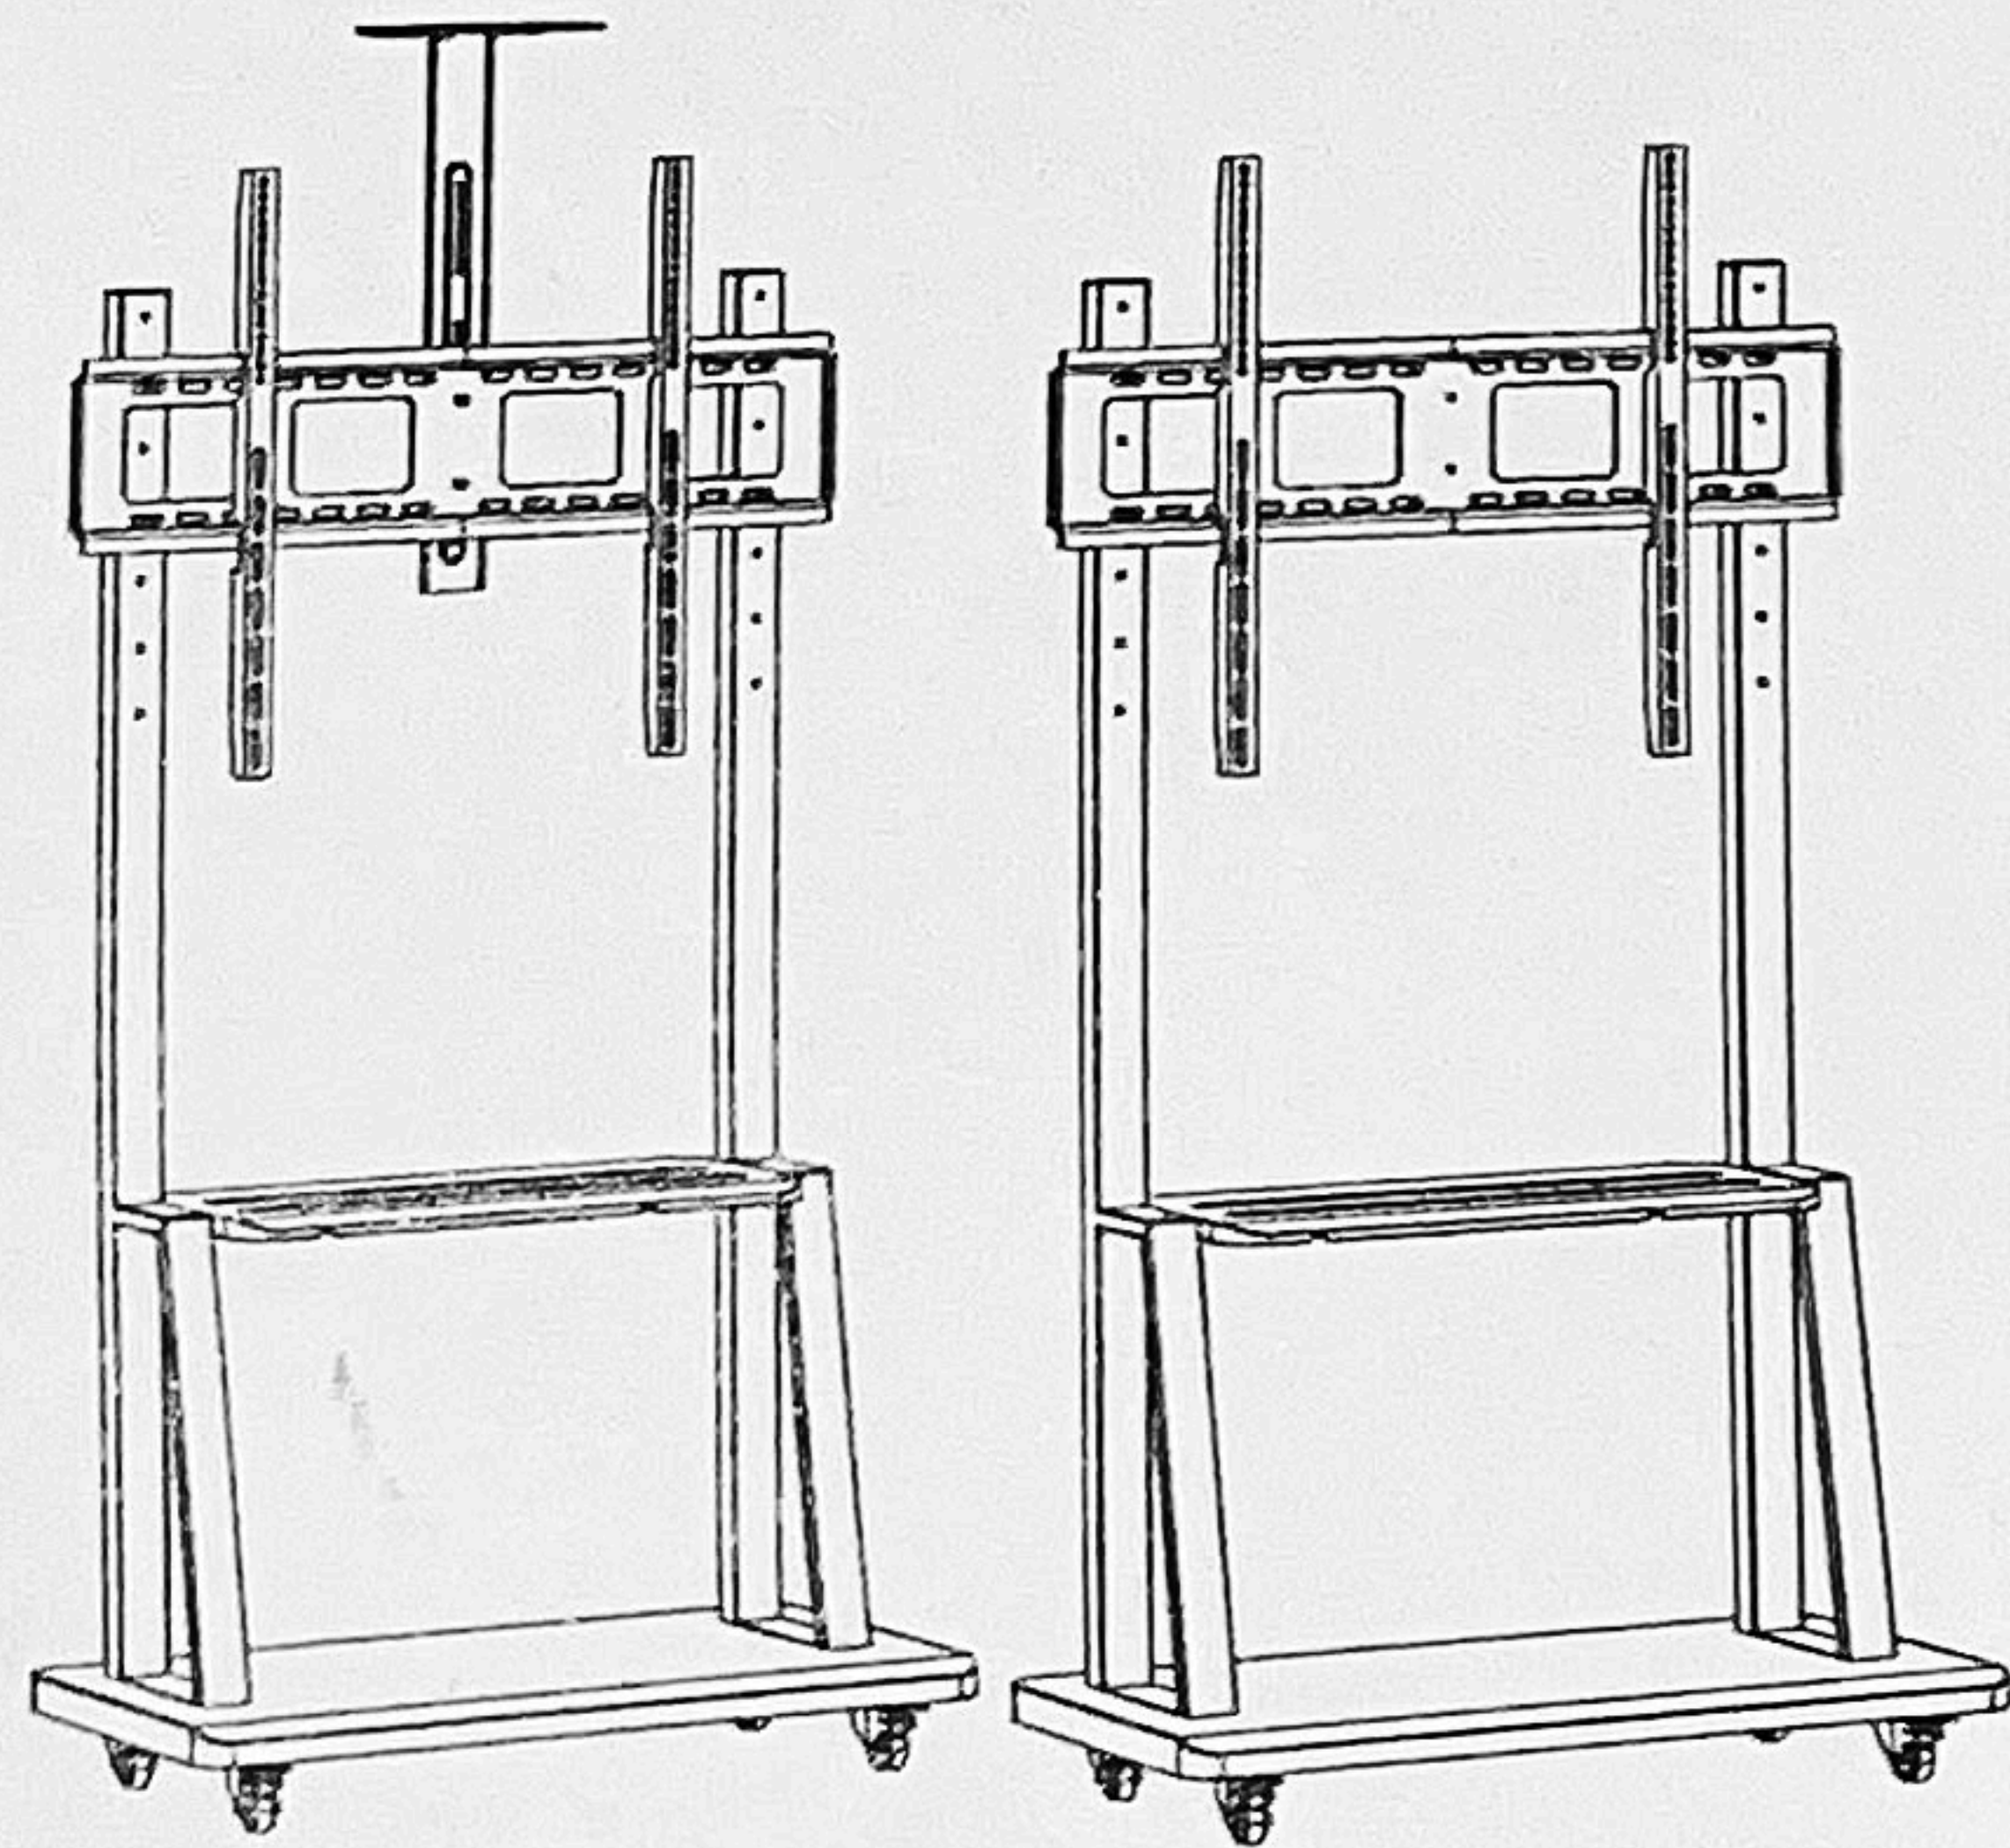

[Full set version] [Model without upper tray]

Note: This manual is a general version (available in two configurations: full version with an upper tray and version without an upper tray). The actual appearance of the product you receive shall prevail. The installation steps provided here are for the full version. When installing the version without an upper tray, simply skip the steps for installing the upper tray.

Before installation, please ensure that the mounting hole positions, dimensions, and weight of your TV mount comply with the specifications and standards of this product. If you have any questions or are unsure about any part of the instructions or warnings, please contact us for assistance.


- NOTE:**
- When installing the mount, it must be installed by qualified personnel using safety devices and tools in accordance with the requirements of the assembly instructions. Improper installation may result in the TV falling or cause serious personal injury.
 - Before installation, ensure that the supporting surface can safely support the weight of the equipment and all accessories.
 - Do not exceed the rated load capacity. Doing so may cause serious injury or property damage.
 - This product contains small parts that may pose a choking hazard if swallowed. Keep out of reach of children.
 - This product is intended for indoor use only. Outdoor use may result in product damage and risk of personal injury.

Maintenance:
Please manually check at regular intervals whether the connection between the stand and the television is secure and whether any screws have become loose due to prolonged use (at least once every three months). If any safety hazards are identified, replace the accessories promptly or reinforce the installation.

TV Mount Disclaimer
During the use of the TV stand, the merchant assumes no responsibility for losses caused by improper operation, incorrect installation, product damage, external environmental factors, or other reasons.


- When using the TV stand, the purchaser must follow the installation and usage instructions provided in the product manual. If product damage or personal injury occurs due to failure to follow the instructions, the merchant assumes no responsibility.
- During the installation and use of the TV stand, the merchant assumes no responsibility in the following circumstances:
 - Failure to install in accordance with the user manual and installation specifications;
 - Use of non-original accessories or tools during installation;
 - Failure to perform regular inspection and maintenance after installation;
 - Unsuitable installation location for the TV stand, such as near water sources, flammable or explosive materials, etc.;
 - Losses caused by external environmental factors (e.g., earthquakes, floods, fires, etc.) after installation.
- Under normal use conditions, if product damage occurs due to manufacturing defects, the merchant will repair or replace the product in accordance with relevant national laws, regulations, and product warranty policies. However, the following situations are excluded:
 - Repairs or replacements not authorized by the merchant;
 - Product damage caused by abnormal use or intentional damage;
 - Product damage caused by natural disasters, force majeure, or other factors.
- During the use of the TV stand, it is the responsibility of the purchaser to ensure the safety of the TV, audio equipment, and other devices. The merchant assumes no responsibility for safety accidents caused by the equipment itself.

1. Installation of the 4 wheels on the base

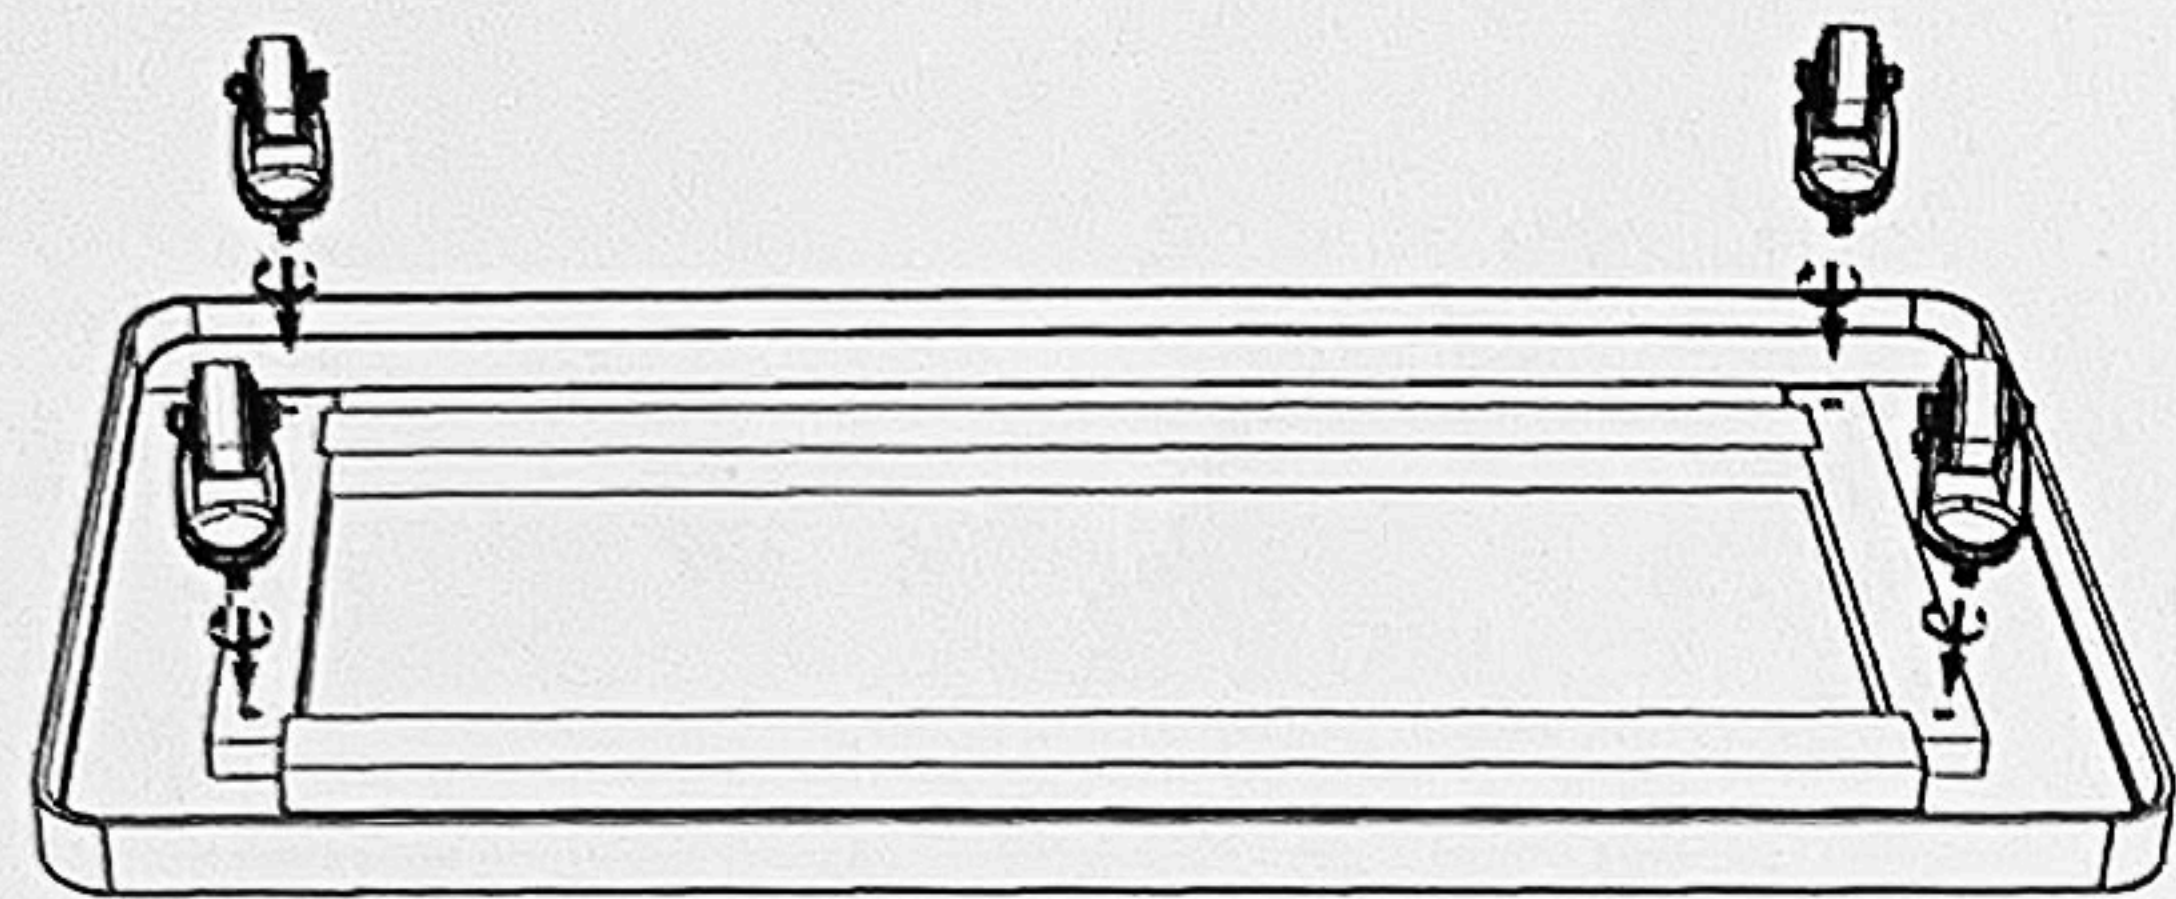

Install the 4 casters into the four holes on the base respectively and tighten them.


2. Installation of the column and base

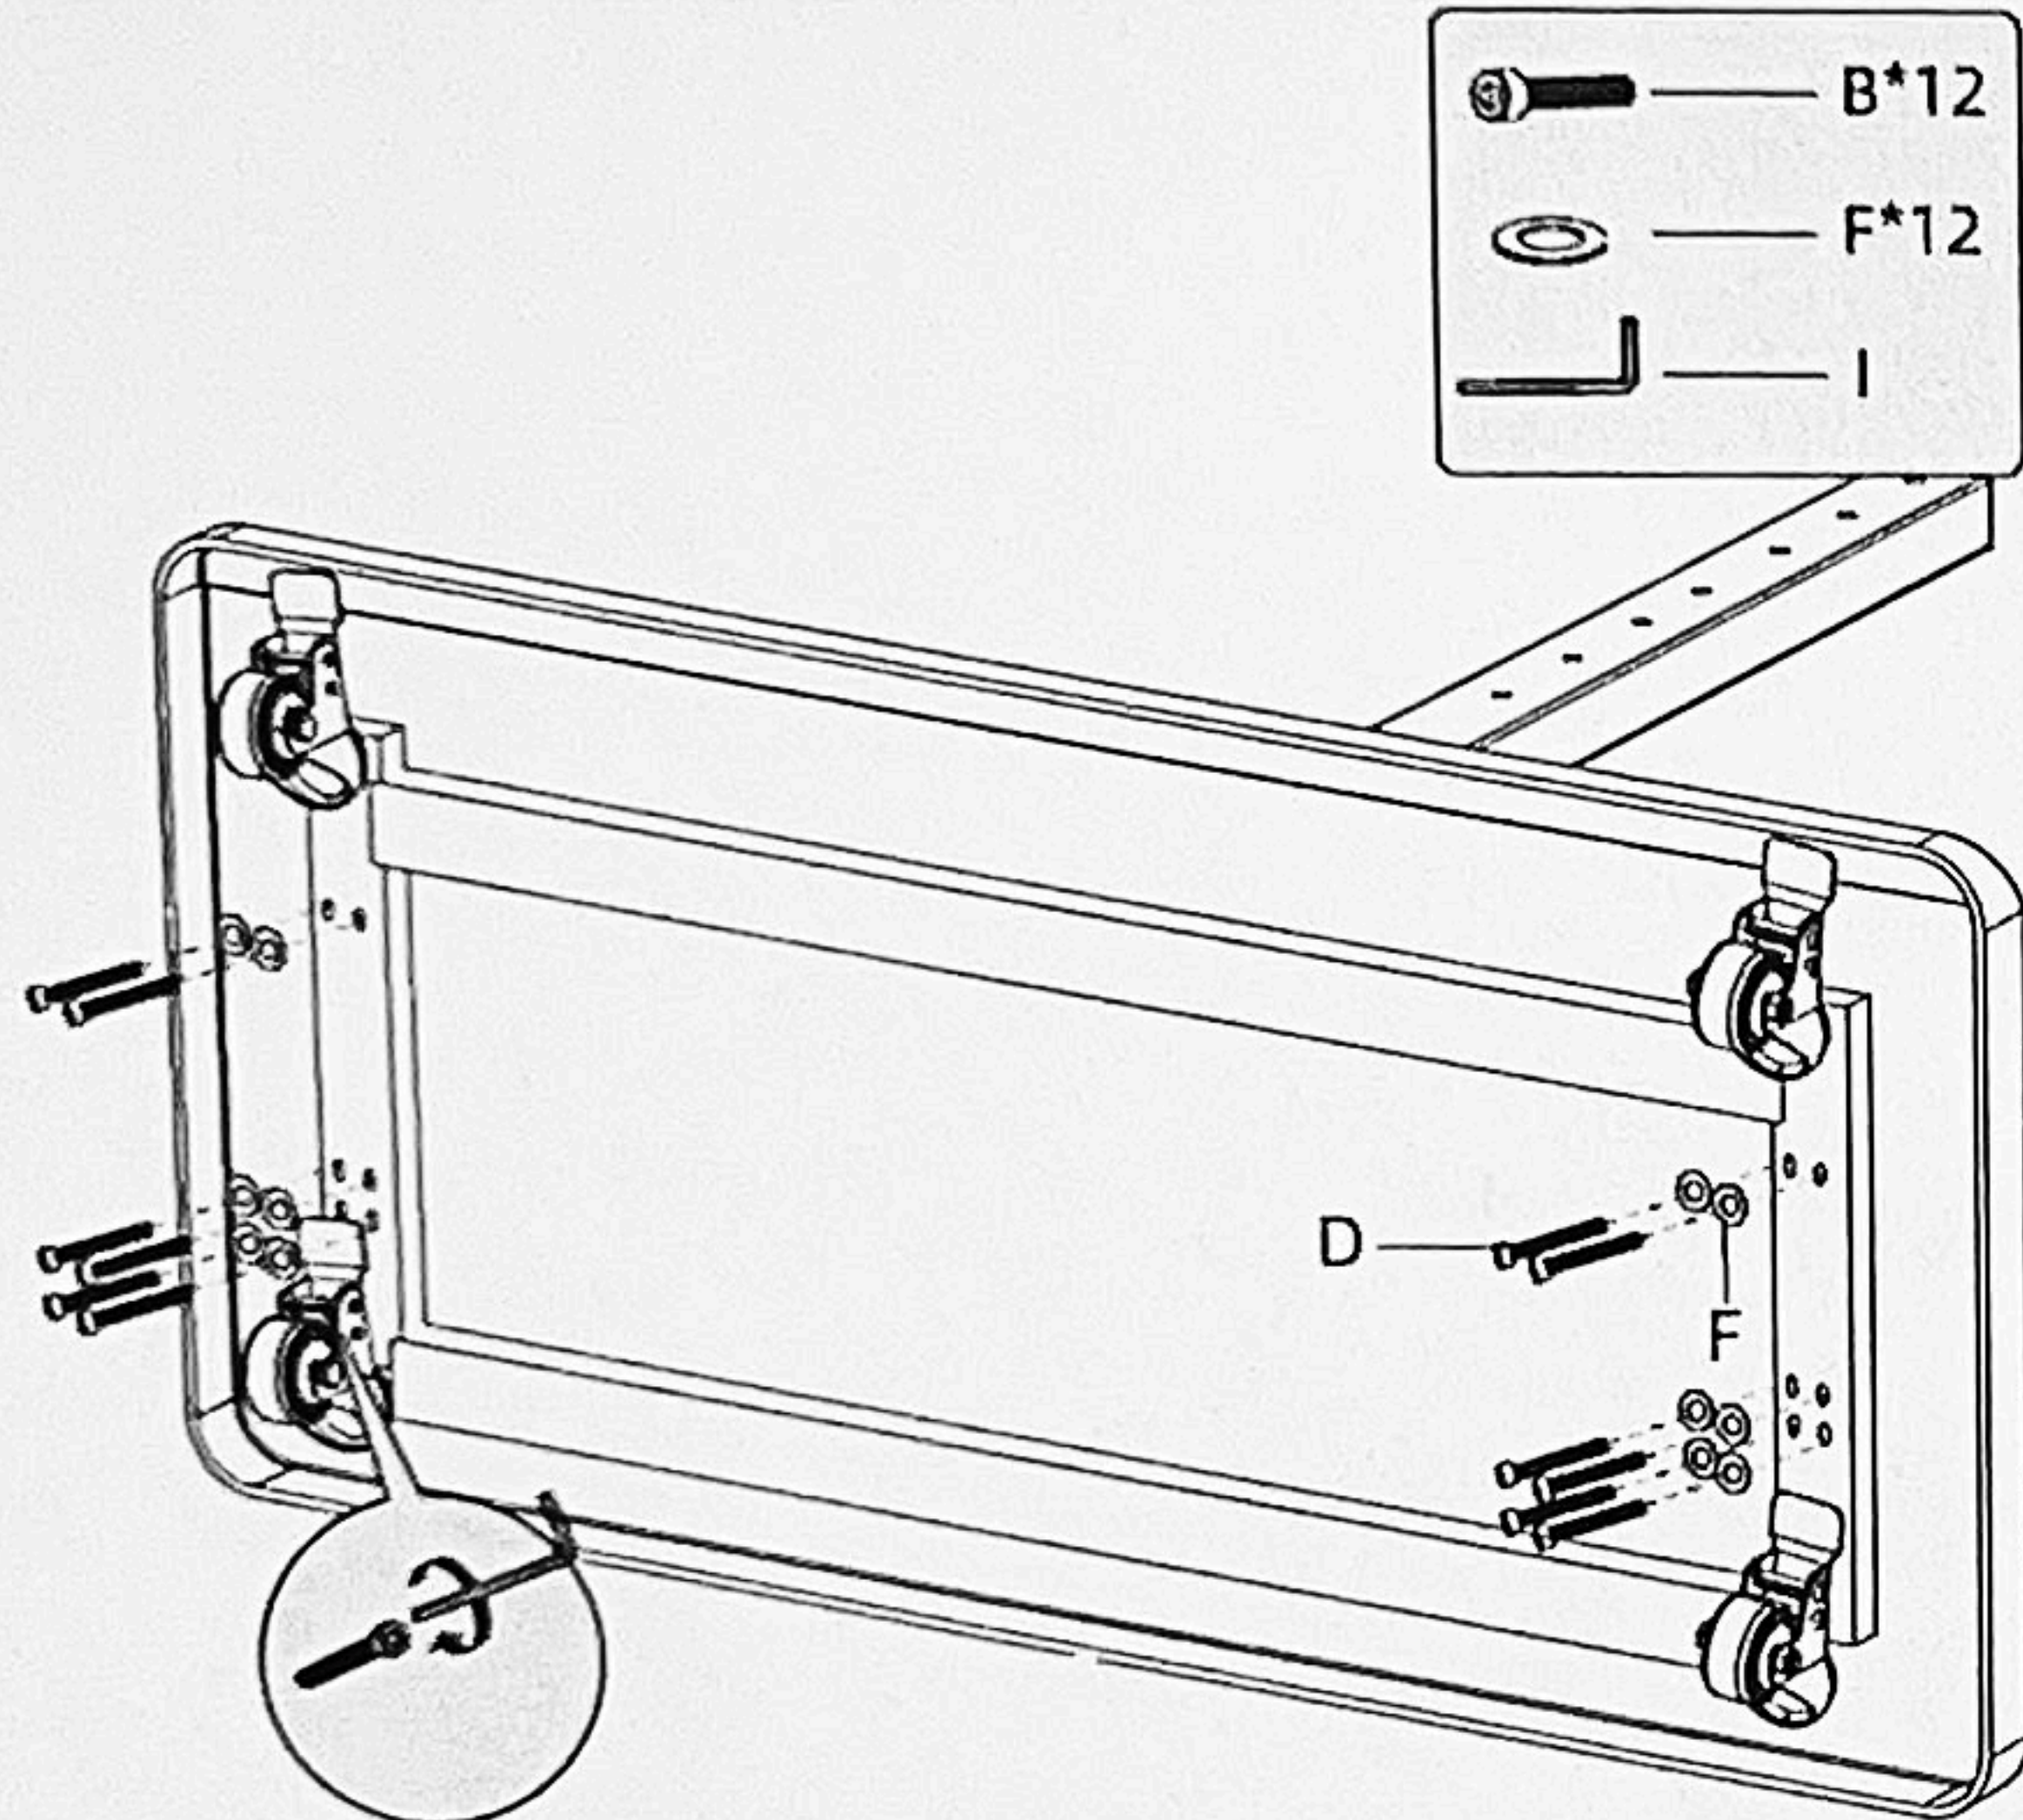

Tighten with a wrench (I).


Note: Align the holes of the base with the holes of the column, then install and secure them using B screws and D8 washers.

3. Installation of the Tray Upright

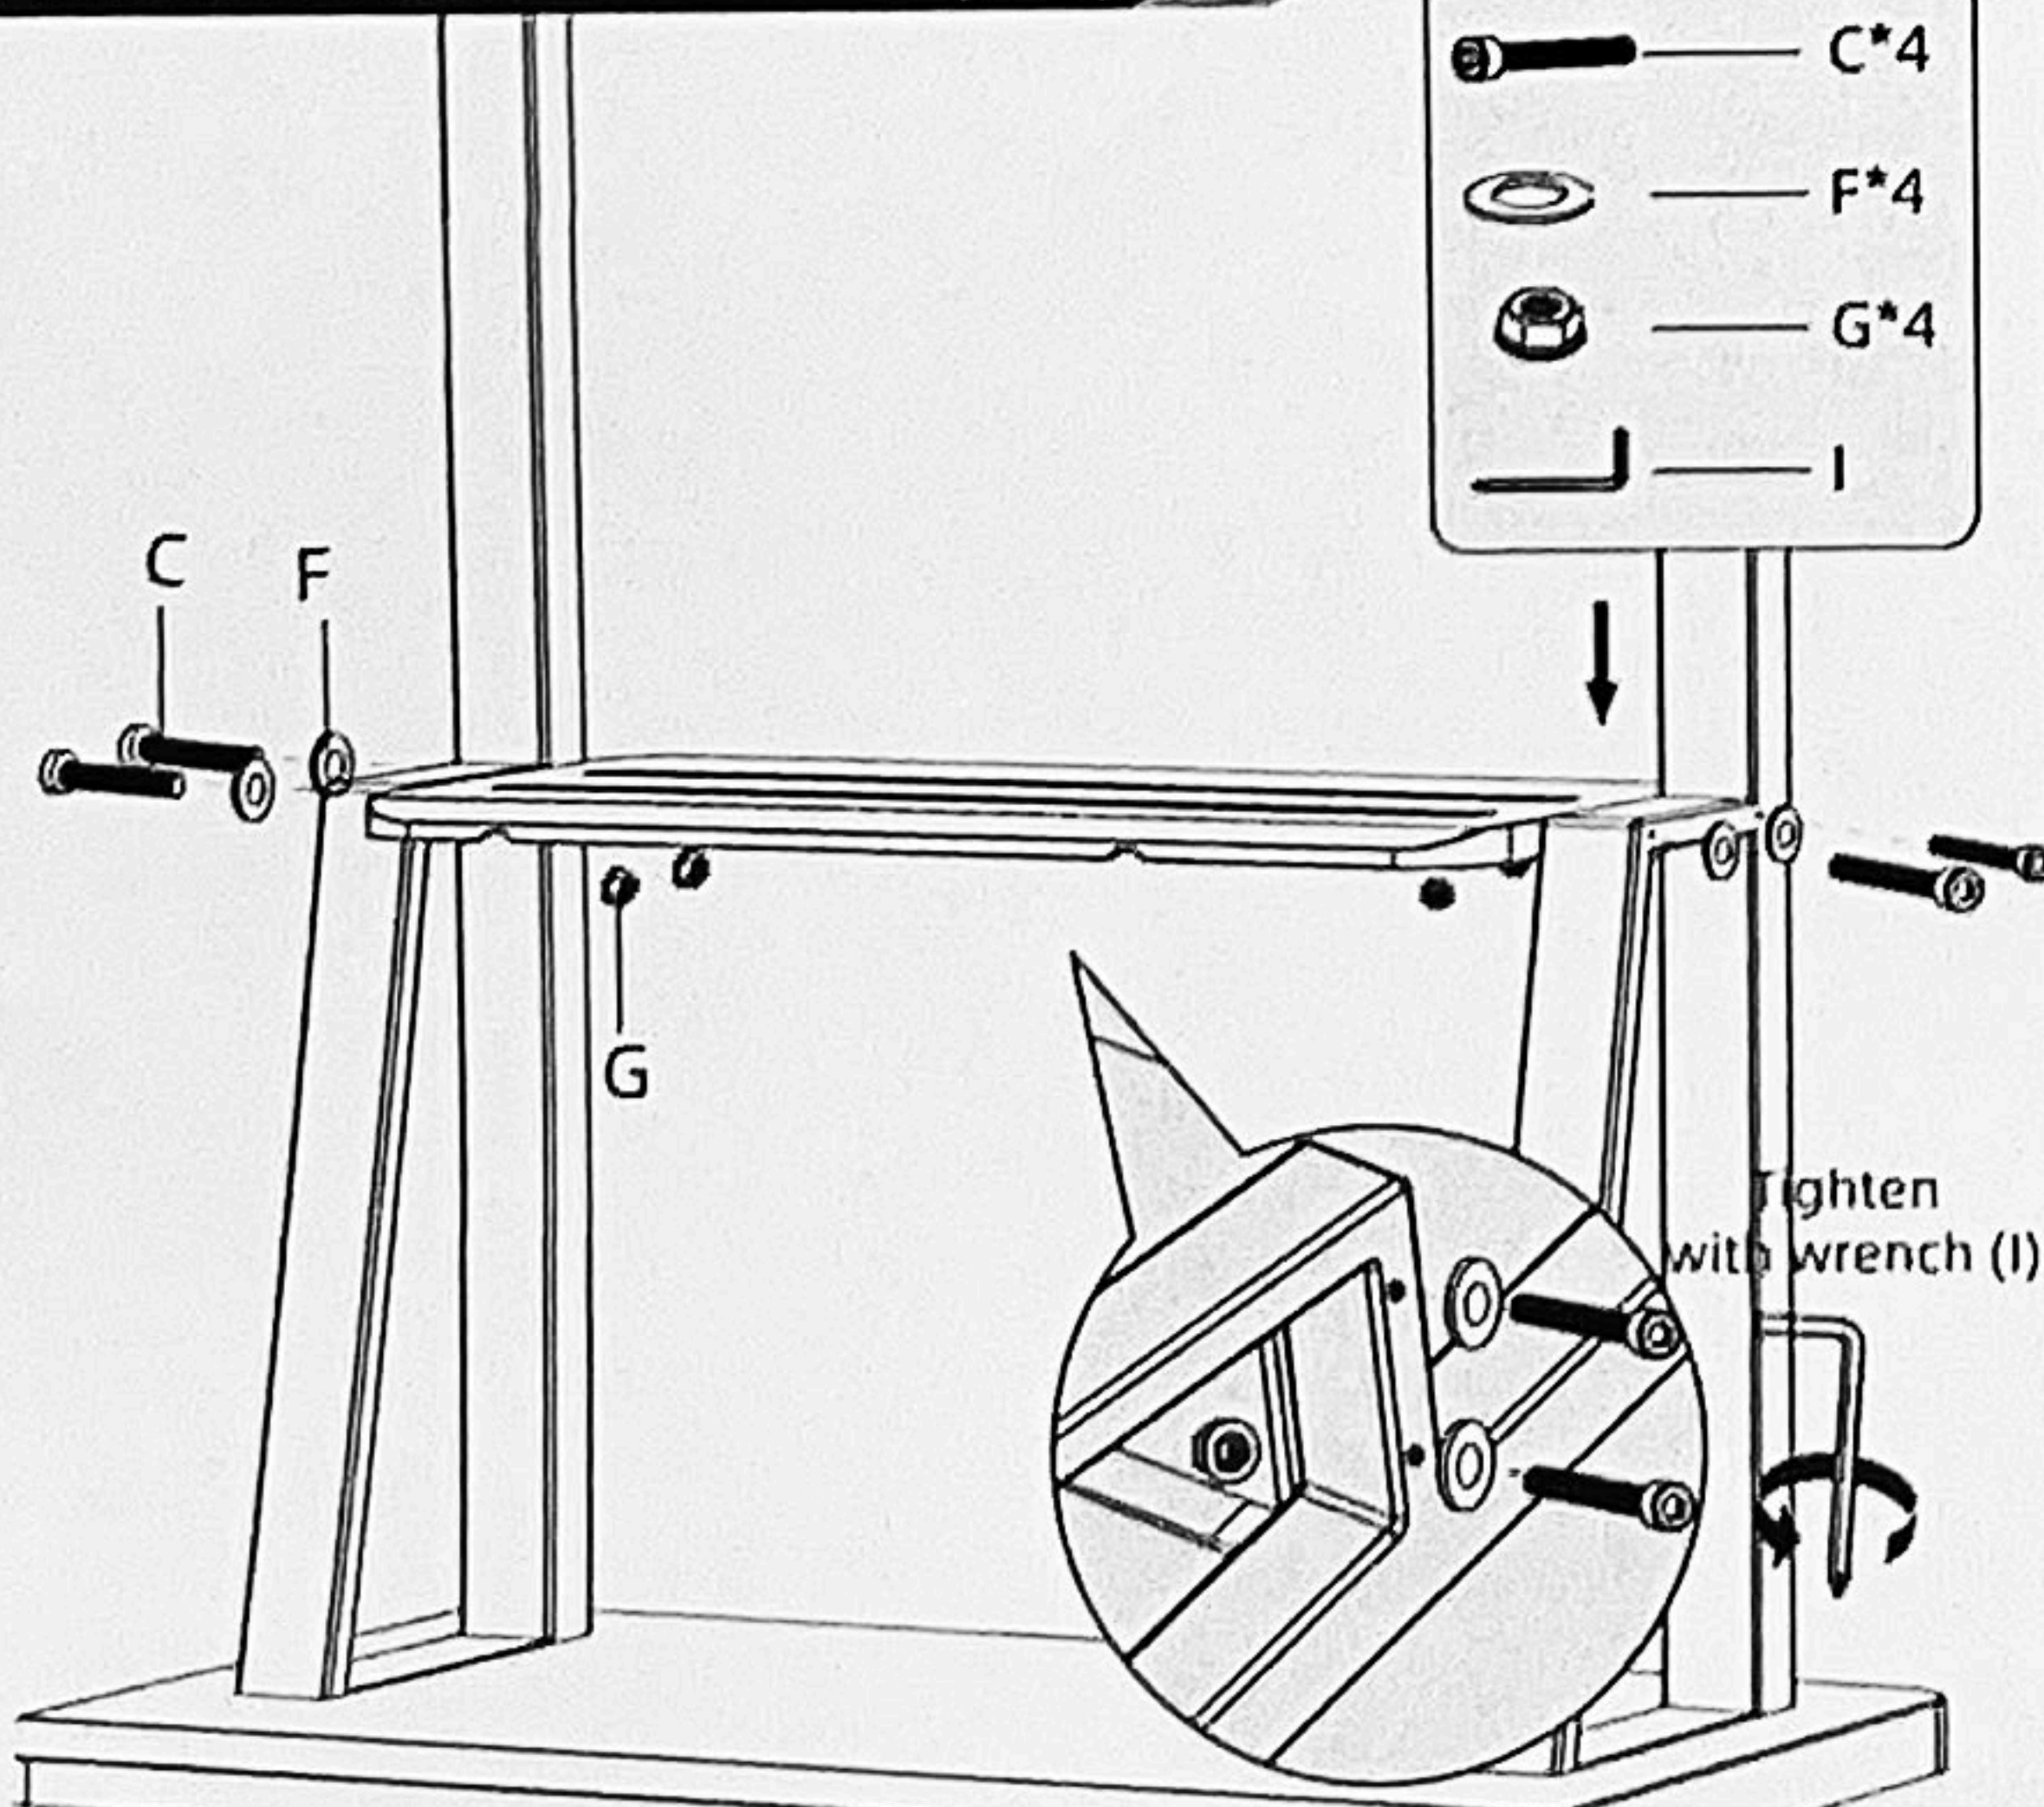

Use screws and washers to secure the tray to the upright post from both sides, and tighten with nuts.


4. Panel installation

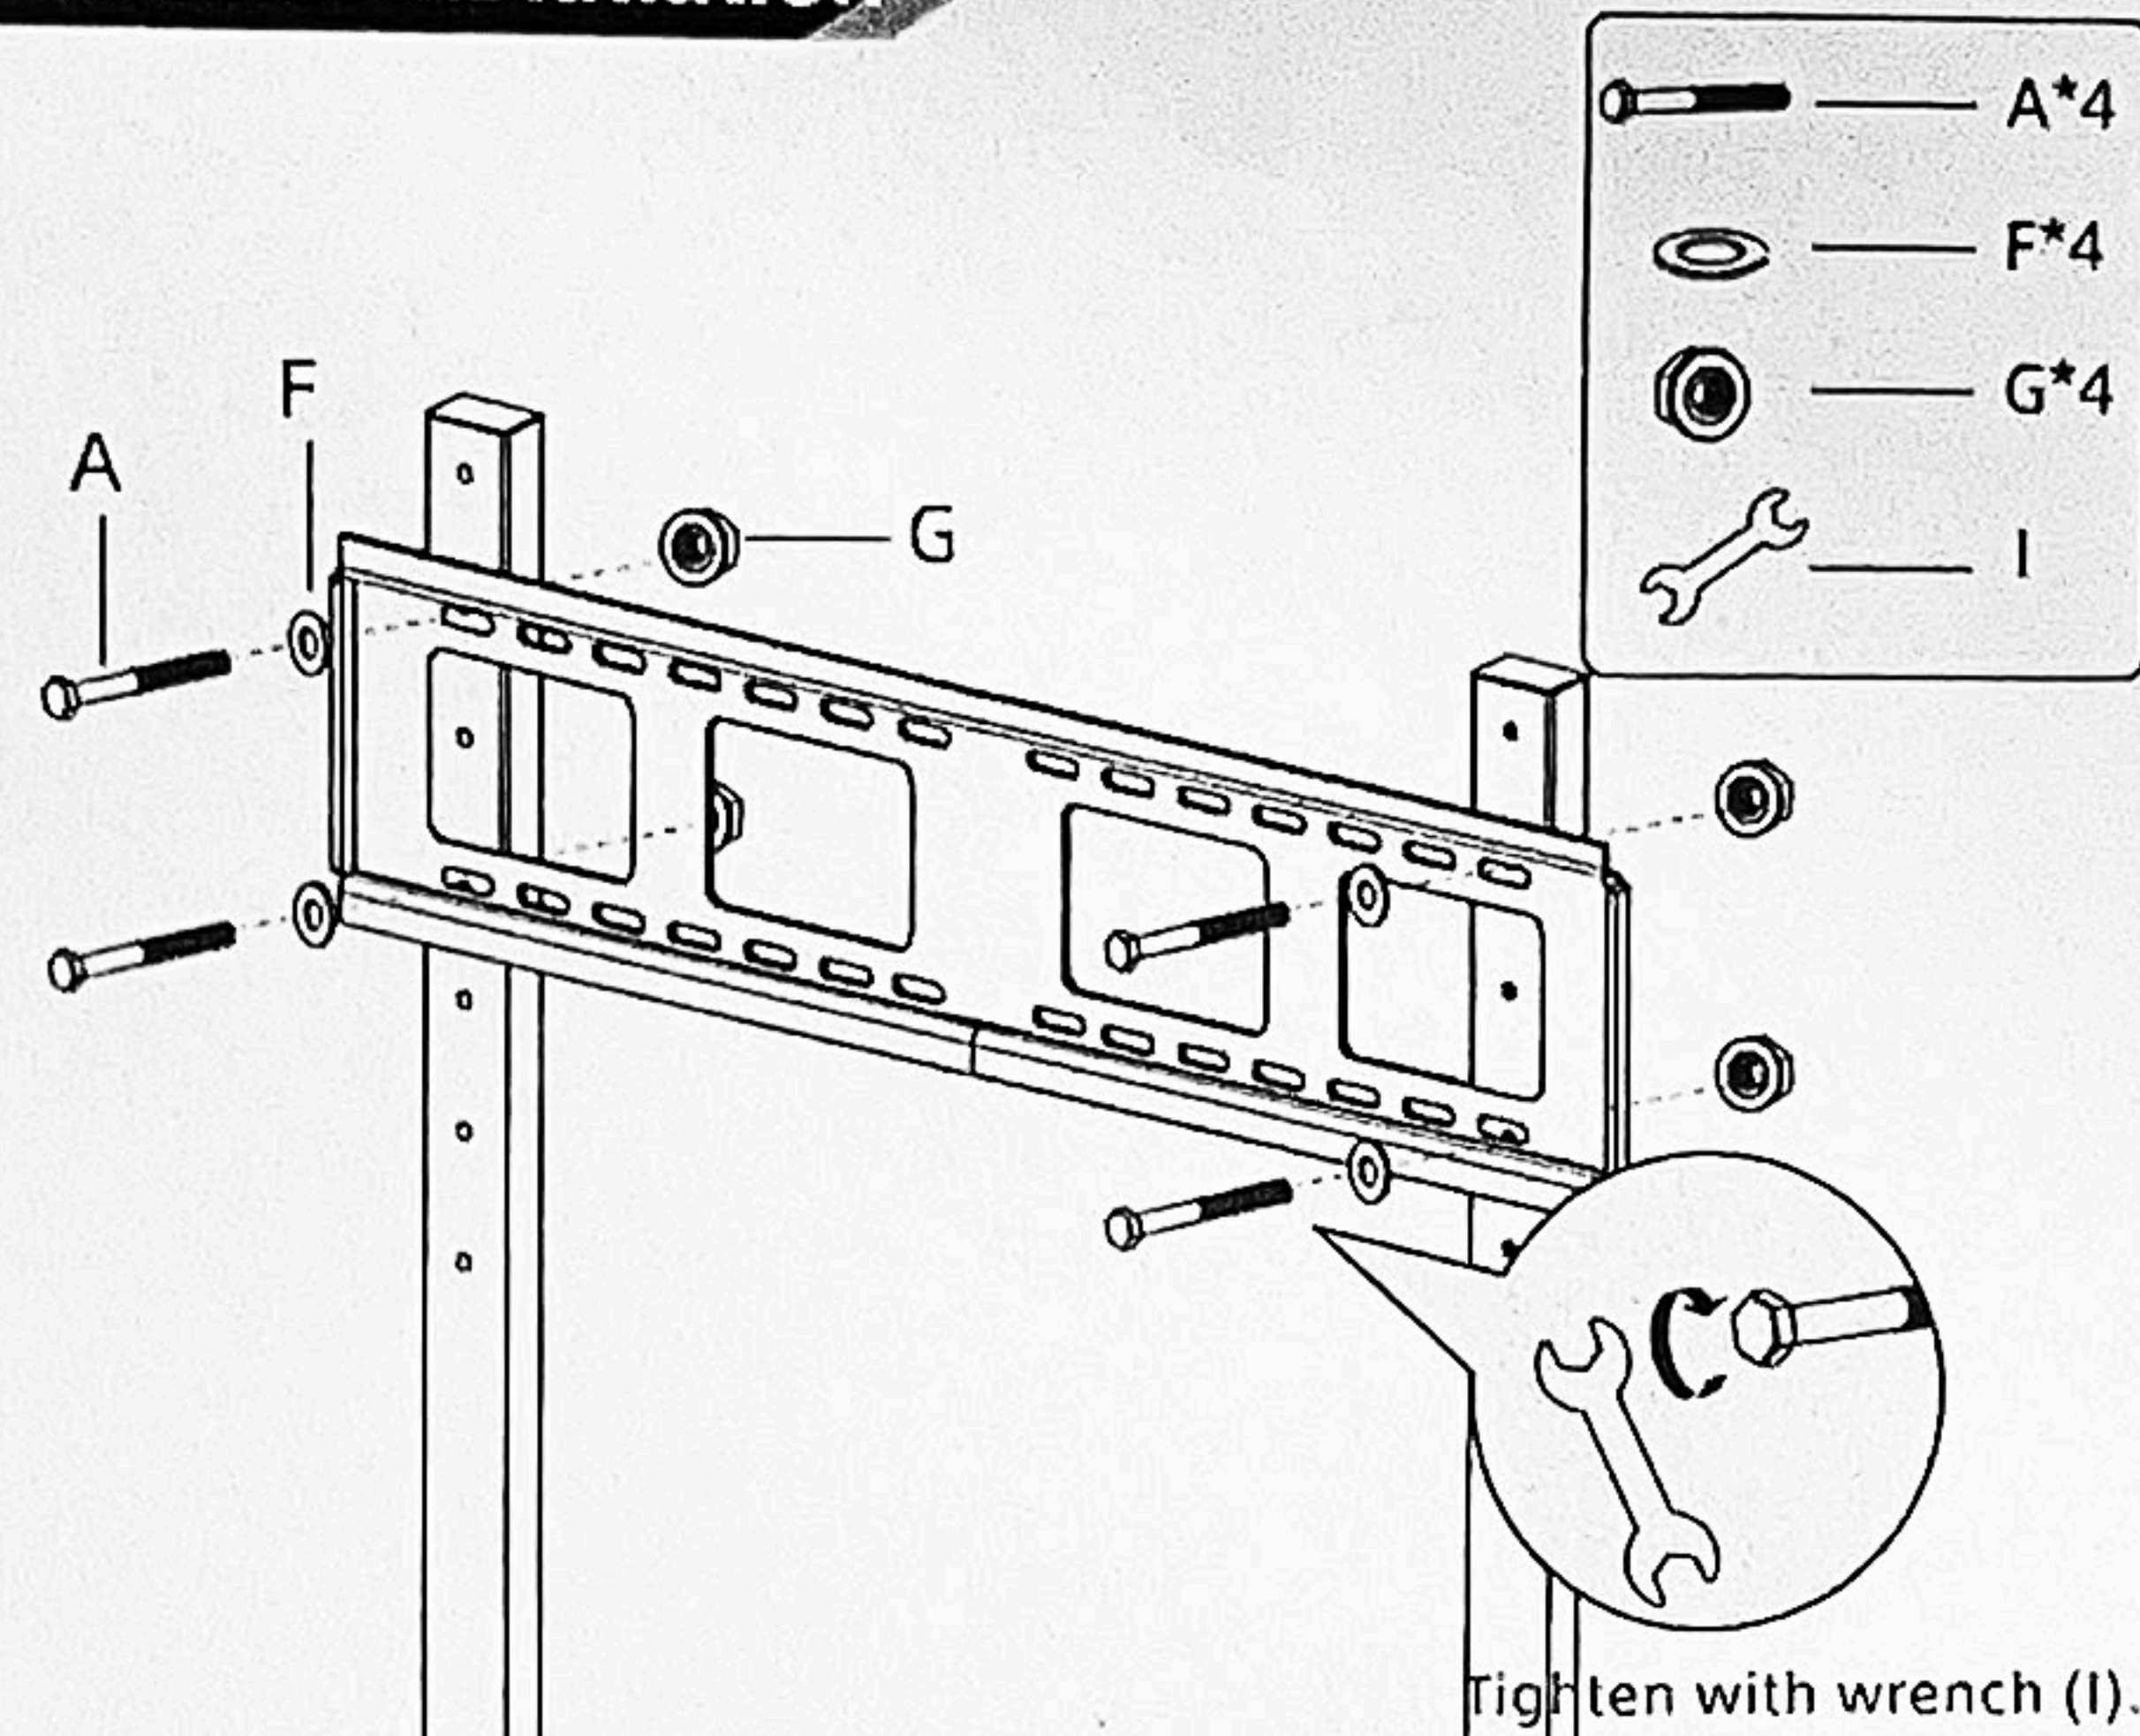


Note: During installation, use D8 model washer and M8 model nut respectively.

5. Installation of the upper tray


Note: If your model does not include the upper tray, you may skip this step during installation.

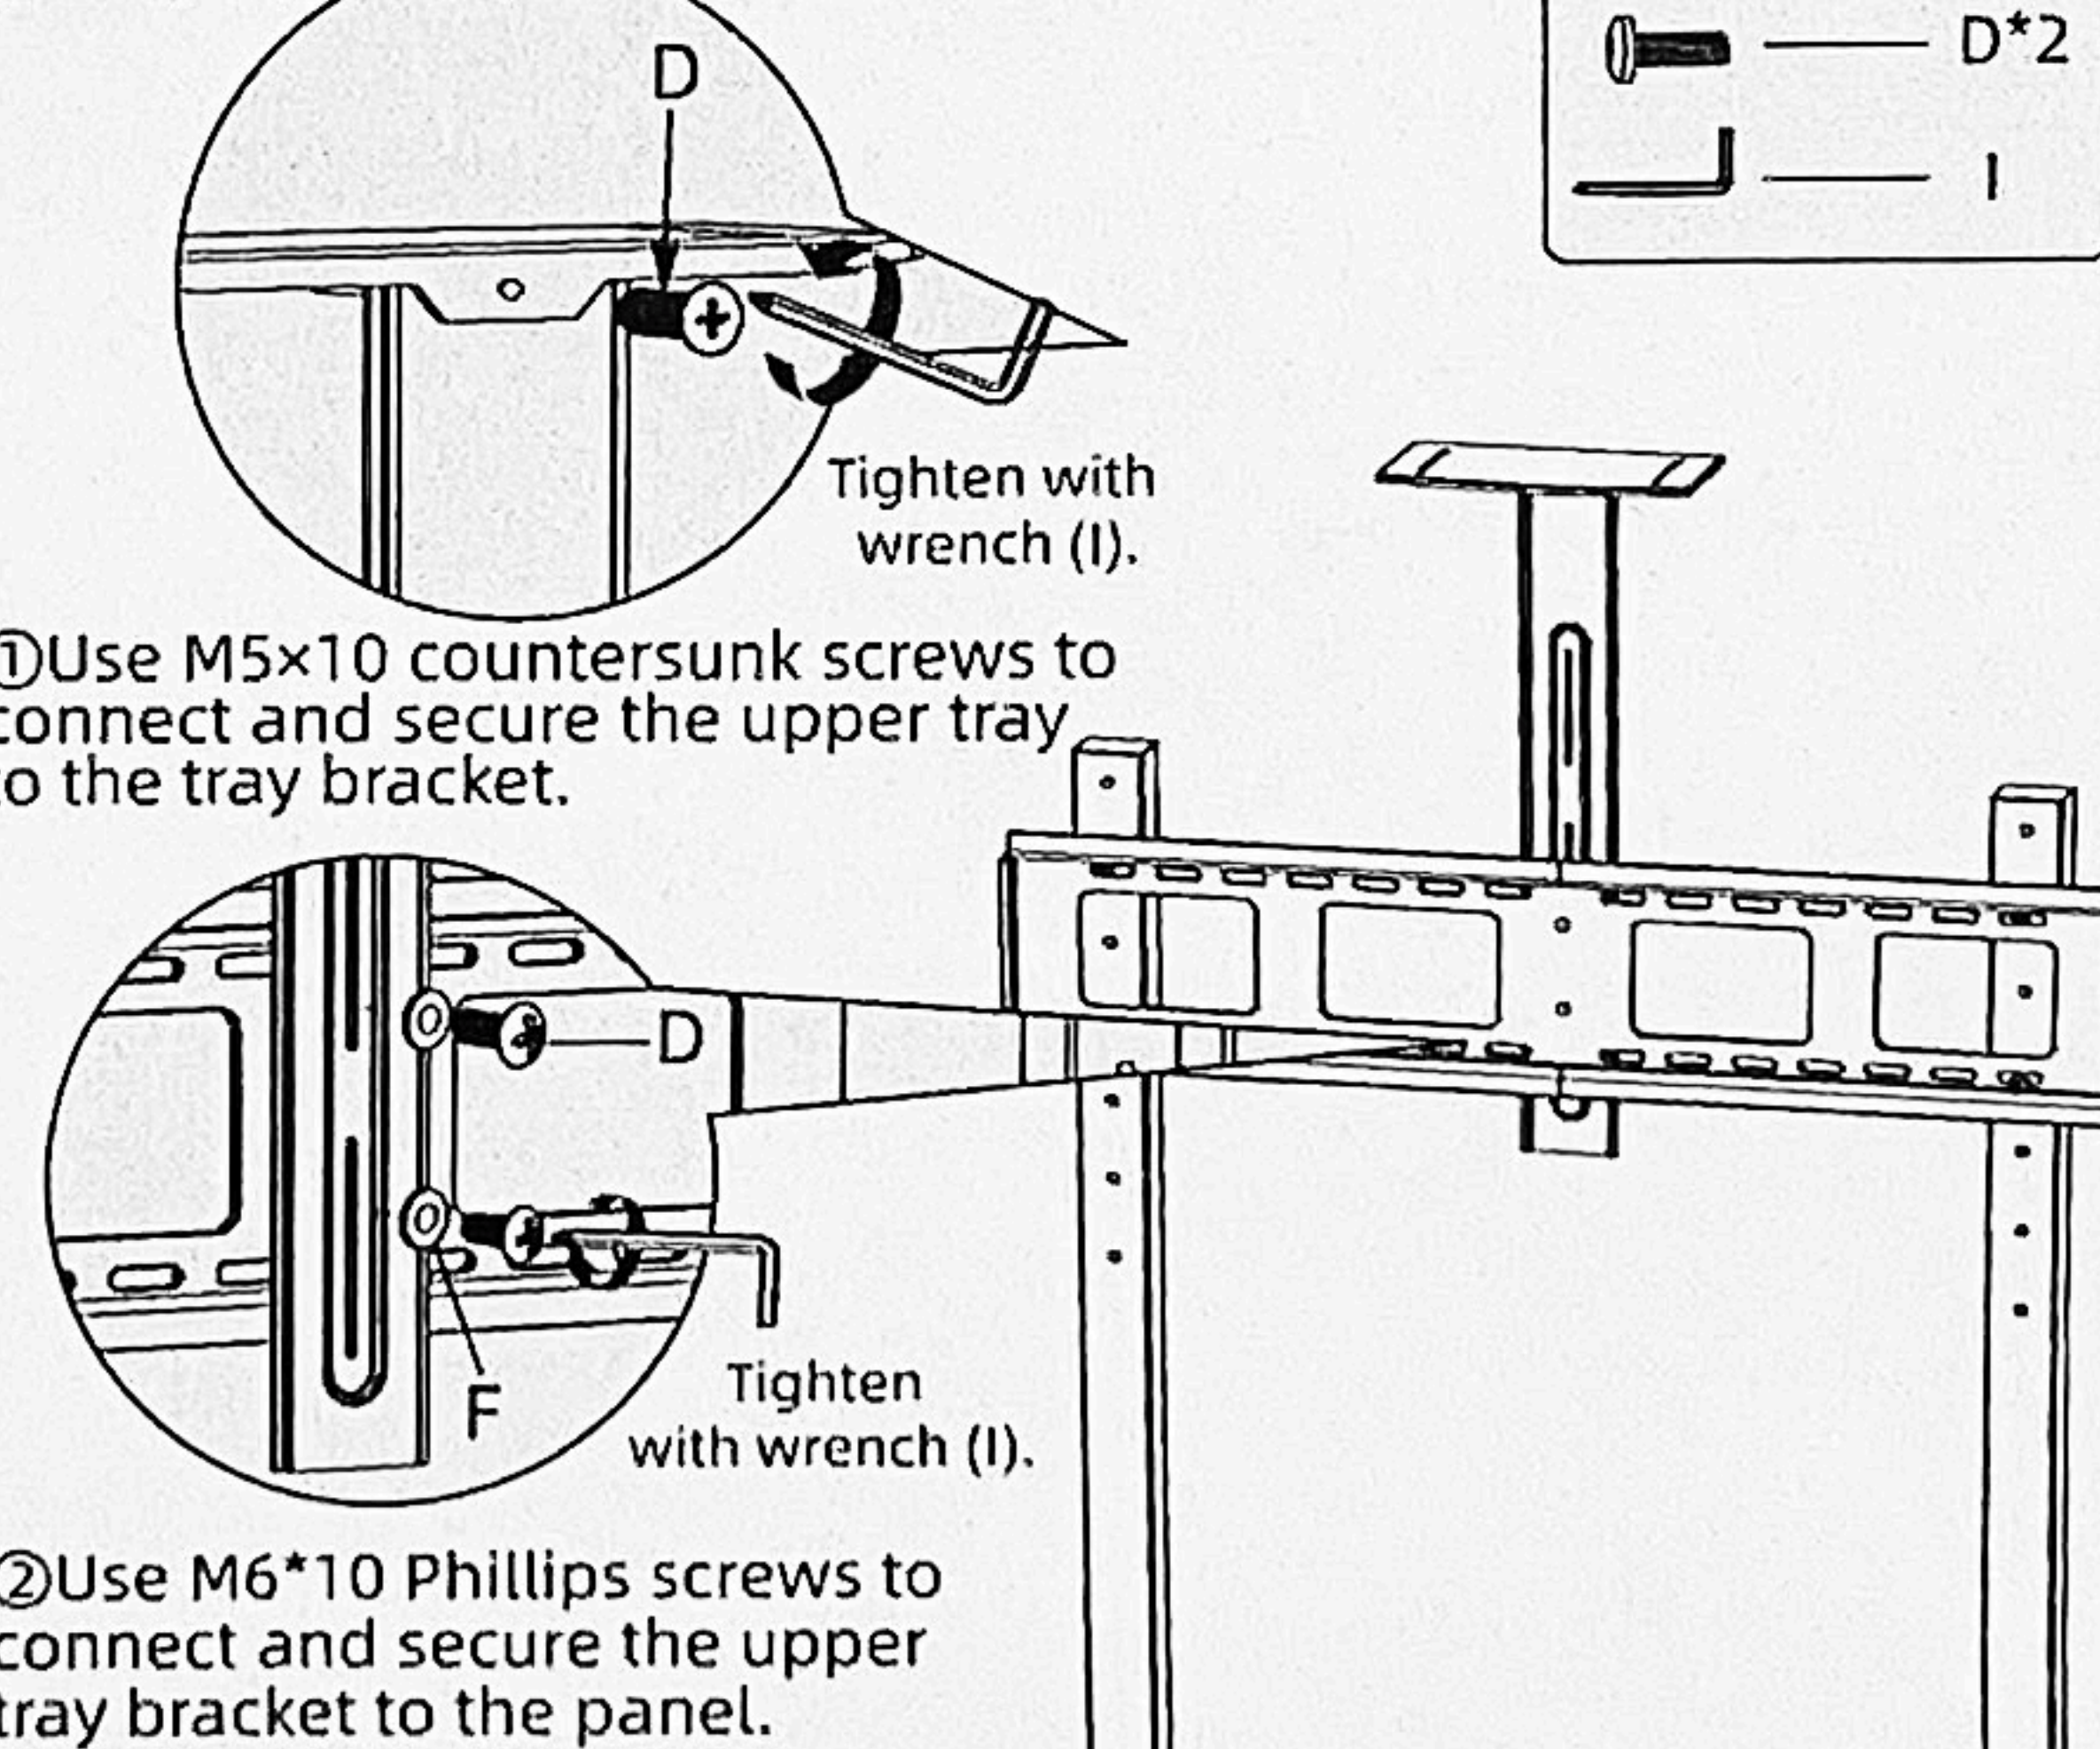

6. Installation of the hook

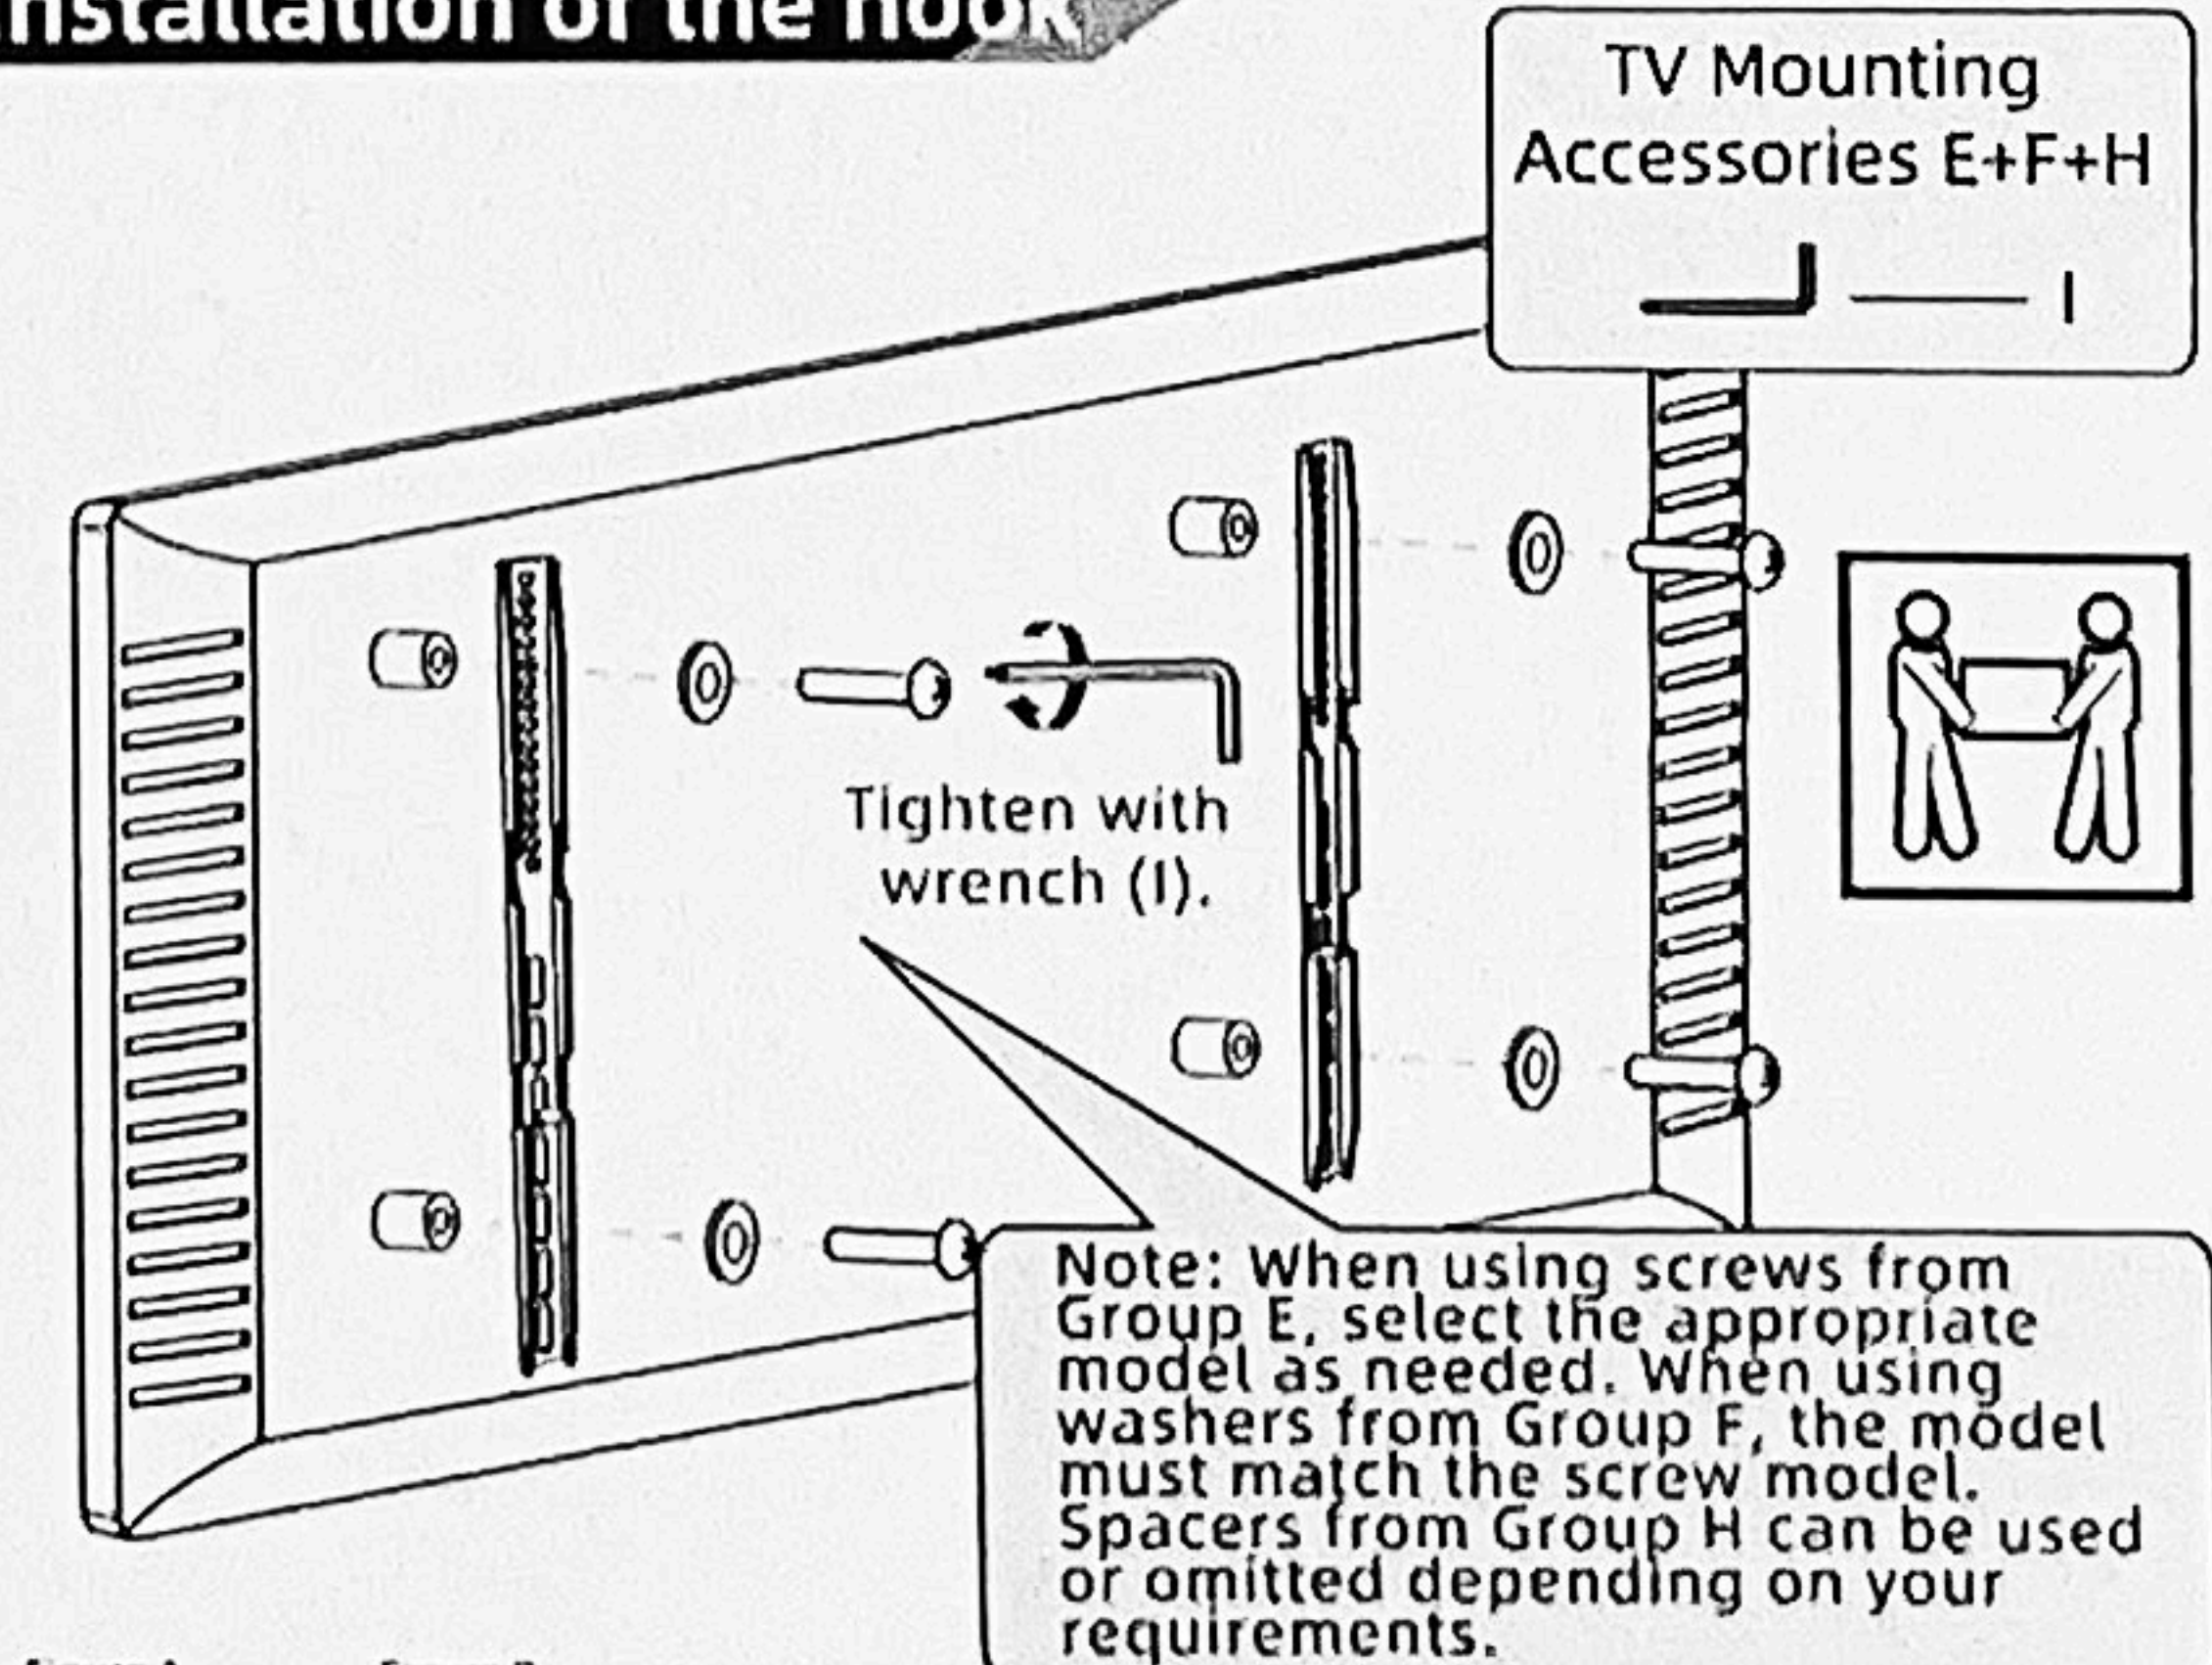


Note: When using screws from Group E, select the appropriate model as needed. When using washers from Group F, the model must match the screw model. Spacers from Group H can be used or omitted depending on your requirements.

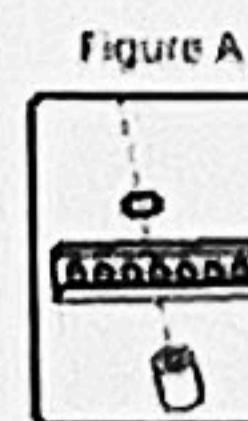

Install the TV riser pads. Depending on your needs, you can install them between the hook and the TV (as shown in Figure A), above the hook (as shown in Figure B), or choose not to install them at all.


7. Hang the TV onto the panel

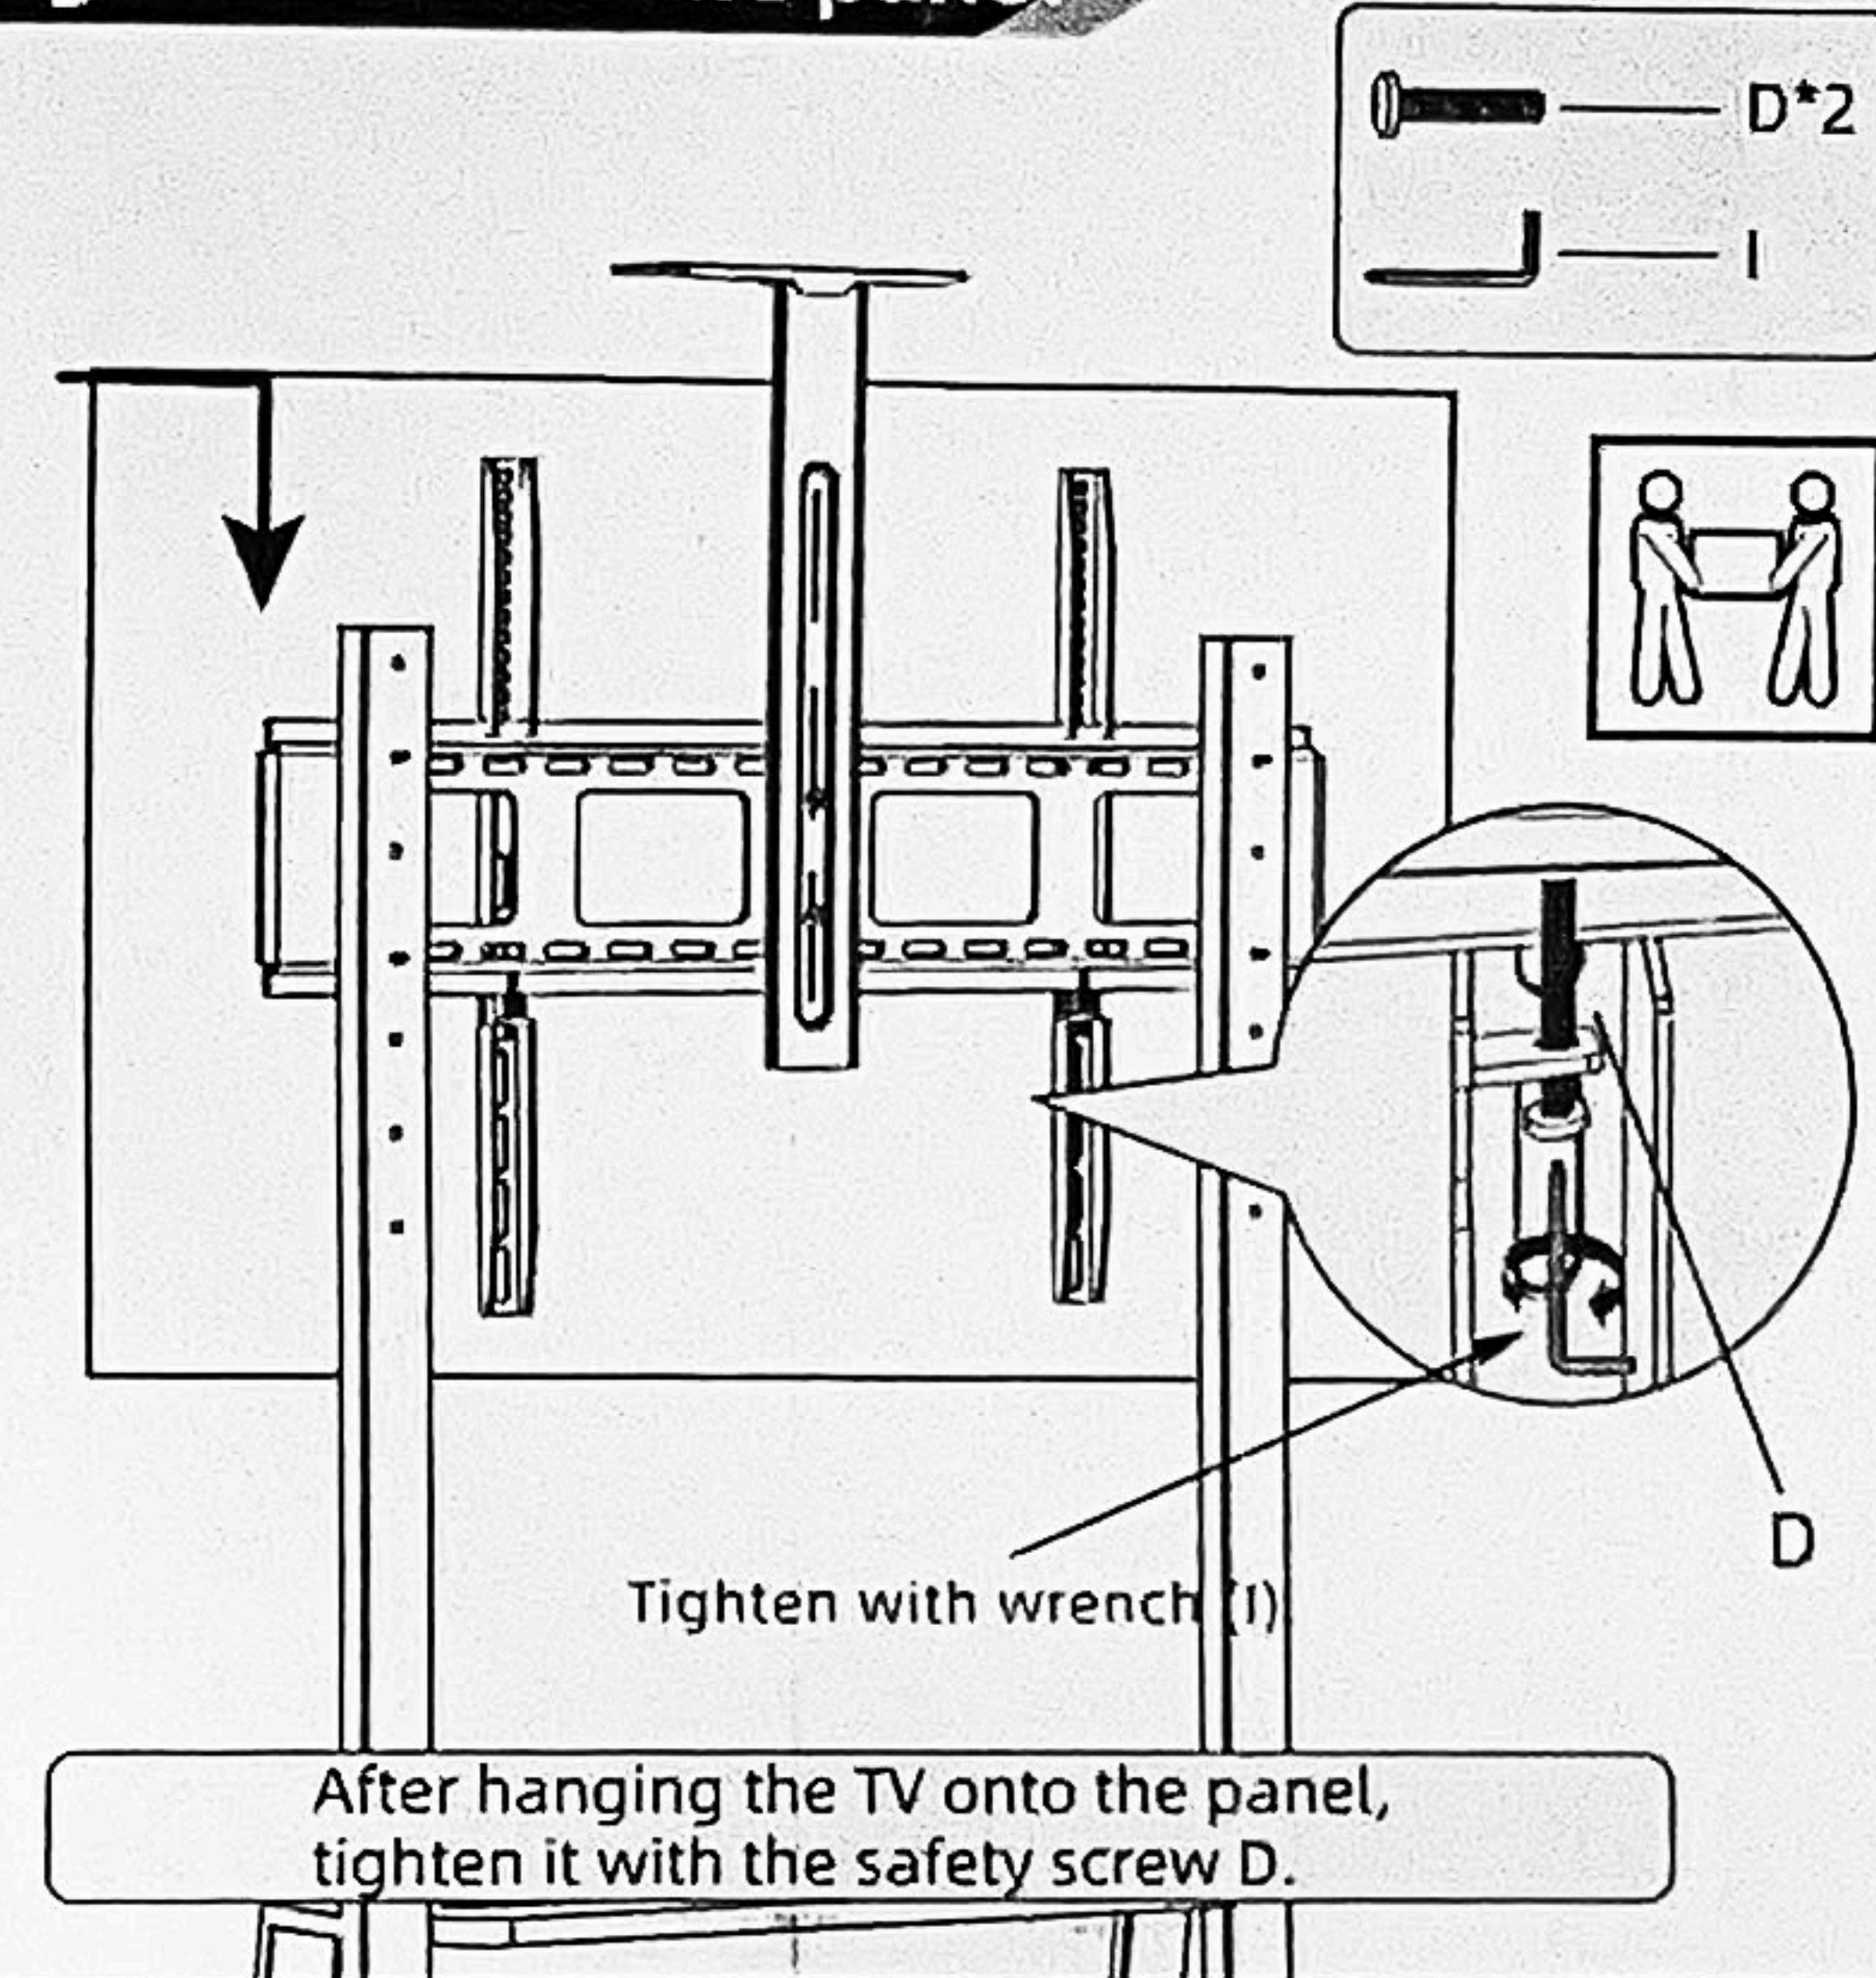

Tighten with wrench (I).

After hanging the TV onto the panel, tighten it with the safety screw D.

8. Installation complete

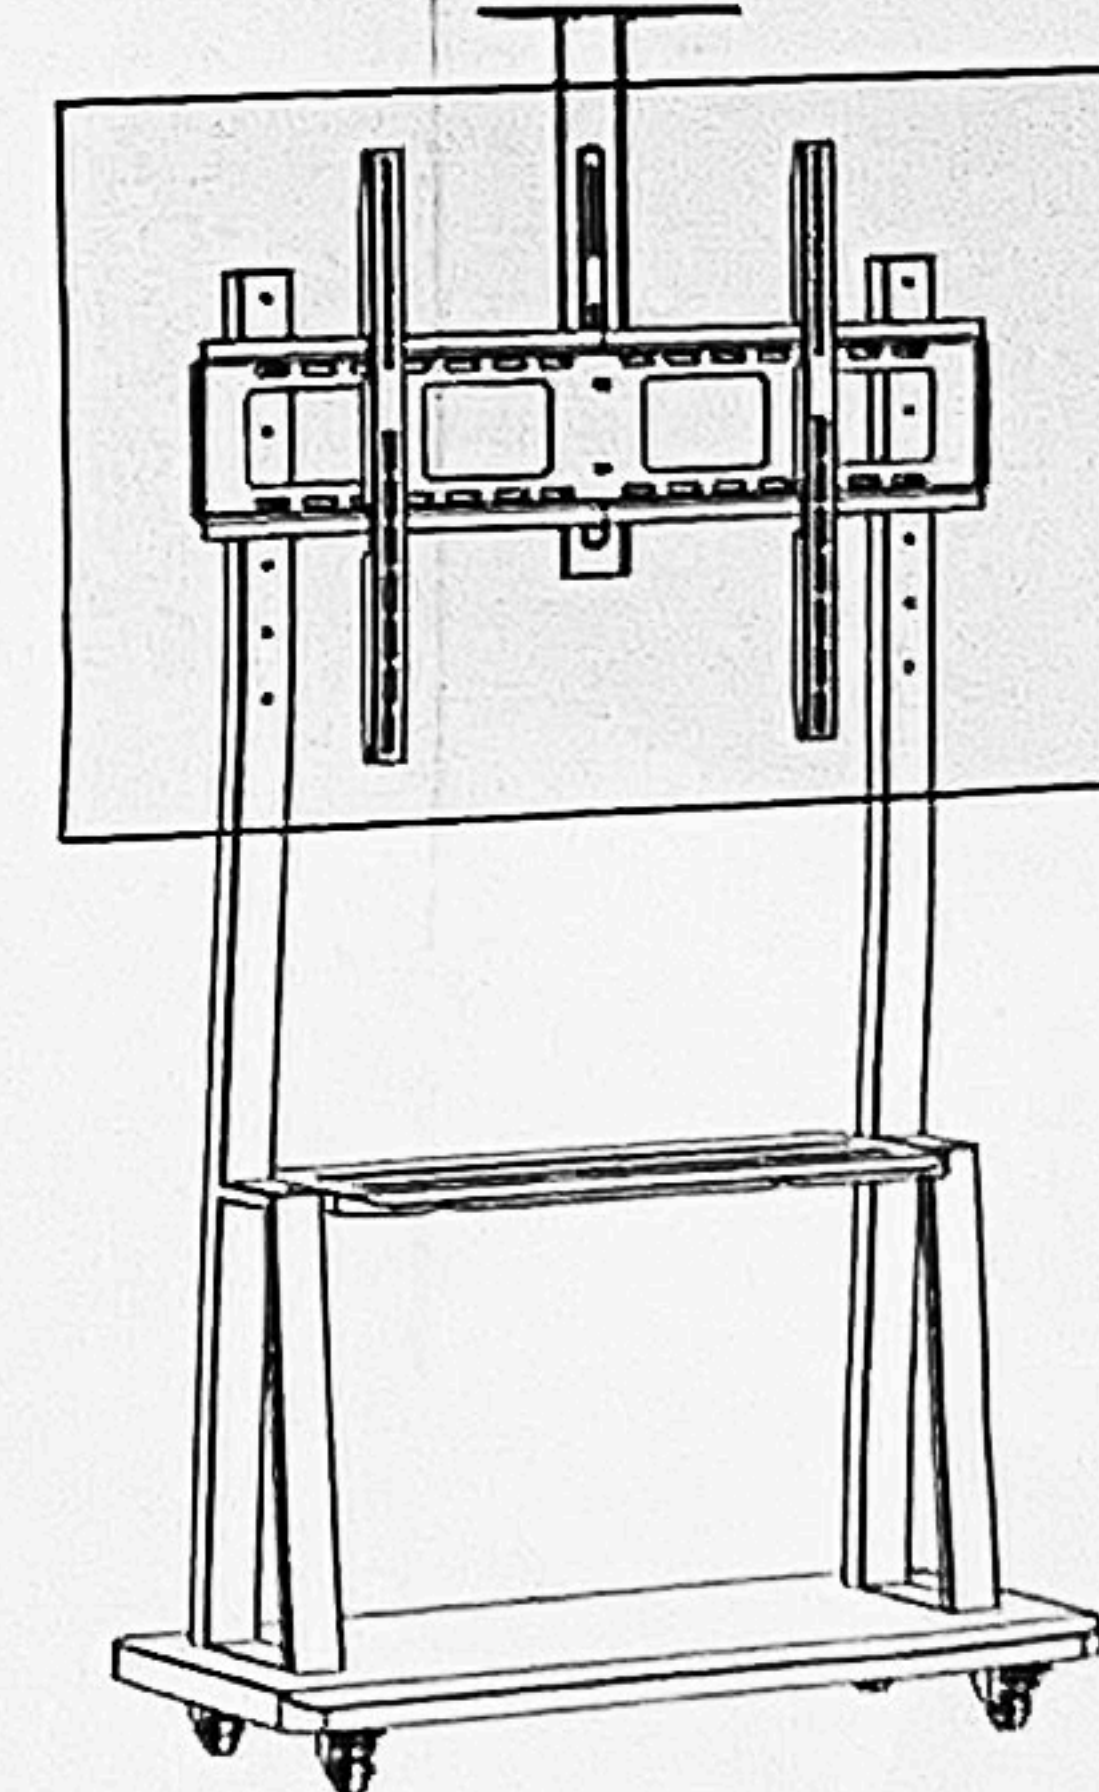

Installation parts (Before installation, be sure to check that all parts are complete. If any are missing or damaged, contact your supplier.)

Part No.		Bracket installation accessories	
A	M8*70Hex head screw*4	G	M8Nut*4
B	M8*40Hex socket screw*12		M6Nut*4
C	M6*70Screw*4	H	5MMRiser*4
	M6*10Crosshead screw*2		10MMRiser*4
D	M5*10Countersunk screw*1	I	6MMWrench*1
	M5*40Safety screw*2		5MMWrench*1
E	M6*25Countersunk screw*4		Open-end wrench*1
	M8*30Countersunk screw*4		
F	D8Spacer*16		
	D6Spacer*4		