


ASSEMBLY INSTRUCTION


MLM-110191

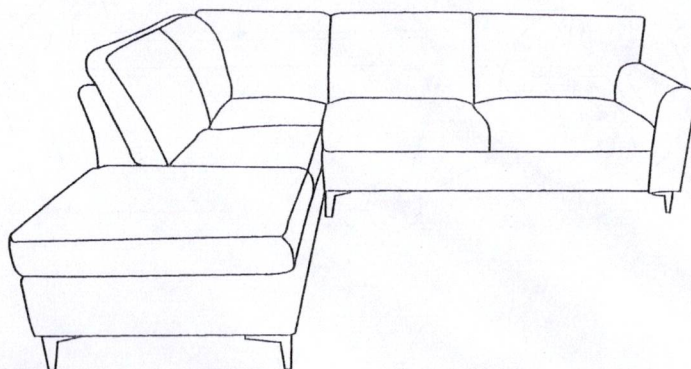

ASSEMBLY INSTRUCTIONS




Step 1

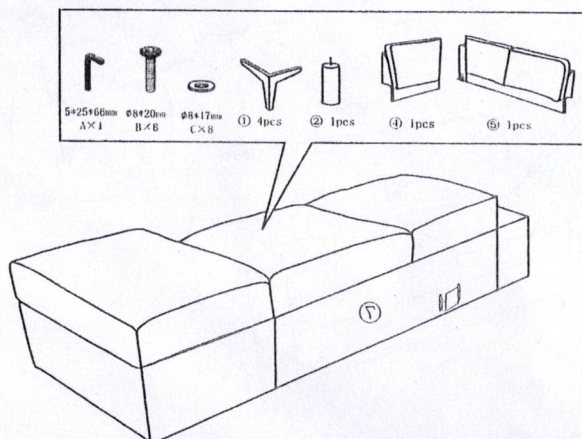


PARTS AND HARDWARE

Note: Individual parts are not shown to scale.

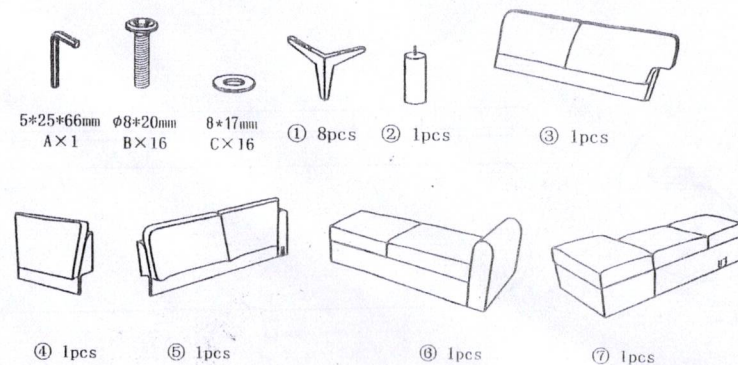


Step 2

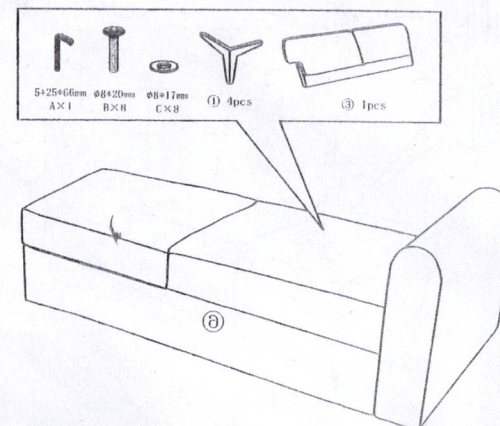


OPERATING YOUR UNIT



Step 3

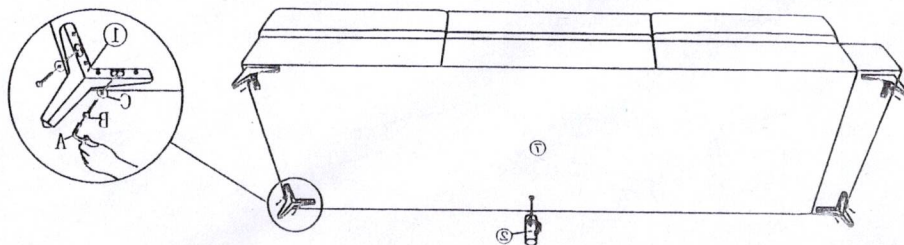

Step 4

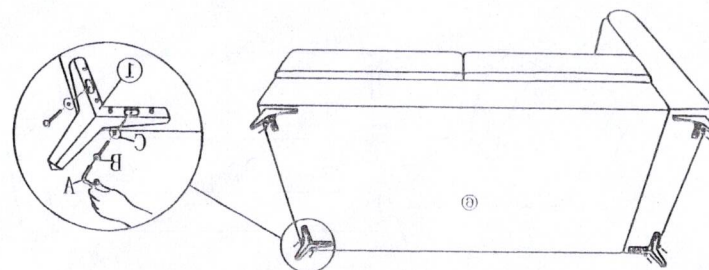


Step 5

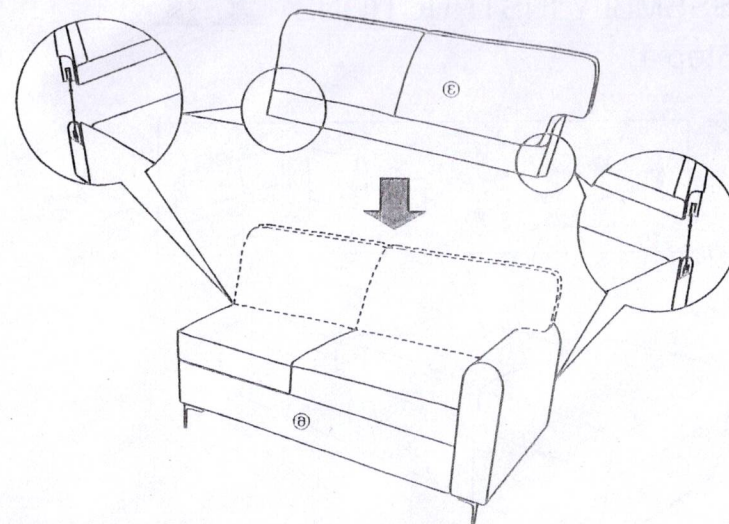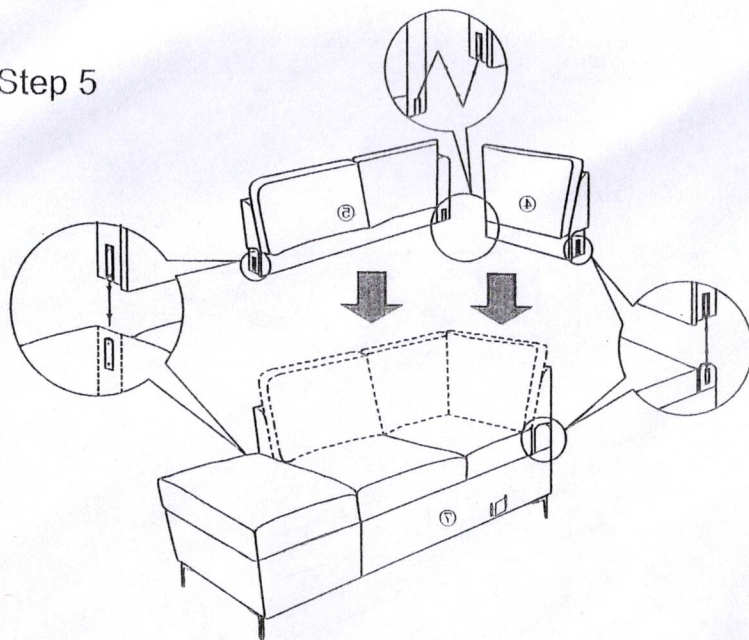

OPERATING YOUR UNIT

Step 7

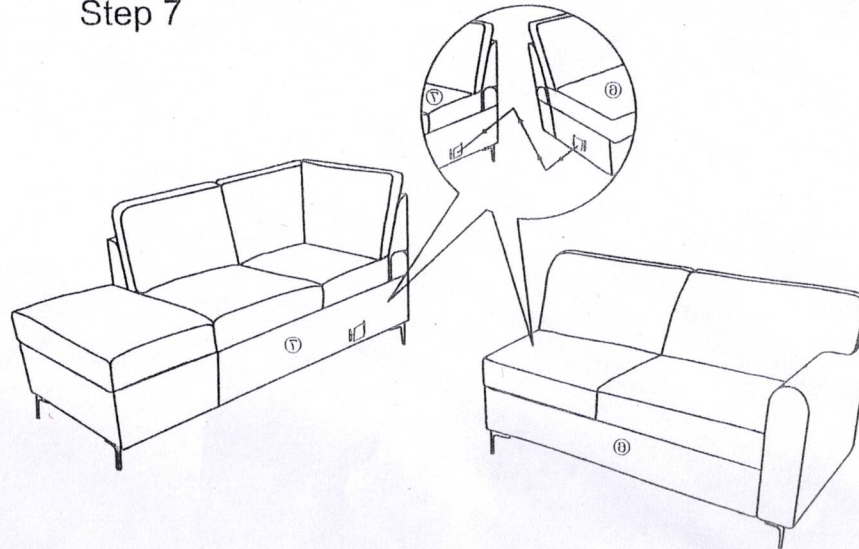

Step 8

