

AKAVEE

CAPSULE COFFEE MACHINE

INSTRUCTION MANUAL



Model: AKV-CCM2117

Read this manual thoroughly before using and save it for future reference

ADDRESS: L6150, 16TH FLOOR, NO. 117 XING GUANG TING, JINGSHUI YIN ROAD, YUEXIU DISTRICT, 510030 GUANGZHOU

IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed, including the following:

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plug or unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cooling before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. The use of accessory not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
9. Do not let cord hang over edge of table or counter, or touch hot surface.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Only fill the tank with clean and cold water. Never fill the tank with mineral water, milk or other liquids.
12. Do not let the coffee maker operate without water.
13. Never insert finger into the capsule holder to avoid nipping finger.
14. There is extremely hot water in the capsule holder during the brewing process. To avoid risk of injury, do not lift the brew handle during brewing process.
15. To disconnect, remove plug from wall outlet. Always hold the plug. But never pull the cord.
16. Some parts of appliance are hot when operated, so do not touch with hand. Use handles or knobs only.
17. Appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or

instruction concerning use of the appliance in a safe way and understand the hazards involved.

18. Children should be supervised to ensure that they do not play with the appliance.

19. Cleaning and user maintenance shall not be made by children without supervision.

20. The appliance must not be immersed.


21. Do not use outdoors.

22. This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments.

23. Save these instructions.

KNOW YOUR CAPSULE COFFEE MAKER

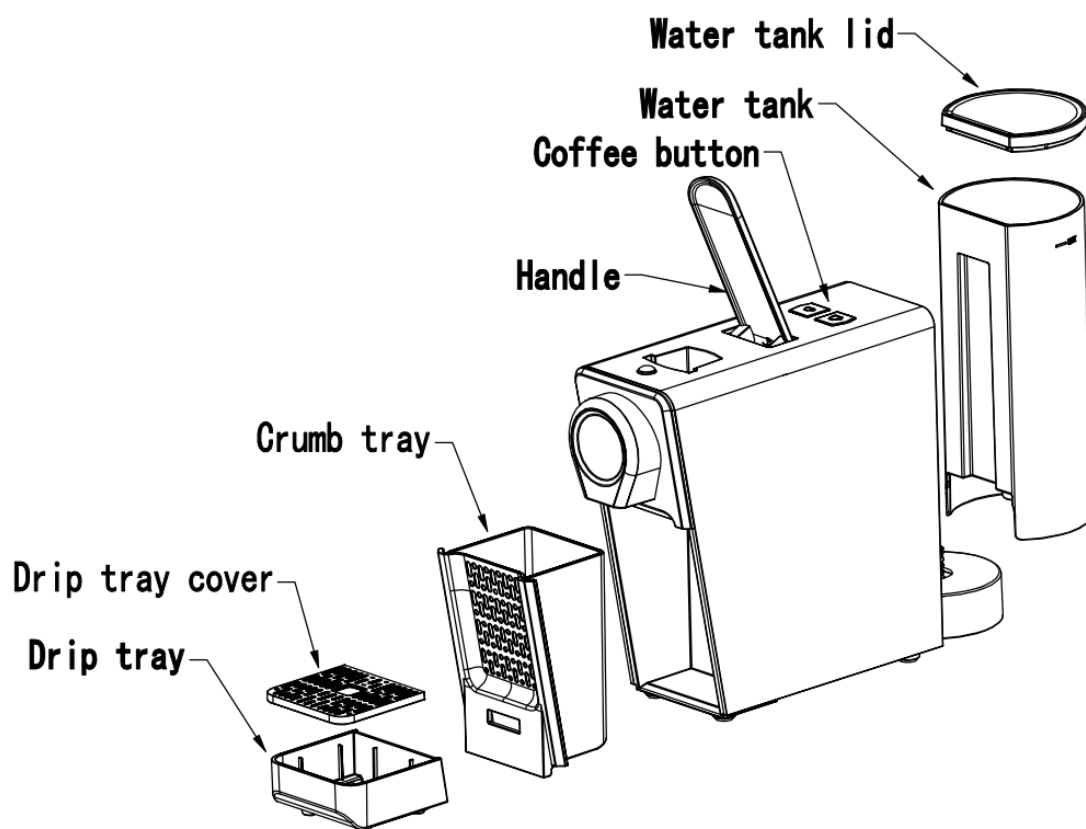

PRODUCT SPECIFICATION

Rated Voltage: AC 220V-240V	Water Tank Capacity: 0.6L
Rated Frequency: 50-60Hz	Coffee Temperature: 72-86
Rated Power: 1215-1545W	Boiler: 230V 1350W

OPERATION INSTRUCTION

1. Power-On Preheating Procedure

A. Connect the appliance to a power supply with the rated voltage and frequency (AC 220-240V 50Hz).

B. The appliance will then enter the preheating mode. During preheating, the indicators of Small cup and Large cup buttons will simultaneously flash (ON/OFF= 0.5S/0.5S) at a frequency of 1Hz. When the indicators of Small cup and Large cup buttons simultaneously illuminate solidly, the preheating is completed and then the appliance can be operated normally. The coffee brewing function cannot be operated during the preheating process.

2. Standby Mode Procedure

The appliance will enter the standby mode after the preheating is completed, or after a function is completed or canceled. In standby mode, the indicators of Small cup and Large cup buttons illuminate solidly. If no operation is performed for 4 minutes in standby mode, the appliance will enter the sleep mode.

FOR THE FIRST USE

Check and ensure all accessories are complete and undamaged. Fill the water tank with water, making sure the handle is properly closed. Place a container on the cup holder, connect the appliance with power source, press the Large cup or Small cup coffee button, and the indicator of the selected coffee button starts to flash. When the indicators of Small cup and Large cup buttons simultaneously illuminate solidly, the preheating is completed. Then press the Large cup or Small cup coffee button. After a while, coffee dispenses from the spout. Once the desired amount is reached, the appliance will stop dispensing coffee. Then remove the coffee container and rinse all removable parts with warm water.

NOTE: When pressing the Large cup or Small cup coffee button, the appliance will produce a pumping sound, which indicates that the appliance is pumping water to brew coffee. This is normal.

HOW TO USE

1. Assemble all removable accessories.
2. Fill the water tank with drinking water, ensuring the water level is above the Min mark but not exceeding the Max mark.
3. Connect the appliance with power source. Press the Large cup or Small cup coffee button, the indicator of the selected coffee button starts flashing, and the appliance begins preheating.
4. Open the handle, insert a coffee capsule, and push the handle until it is closed.

CAUTION: This appliance is designed to be used only with Nespresso and Donlim capsules.

CAUTION: Do not open the handle during brewing, as the coffee capsule will be ejected into the capsule collection tray.

CAUTION: Do not open the handle during brewing to avoid splashing hot water and causing burns.

5. Ensure the drip tray and cup holder are properly installed, then place the container on the cup holder.
6. When the indicators of Large cup and Small cup coffee button illuminate solidly, the preheating is completed and the coffee maker is ready for brewing coffee with the default settings.
7. Press the Large cup or Small cup button according to your needs, its corresponding indicator will light up. After a while, coffee dispenses from the spout. Once the desired amount is reached, the appliance will stop dispensing coffee, and the corresponding indicator will illuminate solidly.
8. After the coffee brewing is completed, open the handle, and the used capsule will be automatically ejected into the capsule collection tray.
9. If you wish to adjust the coffee volume for the small cup and large cup, follow these steps:

Manual Adjustment for Small Cup Volume

When preheating is completed, press and hold the Small cup coffee button for 2 seconds

without releasing it to enter the small cup volume adjustment mode (the indicator of the small cup flashes):

The machine starts dispensing coffee for the small cup. If the customized time exceeds the specified limit or you release the Small cup coffee button midway, the coffee machine will stop working. At that time, the indicators of the small cup and the large cup illuminate solidly, the coffee machine enters the setting mode and saves the latest brewing time. If the customized time is longer than the specified limit, the maximum specified time will be saved; if the customized time is shorter than the specified limit, the minimum specified time will be saved.

Manual Adjustment for Large Cup Volume

When preheating is completed, press and hold the Large cup coffee button for 2 seconds without releasing it to enter the large cup volume adjustment mode (the indicator of the large cup flashes):

The machine starts dispensing coffee for the Large cup. If the customized time exceeds the specified limit or you release the large cup coffee button midway, the coffee machine will stop working. At that time, the indicators of the small cup and the large cup illuminate solidly, the coffee machine enters the setting mode and saves the latest brewing time. If the customized time is longer than the specified limit, the maximum specified time will be saved; if the customized time is shorter than the specified limit, the minimum specified time will be saved.

10. After adjusting the coffee volume, if you wish to restore factory settings, simultaneously hold and press the Large cup and Small cup coffee button for 2 seconds, the indicators of Large cup and Small cup coffee button will flash slowly for 3 seconds, indicating that factory settings have been restored and the default coffee volumes have been reset. The coffee maker will then be in normal operation mode.

NOTES:

- (1) Coffee can only be brewed after the preheating is completed.
- (2) If no operation is performed within 4 minutes after the indicator of the selected coffee button illuminating solidly, the appliance will enter the standby mode.
- (3) During brewing, the process can be interrupted by pressing the selected coffee button once. To resume, simply press the button again.

CAUTIONS:

- (1) Do not open the handle during the brewing cycle.
- (2) Do not open the handle immediately after brewing, wait for 5 seconds before opening.
- (3) To brew another cup of coffee, continue with a new capsule.
- (4) When not in use, be sure to turn off the coffee maker and disconnect the power.
- (5) After 15 minutes of continuous operation, the appliance should be forced to rest for 5 minutes.

CLEANING AND MAINTENANCE

Before cleaning, unplug the appliance and allow it to cool completely. Do not immerse the appliance, power cord, or plug in water or other liquids to avoid fire, electric shock, or personal injury. After each use, ensure the power plug is disconnected. Clean regularly by following the steps below:


1. Clean the removable water tank with a dry cloth.
2. Empty and clean the capsule collection tray.
3. Clean the capsule brewing unit with a dry cloth.
4. Wipe the cup holder with a damp cloth.
5. Clean the appliance with a damp cloth; do not immerse the appliance in water.
6. Reassemble all components for next use.

NOTE: Before cleaning, brew a cycle with plain water to clean the internal pipes of the appliance, then disconnect the power plug and allow the appliance to cool.

TROUBLESHOOTING

Problem	Solution
No display.	Check whether the power plug is fully inserted and whether the Large cup or Small cup coffee button has been pressed.
The appliance makes a strange noise.	Check for the water in the water tank.
The indicator illuminates but no coffee comes out.	Possibly an incorrect capsule has been used. Wait a few seconds, then try again with a new capsule.
There is water stains at the bottom of appliance.	Make sure the water tank is installed correctly.
The capsule collection tray cannot be placed inside the appliance.	Check whether the handle is fully opened. The handle needs to be opened before inserting the capsule collection tray.
A slight hiss can be heard after the coffee is dispensed.	This is not a fault and it is produced by the pressure control valve.

ENVIRONMENT FRIENDLY DISPOSAL

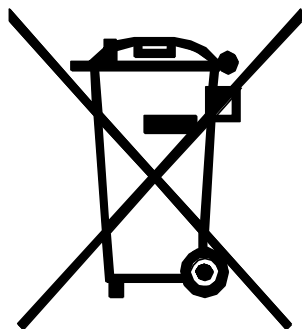

You can help protect the environment!

Please remember to respect the local regulations:

hand in the non-working electrical equipment to an appropriate waste disposal center.