 


# AKAVEE

## Instruction Manual for Toaster Oven

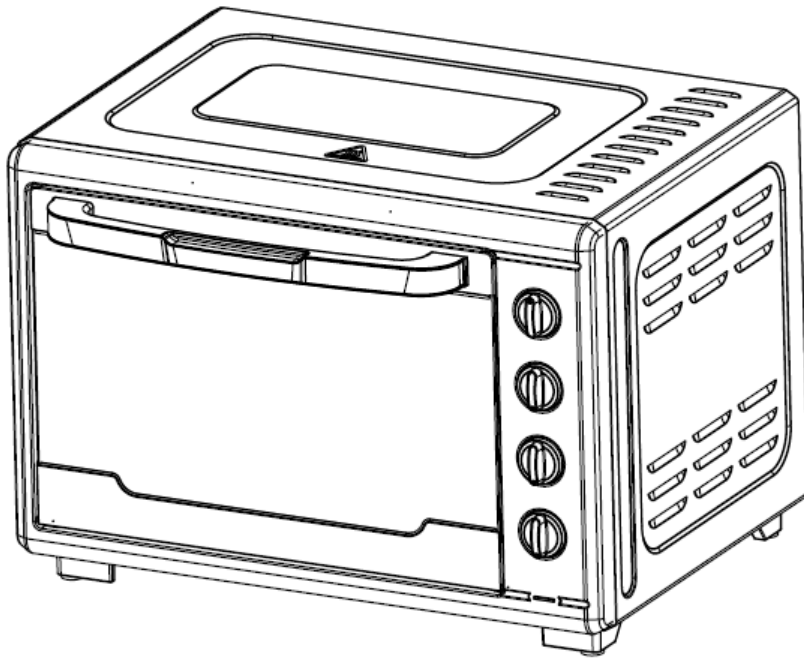

Model: AKV-TO8709-CE

*Read this booklet thoroughly before using and save it for future reference.*


## **IMPORTANT SAFEGUARDS**

Before using the appliance, basic safety precautions should always be read and followed, including the following:

1. Make sure the volts of electric power is the same as the rated label requirement before use.
2. If power cord or plug is damaged, or appliance is malfunction, or other damage on the appliance, stop use it, and send it to the nearest authorized service center for test, repair or replace; Do not replace the damaged part by unauthorized person in order to prevent dangerous situations.
3. Do not let the appliance be unattended when in operation.
4. Close supervision is always necessary when this appliance is used near children; This appliance is not for use by children.
5. Do not immerse the oven in water or other liquids to prevent from risk of electrical shock.
6. Do not use this appliance for other than its intended use.
7. Always unplug from outlet prior to handling or cleaning,
8. Always use heat resistant gloves to take baking pan in hot toaster oven.
9. Do not let the cord dangle over the edge of a tabletop or countertop or touch hot surfaces
10. Do not touch hot surfaces during working in prevent from being scalded,always use handles or knobs.
11. Do no use attachments not recommended by manufacturer; they may cause fire, electrical shock or personal injury,
12. Do not place the appliance near electrical burner, gas stove or other heated oven in order to avoid fire risk.
13. Do not let the appliance near to the flammable materials such as curtains, or store any items on top of appliance when in operation
14. Make sure to remove all the paper, cardboard or electrical matter before baking food.
15. Do not cove tinfoil paper on the top of oven to avoid over heating
16. Oversized food must not placed in appliance as it may create or fire or risk of electric shock
17. Do not store any materials, especial papers, cardboard or plastic matters, in this units when not it use.
18. Make sure all the knobs are in off condition before disconnect the oven.



19. Appliances are not intended to be operated by means of an external timer or separate remote-control system
20. This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops offices and other working environments
  - farm houses
  - by clients in hotels motels and other residential type environments
  - bed and breakfast type environments
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
22. Children should be supervised to ensure that they do not play with the appliance.
23. The surfaces are liable to get hot during use. The temperature of the door or the outer surface may be high when the appliance is operating.



24. Symbol  means the surface was hot during the oven was working.
25. Save this instruction manual for future use.

**HOUSEHOLD USE ONLY**


# KNOW YOUR TOASTER OVEN

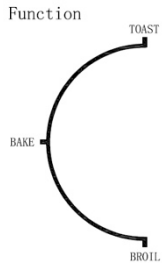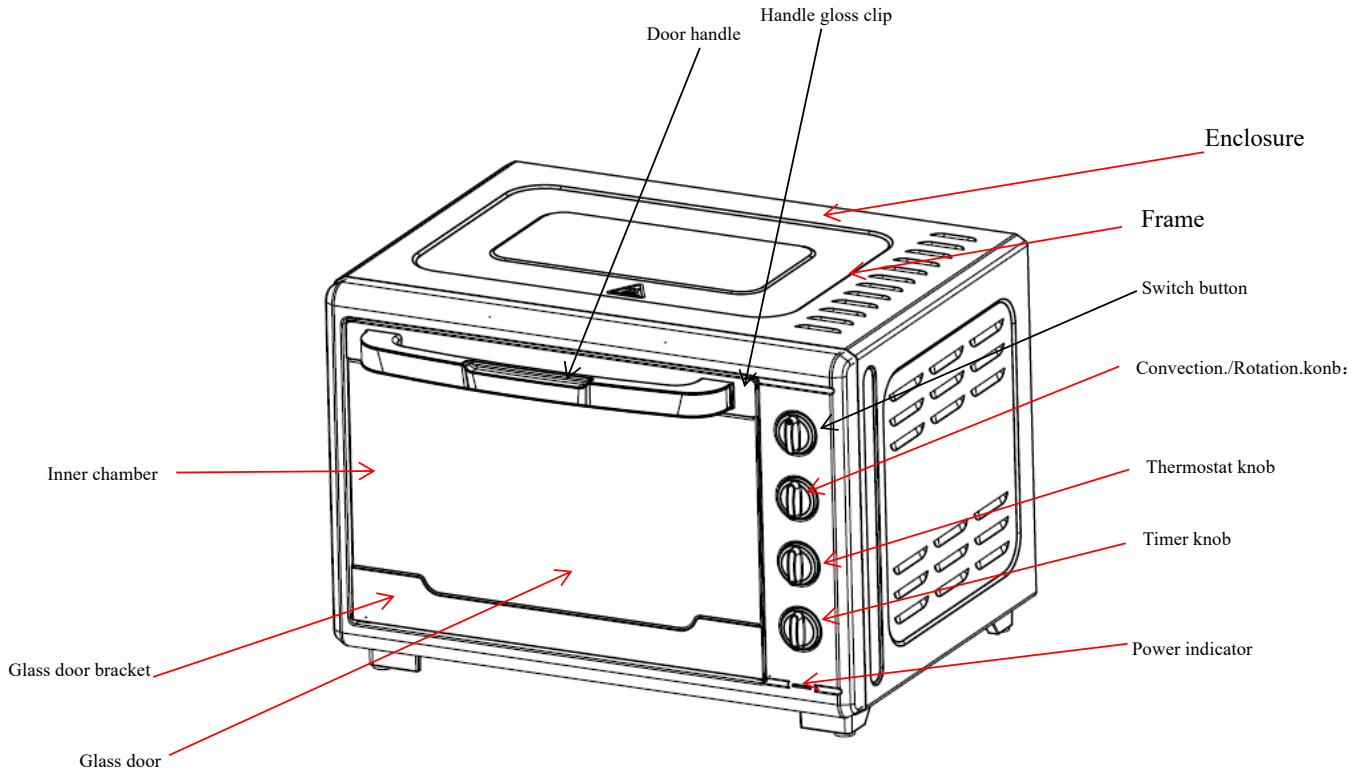


← Switch knob: turn it for controlling upper lower heater, lower heater



← Convection Rotation knob: turn it for controlling Rotation, Rotation+convection

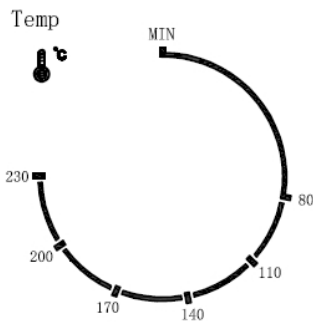

Thermostat knob: turn the knob, control chamber temperature from 80°C to be 230°C, turn is clockwise.

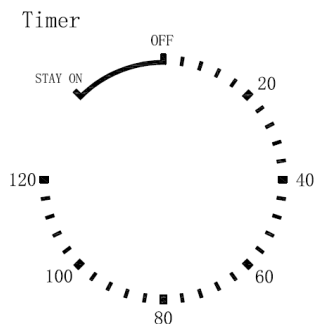

Time knob: turn the knob, set oven working time, max. period is 120minute

## BEFORE USING YOUR TOASTER OVEN

Take out all the packed materials before first use; Place the oven on a table with good ventilation; Do not make appliance close to wall or curtain; Take out bake pan and racks, placing them in the water solution with detergent, and then cleaning them in clean water, dry them thoroughly and place them back inside oven for use

Noted: 1. There will happen smelling and smoking during first use, which is normal condition, as there is protective film on heater to prevent heater being corroded during sea freight. Suggest to bake for 15 minutes to eliminate the smelling; Open door and window during first use to keep ventilation


2. Keep 3cm distance between food and upper heater to get even toasting effect
3. Bake pan and racks is pulled to clip on clip pad.
4. Always make crumb tray in right location before use
5. Take care to notice baking effect to avoid food being scorched
6. Four slots inside chamber at 4 different height for putting racks according to food size

and heating mode, so as to get best bake effect.

7. There are upper and lower heater mode, single upper heater mode, single lower heater mode.

Warning: wear recommended gloves to take food out when cooking is finished to avoid any scald.


## OPERATING INSTRUCTION

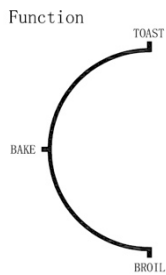


Input power of 230V/50HZ, turn switch knob to be at broil ,which control upper heater , with wattage of 1000W; Turn switch knob to be at bake , which controls upper and lower heater, with wattage of 2000W; Turn switch knob to be at toast , which controls upper and lower heater, with wattage of 2000W;



Turn the knob to be at roast ,which controls rotation; The settings controlled by this knob can be combined with the above switch knob, which can be freely chosen by users

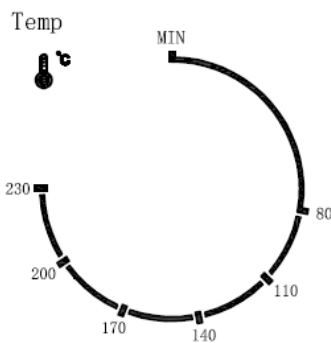

Thermostat knob is controlling chamber temperature, turn the knob clockwise, temperature can be changed form 80 degree to be 230 degree, and turning angle is 270 degree.

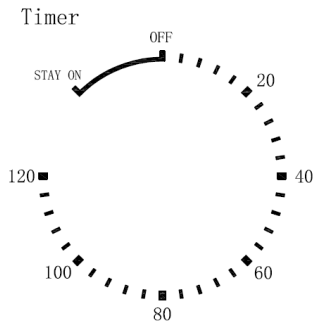

After user set all the functions according to above illustration, turn timer knob to make over to run, indicator lamp is on; The max default period is 120minutes, and user can set the working time at his own choice; Timer will be back to 0 after finish work, with a beep sound.

## TIPS OF USING

1. There may be moisture condensation on glass door and disappear a while later for baking food with moisture, which is normal condition.
2. Defrosted food needs to be baked immediately after defrost.
3. Frozen food or lean meat requires longer baking time
4. Put the food on baking pan when freezing.
5. Do not open glass door frequently in order to avoid reducing heat.
6. Toast shade need to be set darker than proper quantity of bread if baking frozen bread or bread with many pieces.
7. There may be smoking during baking, reduce extra fat to avoid smoke happening.

## CLEAN&MAINTENANCE

Warning: unplug the unit and make it completely cool down before cleaning.

1. Use soft detergent to clean all accessory parts
2. Use soft cloth to clean inner chamber regularly
3. Clean the oven door by cloth soaking with warm detergent or soaking solution.
4. Do not immerse toaster oven in water for cleaning
5. Do not clean any accessory parts by dish washer
6. Do not wipe appliance by the abrasive cleaning tool.
7. Clean accessory part by the soft cloth soaking with detergent or warm soap solution.
8. Do not wipe heater.
9. Do not put baking rack or baking pan directly on lower heater

10. Do not wipe housing surface by pad with metallic matter to reduce abrasion on the polish.

## WARNING

Remove all the extra food before baking in order to prevent damaging oven bottom panel.

**Do not open glass door during working, do not put baking pan(or other accessory parts )directly on lower heater.**

## HELPFUL TIPS

Item	Existing Problem	Solution
1	Smoking during baking	There is smelling and smoking during first use, which is normal condition, as there is protective film on heater to prevent heater being corroded during sea freight.
		Smoking during baking is because bake pan or inner chamber is dirty
		Remove extra fat before baking to reduce smoking
		Stop use and unplug the machine if power cord is getting on fire
2	Rack is jamming, door is not open freely	Pull off rack and clean rack slot inside chamber, check if rack is deformed
3	Toast shade is dark and smoking, or toasting shade is too light	Set proper toast shade setting, and check if rack is put in right location.

## ENVIRONMENT FRIENDLY DISPOSAL



**You can help protect the environment!  
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal**