




1. Install 6 on the 1, and then use 3, 4 to connect the ,2 and 3 to the 1. Install 7 on the bottom of the 2 and 3.

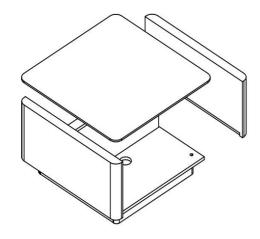


2. Use ③,④,⑤ to connect the 1 to the 4, 6. The 6 uses ② to fix the ⑩-A to the reserved hole of the 6 first.

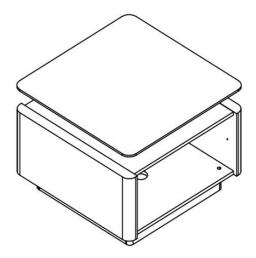


3. Evenly paste ① on the 5,then place the 12.

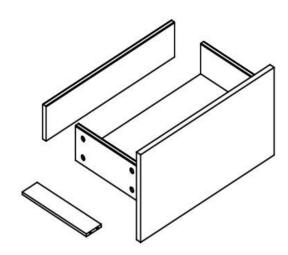

4. Use ③,④,⑤ to connect and fix the 7, 8, 9, and insert the 11, and then lock the 10. Install the ⑩-B at the reserved hole on the outside of the d9 using ②, put the drawer into the cabinet.

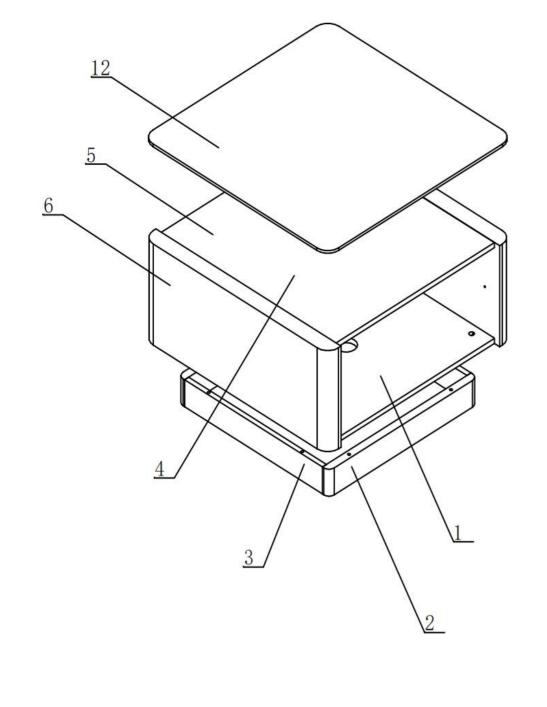

Itme	Name	Spec.	Qty
1	Base plate	607*658*15	1
2	Front feet	560*70*25	2
3	Side feet	519*70*15	2
4	vertical plate	597*208*15	1
5	Top Plate	597*658*15	1
6	Side plate	697*240*50	2
7	Drawer surface	593*237*18	2
8	Drawer bottom reinforcing ba	285*66*9	2
9	Drawer side	285*118*15	4
10	Drawer end	571*118*15	2
11	Drawer bottom	551*295*5	2
12	Sintered stone	700*700*8	1

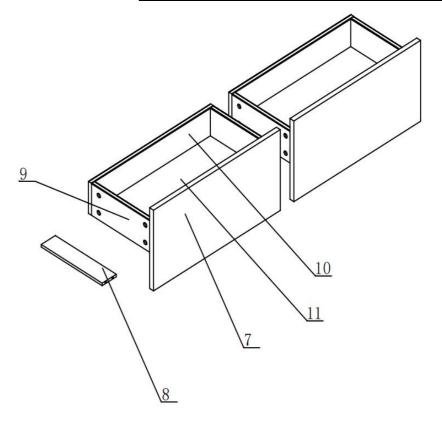

Hardware List

No.	Name	Picture	Qty.	No.	Name	Picture	Qty.	No.	Name	Picture	Qty.
1	Transparent self- adhesive pad		7	7	Foot stud	-0)	9				
2	φ4*14 self-tapping screw	W _B	17	8	Furniture sticker		9				
3	tapping buckle bar		41	9	Screwdriver		1				
4	buckle wheel	×	41	10	Sliding rail	A B	2				
(5)	Wood tip		17								
6	Air hole		2								