



Base Corner cabinet

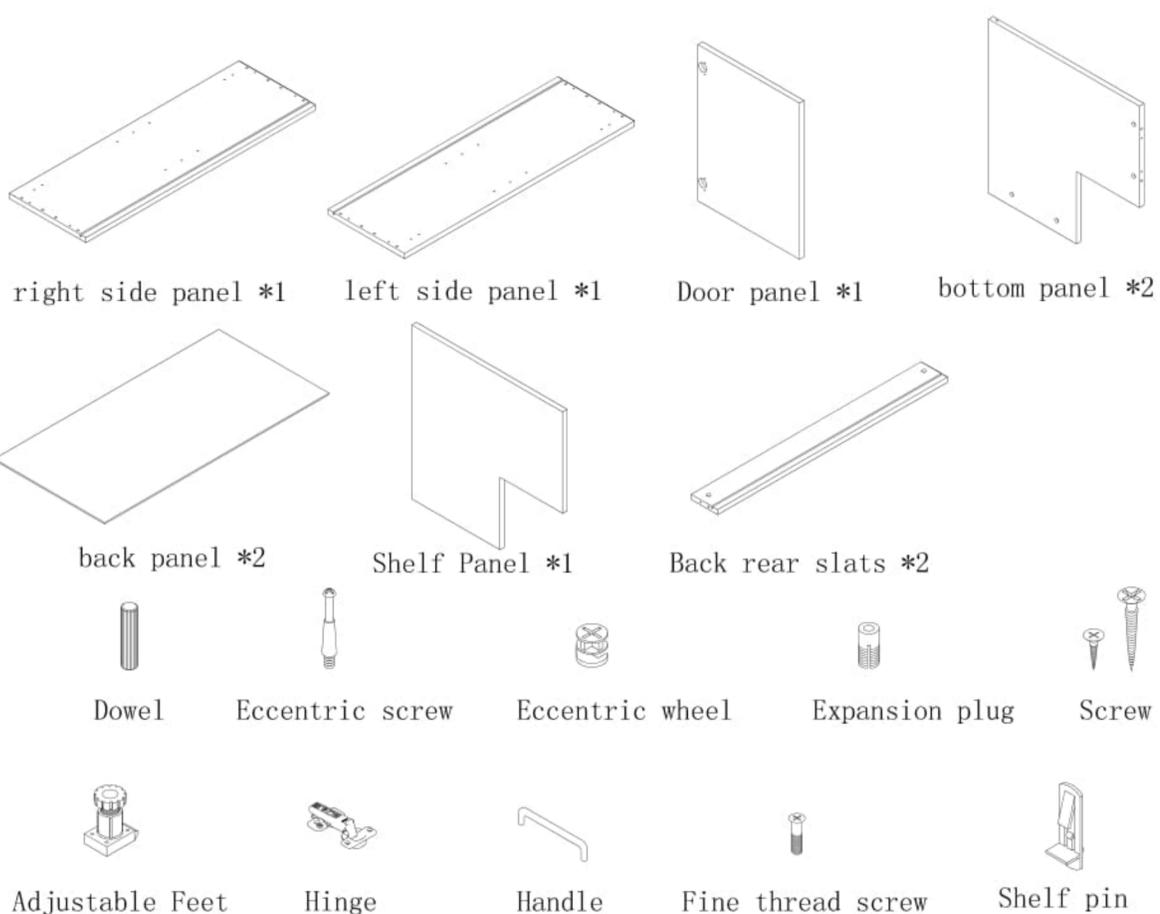


1

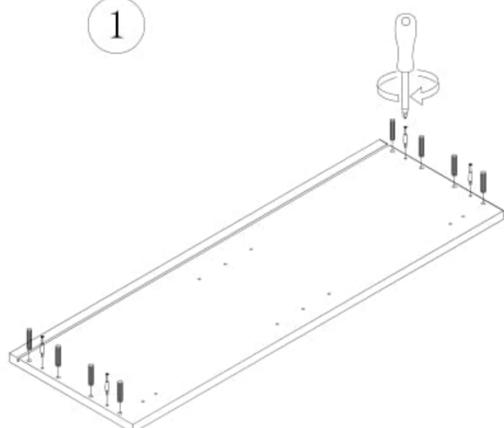


Install wood dowels and screws on the left and right side panels

2

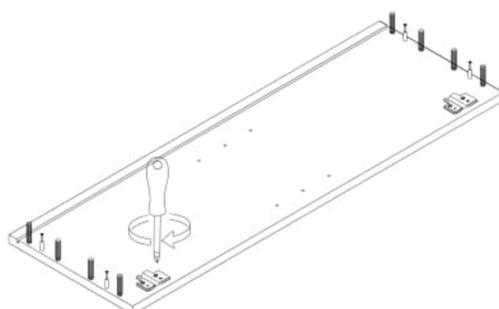


Fixed wood tenon and screw, fixed hinge base

3

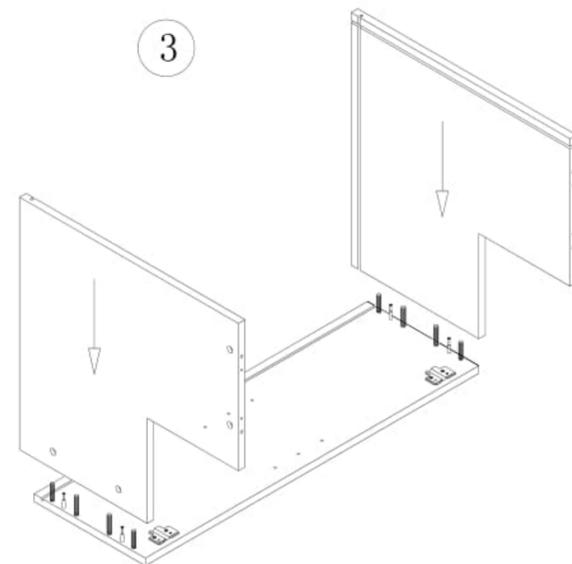


Place the bottom panel

4

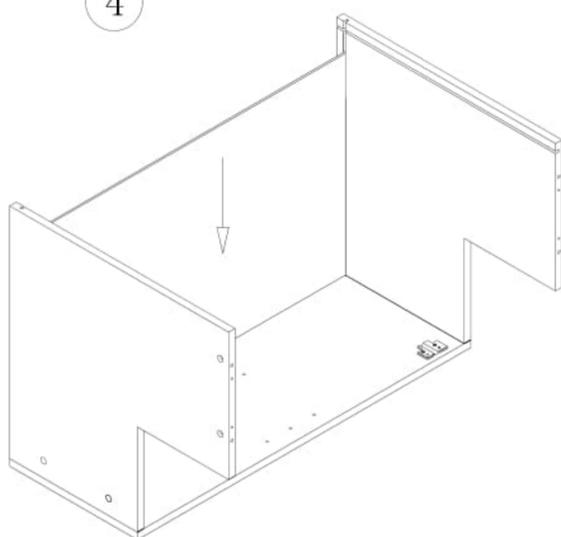


Place the Rear slats

5

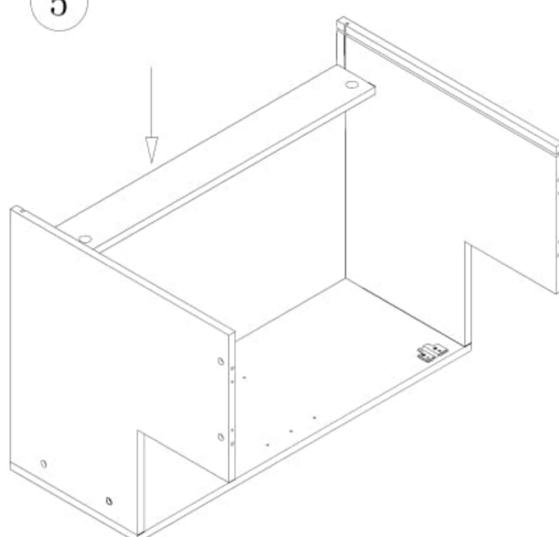


6

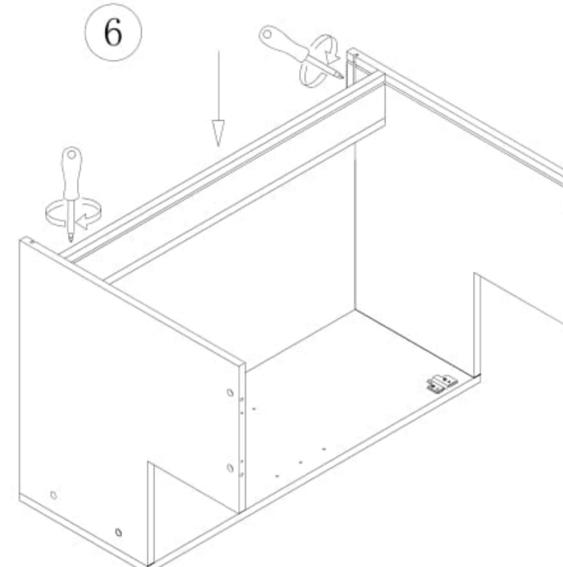


Place and fix the connection

7

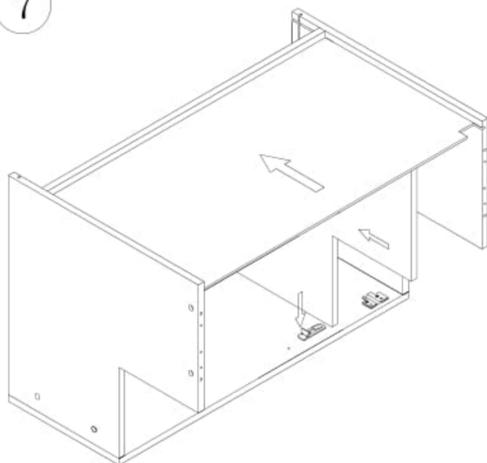


Place the back panel
Place the shelf support.
Place the shelf Panel.

8

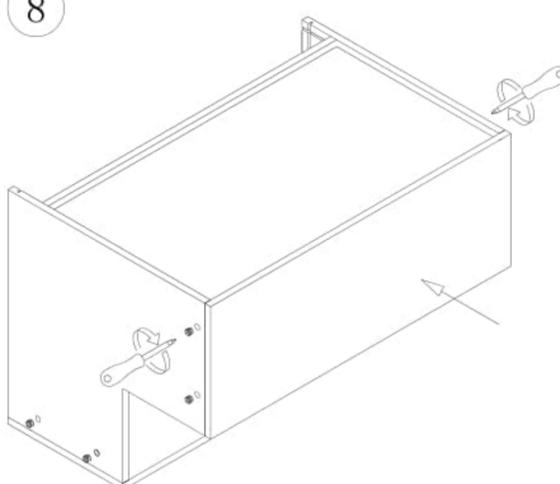


Place and fix the connection

9

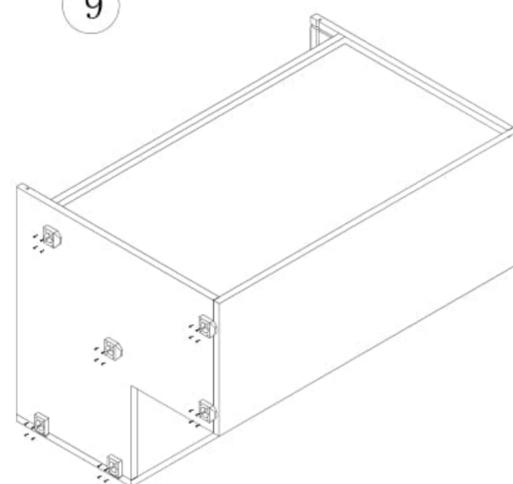


Install the adjustable feet base

10

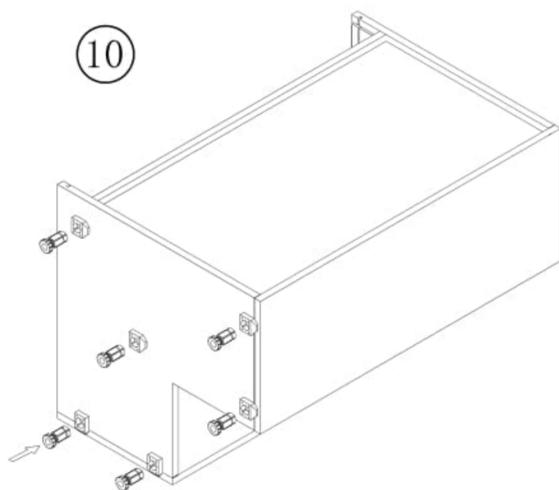


Install the adjustable feet

11

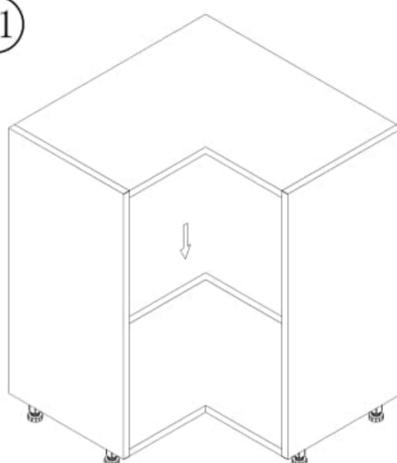


Place the shelf on the shelf support.
Finish the carcass assembly

12

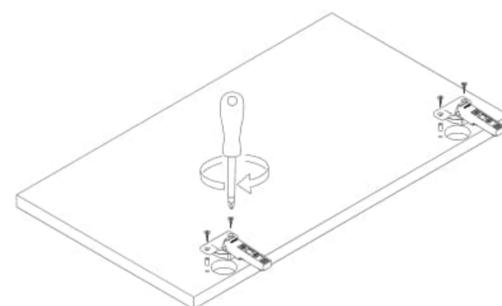


Place the Anti-collision particle

13

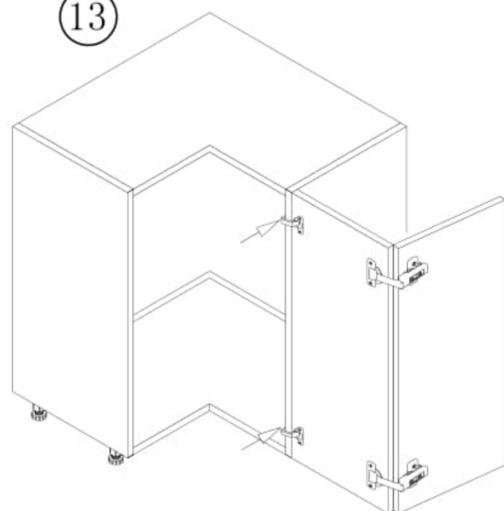

Install the door, fix the hinge into
hinge base

14

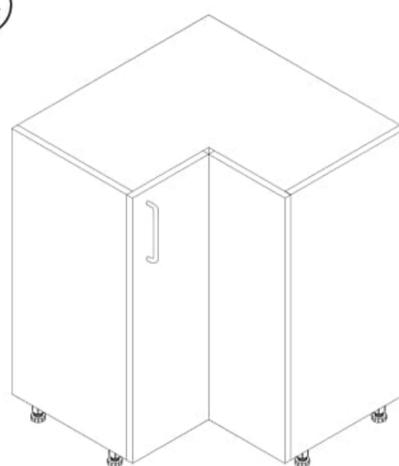

Fix the handle, End of the assembly