

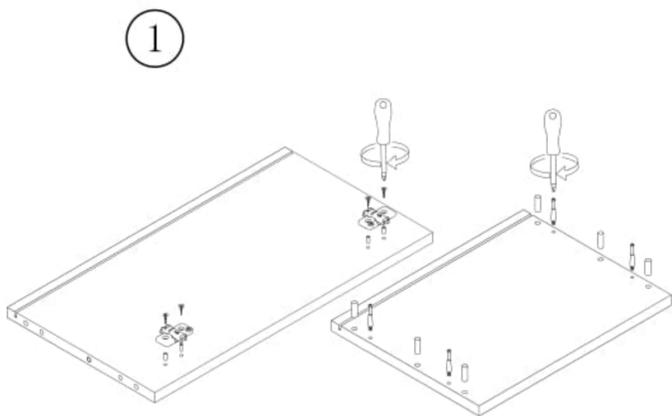



上翻门吊柜

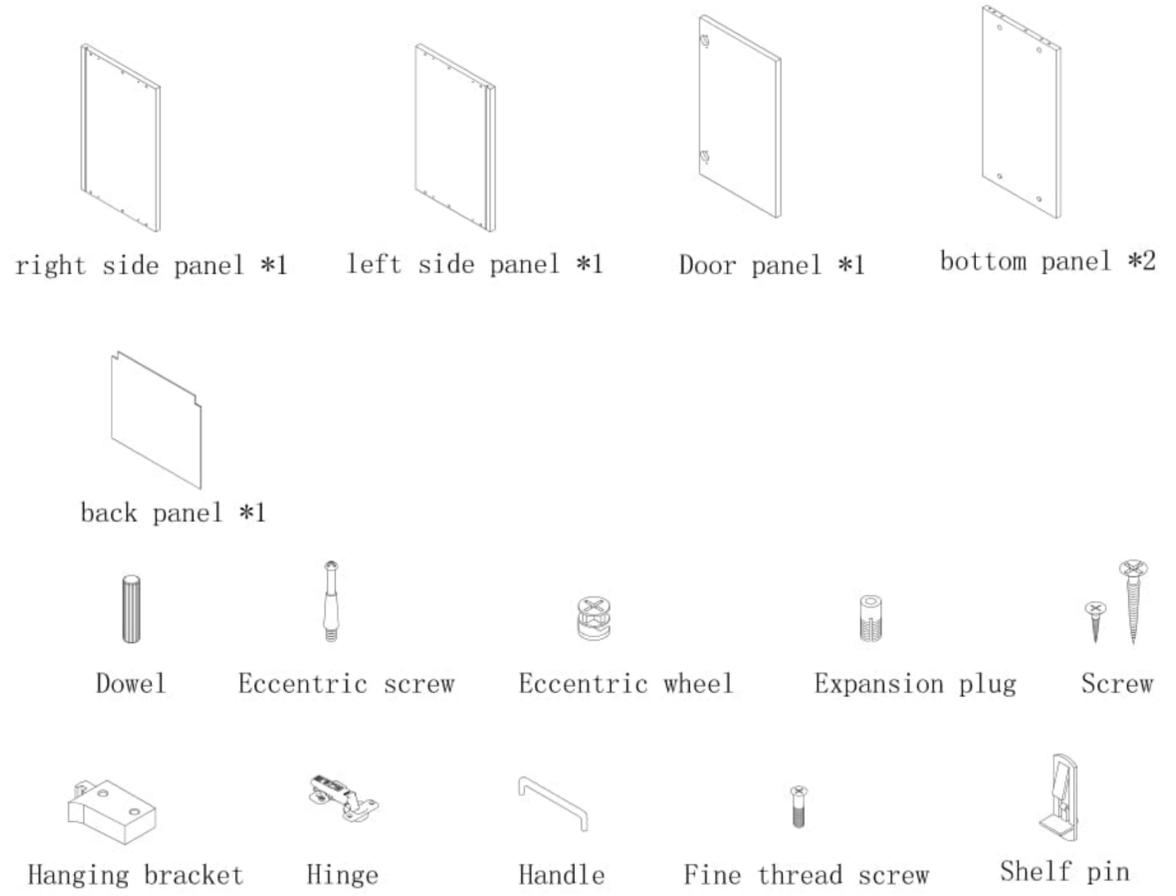


① Install wood dowels and screws on the left and right side panels
Fixed wood tenon and screw, fixed hinge base

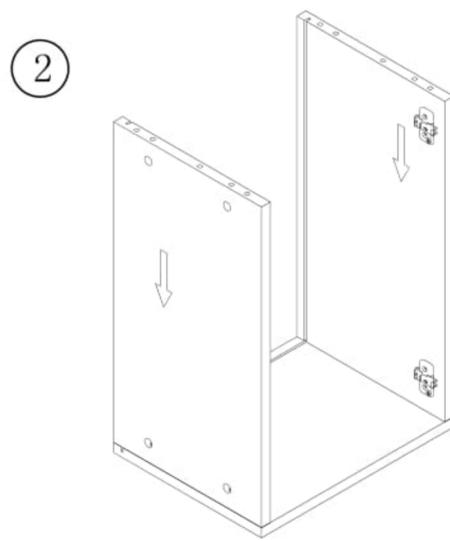


② Place the bottom panel and Rear slats

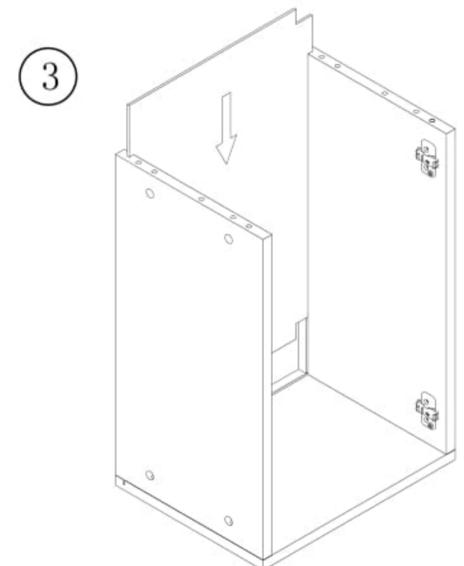


③ Place the back panel

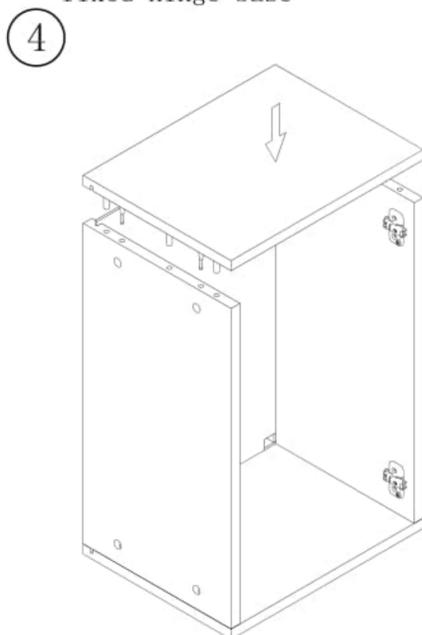

④ place the side panel

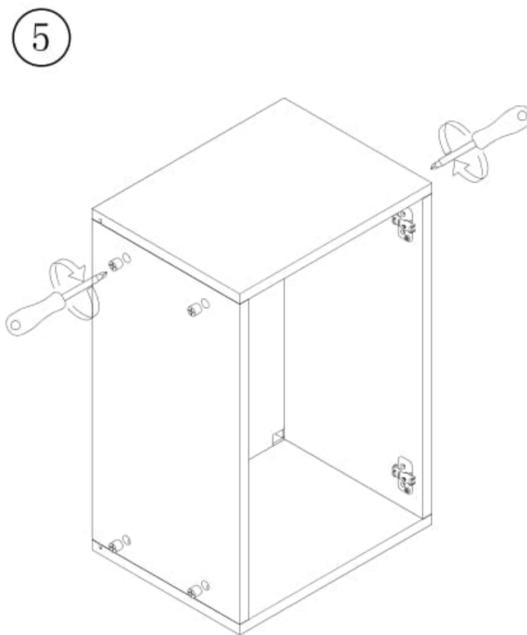


⑤ Place and fix the connection

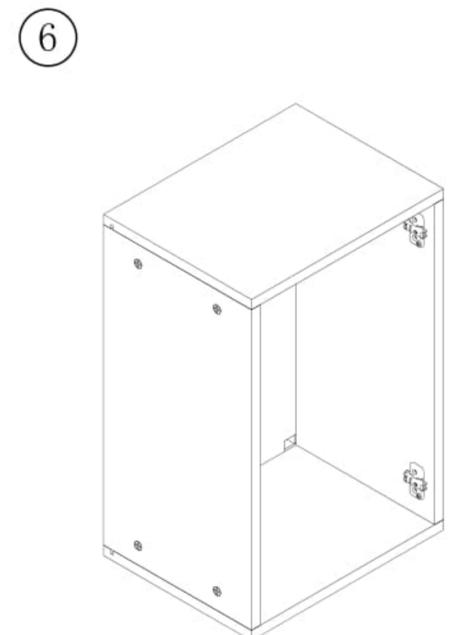


⑥ Finish the carcass assembly

⑦

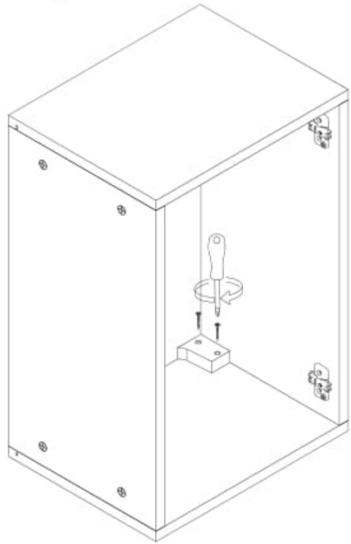


Install the hanging bracket,

⑧

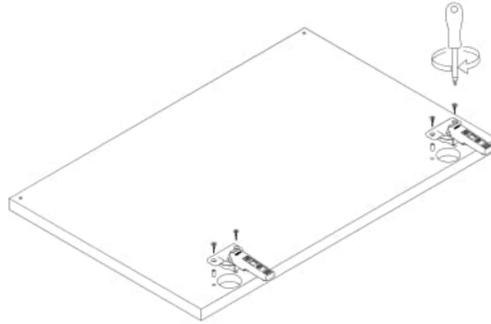


Place the Anti-collision particle

⑨

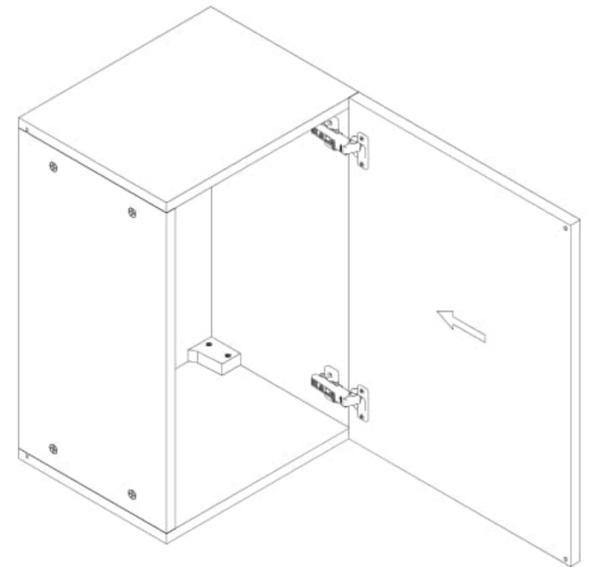


Install the door, fix the hinge into hinge base

⑩

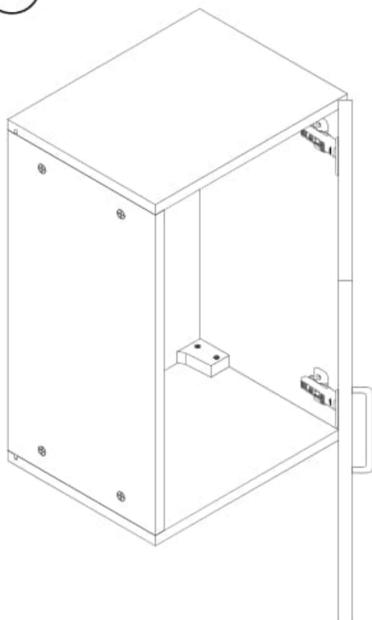


Fix the handle, End of the assembly

⑪

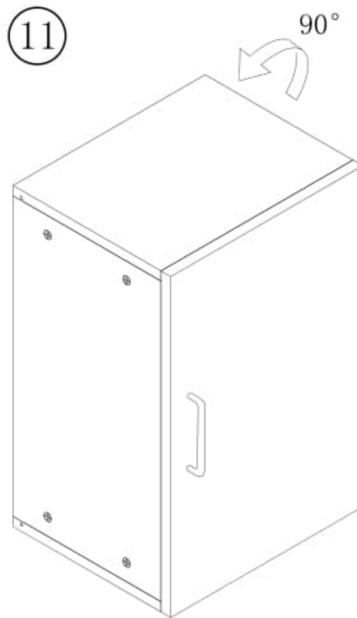

Turn over the cabinet by 90°

⑫

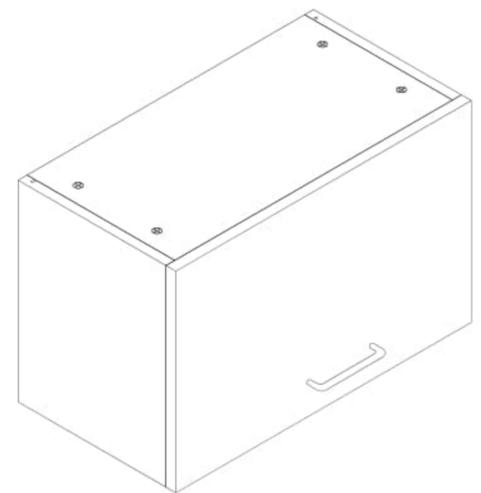

End of the assembly


Mount the cabinets to the wall by hanger process

Steps:

- 1、 Confirm the hanger line on the wall (60mm below the top of the wall cabinet, 20mm within the side panel of the wall cabinet, match the drawing No.1)
- 2、 drill the hole on the wall, place the wall expand plug with 5mm*40mm screw, install the wall hanger on the wall, one wall cabinet need 2 wall hanger. match the drawing No.2)
- 3、 Hang the assembled wall cabinet on the wall hanger ,Please proceed with this step carefully.
- 4、 adjust and tighten the screw of the wall cabinets' suspension fittings, like drawing No.3; make sure the carcass is flush with the wall.

Note:


- 1、 Double the wall's situation such as electric wires and water pipes before drill the hanger hole. Use the Glass hole opener drill the hanger hole if need.
- 2、 The drill line must be flush with the ground,
- 3、 After the installation of a single wall cabinet, it can be fixed with glue to prevent shaking.

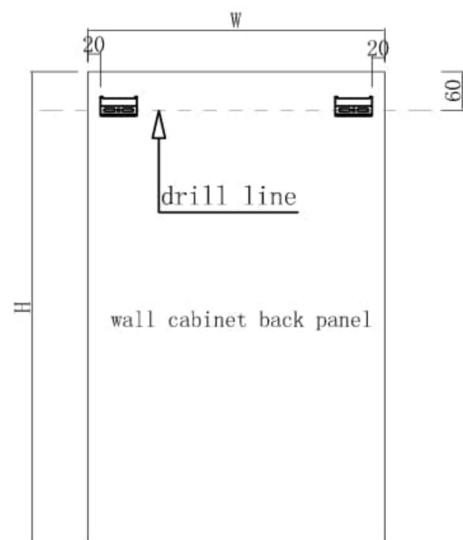

No, 1



No, 2

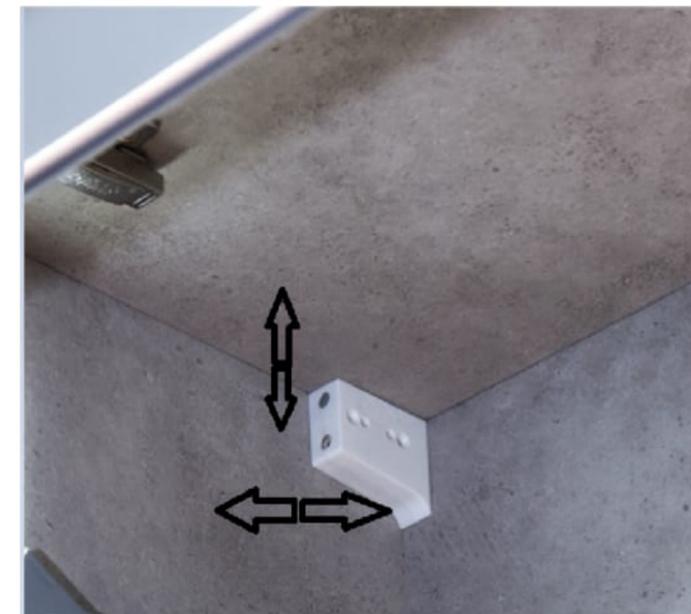

No, 3